

NDR Series 레이아웃 추가 방법

NDR7416 NDR7932 NDR7416S NDR7932S

Easy Manual

작성일 : 2016년 3월 28일



1. 목적

본 문서는 NDR7416, NDR7932 제품의 레이아웃 추가 방법을 안내하는 문서 입니다.

2. 확인 방법 첫번쨰

1. 모니터화면 왼쪽 상단 '시스템'을 클릭합니다.

사 법(T) 제거(R)		:	Uve 1	×
제장(E) 인쇄(P)	Ctrl+E Ctrl+P			
환경실행(F) (REX 실행 (REX 사용관 원 (REX CHRM 실 (REX CHRM E	的)) (1) (1) (1)			
230(I)				
-	(all)			

3. 상단의 다섯가지 메뉴중 카메라 모양의 '장치'를 클릭합니다.

0 E E D			(P.
0.E	草金	部門	201
I Mar Alui≏	10.0 134 395 13072		OWNER
* 스트리밍 세용스	10.0.124.000.0000		OPDIE
Di Summin Service	10.0 174 199 11013		ON-LINE
· 모나터링 사태스			
E Monitaring Service	10.0.124 198 11004		DN-LINE

4. 왼쪽편 하위 메뉴중 '레이아웃'을 클릭후 하단의 +버튼을 클릭합니다.

🧭 iNEX 실징 - admin(127.0.0.1)							- ¤ ×
🗐 🧕	ð	Ľ					
🛓 ô 🖆					Ø.		
入苔	이름	日日	주소	장치 중류	설명	상태	
 ☞ 모든 장치 ■ 장치 그룹 ● 레이아운 ● 레이아운 순차 감시 ● 카메라 순차 감시 ■ 사용자 알람 인 ■ 앱 ● 브라우저 							
				장치가 없습니다.			
+ - 2	+ - 12		_	_	_	_	

5. '레이아웃 추가' 창이 나타나면 원하는 화면 분활을 설정을 합니다.

6. 설정이 완료되면 오른쪽 하단의 '확인 버튼을 클릭합니다.

레이아울 추가		x
08+	48 :	
0.공개 ● 비공개		소유지): edman
오. 제험 > 중 모든 장치 > 중 정치 그를 전체라 수치 관시	최근 변함: 🗰 분왕 444 🗡	