



DC-D Series

Installation Manual

DC-D1223F/DC-D1223FR

Powered by **Direct IP™**

Before reading this manual

This is a basic installation manual for use of an IDIS network camera. Users who are using this product for the first time, as well as users with experience using comparable products, must read this operation manual carefully before use and heed to the warnings and precautions contained herein while using the product. Safety warnings and precautions contained in this operation manual are intended to promote proper use of the product and thereby prevent accidents and property damage and must be followed at all times. Once you have read this operation manual, keep it at an easily accessible location for future reference.

-  The manufacturer will not be held responsible for any product damage resulting from the use of unauthorized parts and accessories or from the user's failure to comply with the instructions contained in this manual.
- The information in this document is believed to be accurate as of the date of publication. The manufacturer is not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.
- It is recommended that first-time users of this network camera and individuals who are not familiar with its use seek technical assistance from their retailer regarding product installation and use.
- If you need to disassemble the product for functionality expansion or repair purposes, you must contact your retailer and seek professional assistance.
- Both retailers and users should be aware that this product has been certified as being electromagnetically compatible for commercial use. If you have sold or purchased this product unintentionally, please replace with a consumer version.

Safety Symbols

Symbol	Type	Description
	Warning	An important instruction or set of important instructions that can lead to severe injury or even death if not followed.
	Caution	An instruction or set of instruction that can lead to personal injury and/or property damage if not followed.

In-Text

Symbol	Type	Description
	Caution	Important information concerning a specific function.
	Note	Useful information concerning a specific function.

Safety Precautions

WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Placing and Accessories

Do not place this equipment on a wall or ceiling that is not strong enough to sustain the camera. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

Do not place this equipment in an enclosed space. Sufficient ventilation is required to prevent an increase in ambient temperature which can cause malfunction or the risk of fire.

7. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company. You may want to install a UPS (Uninterruptible Power Supply) system for safe operation in order to prevent damage caused by an unexpected power stoppage. Any questions concerning UPS, consult your UPS retailer.

8. Power Cord

Operator or installer must remove power and TNT connections before handling the equipment.

9. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges. If thunder or lightning is common where the equipment is installed, use a surge protection device.

10. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

11. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

12. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

13. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or the plug has been damaged.
- B. If liquid is spilled, or objects have hit the equipment.
- C. If the equipment has been exposed to rain or water.
- D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- E. If the equipment has been dropped, or the cabinet damaged.
- F. When the equipment exhibits a distinct change in performance — this indicates a need for service.

14. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

15. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

16. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

17. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

18. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

Before reading this manual

Risk Group1	
	WARNING IR emitted from this product. Do not stare at operating lamp
<i>Product tested against IEC62471</i>	

Warning: This product emits infrared light. Do not look into the IR LED.

FCC Compliance Statement

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE. **WARNING:** CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product
(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Copyright

© 2014 IDIS Co., Ltd.

IDIS Co., Ltd. reserves all rights concerning this operation manual.

Use or duplication of this operation manual in part or whole without the prior consent of IDIS Co., Ltd. is strictly prohibited.

Contents of this operation manual are subject to change without prior notice for reasons such as functionality enhancements.

Registered Trademarks

IDIS is a registered trademark of IDIS Co., Ltd.

Other company and product names are registered trademarks of their respective owners.

This product contains software built partially on open-source content. Codes for the corresponding open-source content are available for download. For more information, refer to the software CD (OpenSourceGuide\OpenSourceGuide.pdf) or the open source guide accompanying this operation manual.

Table of Contents

1

Part 1 – Introduction.....	6
Product Features	6
Accessories.....	7
Overview	8
Dome Cover	8
Body.....	9
Factory Reset	10
I/O Device Port.....	11
Installation	13
Installation.....	13
Angle Adjustment.....	15
Focus/Zoom	16
Dimensions	16

2

Part 2 - Camera Connection	17
With DirectIP™ NVR-based Layout.....	17
With non DirectIP™ NVR-based Layout	18

3

Part 3 - Appendix.....	19
Troubleshooting	19
Specifications	20

Part 1 – Introduction

Product Features

DC-D1223F/ DC-D1223FR are IP-based network cameras that compress and transmit video over ethernet.

You can use the IDIS Discovery program to change network camera settings or the IDIS Solution Suite Compact program to manage multiple network cameras. In addition, the embedded web server (IDIS Web) lets you remotely view live video or scan recorded video using a web browser. In addition, you can use the IDIS Solution Suite Compact to manage network cameras and view/record video.

 In this operation manual, the term **Remote System** refers to the computer on which the remote program (IDIS Solution Suite Compact or IDIS Web) is running.

- Supports DirectIP mode working with a DirectIP™ NVR that allows users to simply set up all required configurations without a PC
- Supports ONVIF protocol (Core specification version 2.4.0, Profile S)
- Multi-streaming for high-resolution and high-quality video monitoring and simultaneous recording in real-time as well as flexible configurations for those
- Supports H.264 video compression and M-JPEG still image compression algorithms
- Supports 4-stage video compression rate and multiple compression resolutions
- Two-way audio communication support for remote audio dialog
- Video stream buffering to counter pre-/post-event buffering and network delays for improved network recording reliability
- Remote monitoring via web browser or remote software


- Automatic web casting code (HTML) generation
- Up to 10 simultaneous remote monitoring connections
- IP filtering, HTTPS, SSL, IEEE 802.1X, and configurable user authority levels for greater security
- Network bandwidth limitation and MAT features for more efficient use of network bandwidth
- Easy network access via UPnP (Universal Plug and Play) function and embedded mDNS (Multicast DNS) protocol
- Wide dynamic range compensation (Digital WDR) for improved video quality in high-contrast situations
- Slow shutter support for improved low-lighting video capture performance
- Day & Night feature (built-in IR cut filter changer)
- Quick and easy firmware upgrade over the network
- Redundant firmware and auto recovery features for improved system stability
- Network-based integrated management of multiple network cameras
- Multiple event detection modes: Alarm-in, motion detection, trip zone, audio detection, and tampering.
- Backup storage on a microSD card as a safeguard against data loss during network interruptions
- Supports 12 VDC and PoE (Power over Ethernet)
- Features a variable focus automatic iris (mega pixel lens)
- Video out feature (selectable NTSC/PAL)

 Remote monitoring and recording via multistreaming are available using the IDIS Solution Suite Compact program. For more information on using IDIS Solution Suite Compact, refer to its **operation manual**.

 There is a limit to the number of users allowed to connect remotely via the Internet at the same time.

Accessories

Upon purchasing the product, check inside the box to make sure all the following accessories are included. External appearances and colors of the accessories may vary depending on the model.

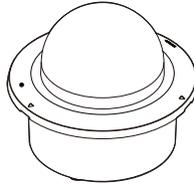


Network Camera



Open Source Guide



Quick Guide

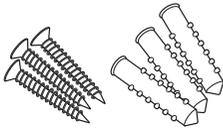


Screws (3 ea.)



Cable Access Hole Rubber


Overview

✓ Product color and design may vary depending on the model.

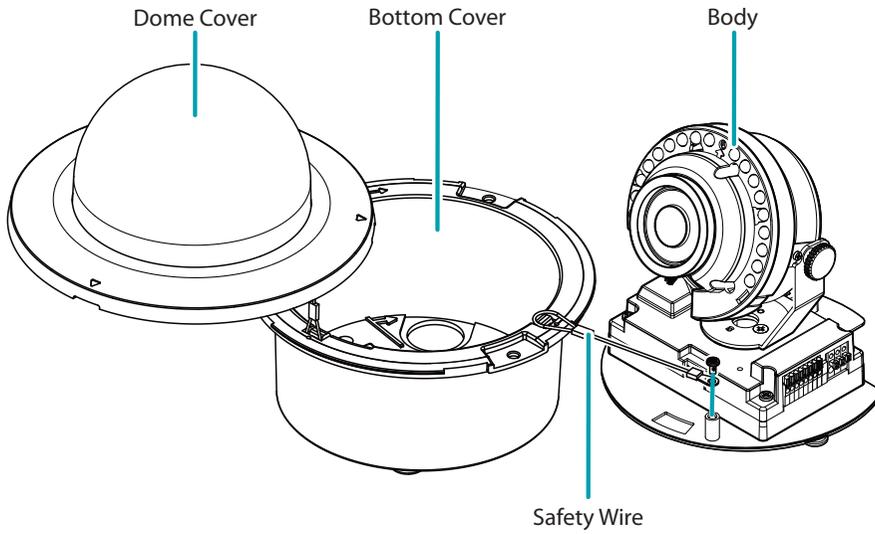


Dome Cover

Bottom

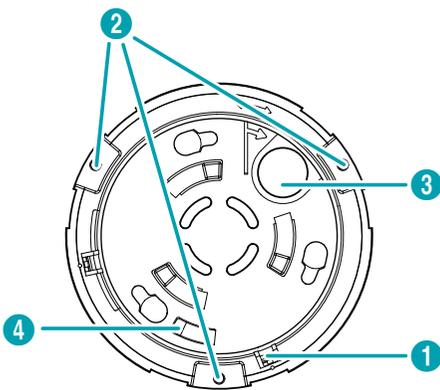


Top

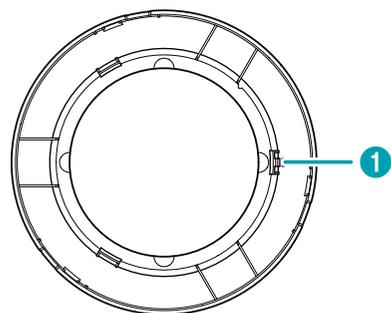


1	Safety Wire Hook
2	Ceiling Installation Hole
3	Cable Access Hole
4	Body Hook

Body

DC-D1223FR

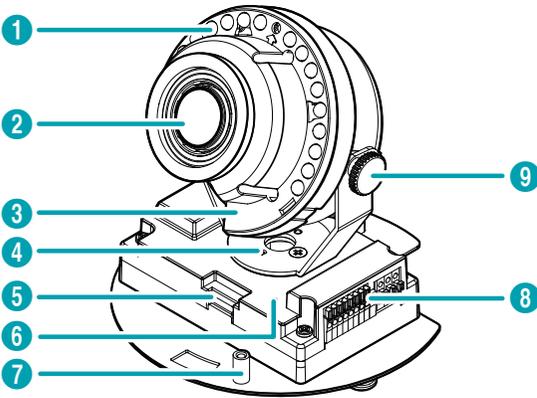

DC-D1223F

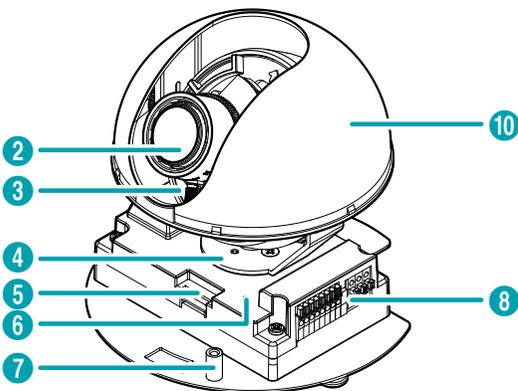

1	IR LED
2	Lens
3	Lens Rotator
4	Horizontal Rotator
5	SD Card Slot
6	Factory Reset Switch
7	Safety Wire Screw Hole
8	I/O Device Port
9	Vertical Rotation Adjustment Screw
10	Shield Case

- **Cable Access Hole**

For routing cables and wires. Block the cable access hole to prevent foreign substance from entering by using the enclosed cable access hole rubber when routing cables and wires. .

- **Safety Wire Hook**

Allows you to connect the safety wire to the dome cover, body, or bottom cover. It prevents the dome cover or camera body from falling on to the floor when detached from the bottom cover.

- **Body Hook**

Secures the camera body to the bottom cover.

- **Shield Case**

Hides the camera's internals and blocks IR beam reflection. *DC-D1223F only*

- **IR LED**

A sensor in the middle monitors lighting levels and activates the IR LED during low-lighting conditions.

DC-D1223FR only

- **Lens**

Features a variable focus auto iris lens or a fixed focus lens.

- **Lens Rotator**

Turn the lens rotator clockwise or counterclockwise to adjust the lens' rotation angle.

- **Horizontal Rotator**

Used to adjust the lens' horizontal angle.

- **SD Card Slot**

Used to insert a microSD card into the camera. (An SLC (Single Level Cell) or MLC (Multi Level Cell) card by SanDisk or Transcend is recommended)



- Do not remove the SD card while the system is in operation. Removing the card while the system is in operation can cause the system to malfunction and/or corrupt data stored on the SD card.
- An SD card is a consumable product with a finite service life. Prolonged use will damage the card's memory sectors and result in data loss or memory card failure. Test the SD card regularly and replace it whenever necessary.

- **Factory Reset Switch**

Restores the camera's default factory settings. For more information, refer to the **Factory Reset**.

- **Ceiling Installation Hole**

Used to screw the camera in place on a ceiling.

- **I/O Device Port**

Used to connect I/O devices to the camera.

- **Vertical Rotation Adjustment Screw**

Used to adjust the lens' angle and lock it in place.

Factory Reset

Only use the factory reset switch to restore the camera to its factory default settings.




A factory reset will clear all camera settings configured by the user.

- 1 Shut off the power supply, insert a straight pin into the switch hole, and press down on the reset switch.
- 2 Hold the switch down and reconnect the power adapter.
- 3 Once the device turns back on and its LEDs start blinking, wait 5 seconds and then remove the pin.
- 4 The device will go through the resetting process and reboot. All camera settings will be restored to their factory defaults after the reboot.

It's also possible to do a factory reset by pressing and releasing the reset switch while the camera is turned on or using the IDIS Discovery program from a remote location. A factory reset will reboot the system. For more information on factory reset, refer to the **IDIS Discovery operation manual**.

I/O Device Port

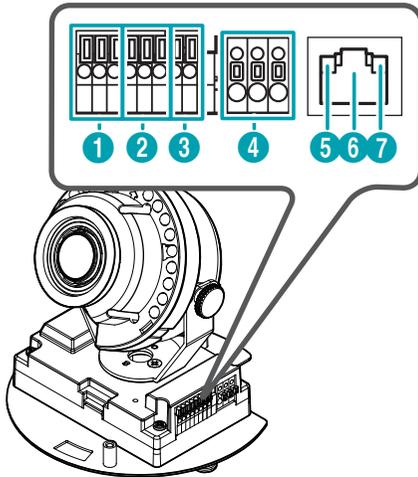

1	Alarm I/O	5	Network LED
2	Audio I/O	6	Network Port
3	Video Out	7	Power LED
4	Power		

• Alarm In/Out

- **Out:** Connect an alarm out device's mechanical or electrical switch to the alarm out port and the GND (ground) connector. (Supported Types: Active Low (open collector output), Electrical Specs: 30mA sync current at 5 VDC)
- **In:** Connect an alarm-in device to this port. (Mechanism: Choose between an NC (Normally Closed) type or an NO (Normally Open) type) → Connect a mechanical or electrical switch to the alarm in port and the GND (ground) connector. Alarm in range is 0V to 5V. In order to detect alarm input from an electrical switch, the signal must be higher than 4.3V from an NC switch or less than 0.3V from an NO switch and must last for longer than 0.5 seconds.

• Audio In/Out

- **Out:** Connect an amplifier to this port (line out). This device does not feature a built-in audio amplifier unit and therefore requires the user to purchase a separate speaker system with a built-in amplifier.
- **In:** Connect an audio source to this port. (line in)

• Video Out

- **CVBS (Video Out) & GND (Ground):** Connect the cable's signal line and ground line to these ports and the connector on its opposite end to a monitor. Use these ports for previewing video and not monitoring video. Go to Remote Setup (**System** > **General**) and choose a video out signal. (NTSC or PAL)

• Power

- **DC12V +/-:** Connect the two wires of the power adapter to these ports. Be careful not to cross the + and - wires. Booting will commence once connected to a power supply.
- **FGND (Frame Ground):** Used to ground the device.

• Network LED

Indicates the network connection status. For more information, refer to the **LED Status Indications**. If the **Status LED** option under **System** > **General** has not been enabled, this LED will remain turned off regardless of the network connection status.

• Network Port

Connect a network cable with an RJ-45 connector to this port. If using a PoE switch, you can supply power to the camera using an ethernet cable. For more information on PoE switch use, refer to the switch manufacturer's operation manual. You can configure, manage, and upgrade this camera and monitor its images from a remote computer over the network. For more information on network connection setup, refer to the **IDIS Discovery operation manual**.

• **Power LED**

Indicates the system's operating status. For more information, refer to the **LED Status Indications**. If the **Status LED** option under **System > General** has not been enabled, this LED will remain turned off regardless of the system's operating status.



When inserting an alarm in/out, audio in/out, video out, or power connector, hold down the button and push the connector in through the exposed hole. Release the button and then gently pull on the wire to ensure a secure connection. To disconnect, press down on the button again and pull the wire out.




- Check your local laws and regulations on making video or audio recordings. The user will be held liable for any violation of the law. (Article 25-5 of the Personal Information Protection Act: Operators of image data processing devices may not operate such devices for purposes other than as originally intended during device installation, place such devices at locations other than as originally intended, or use such devices to record audio.)
- When switching over from 12 VDC to PoE as the power source, the system will be rebooted once the power adapter is disconnected.
- Ground the power port's frame ground terminal before use.
- Organize the power cable so that it will not cause people to trip over or become damaged from chairs, cabinets, desks, and other objects in the vicinity. Do not run the power cable underneath carpet or a rug or plug the cable into a power outlet shared by a number of other devices.
- The network connector is not designed to be connected directly with cable or wire intended for outdoor use.

LED Status Indications

LED Status		Description
Power LED	Off	Power not connected
	Flashing	Booting
	On	Powered on
Network LED	On	Not connected to network
Power LED/ Network LED	Flashing (sequentially)	Software upgrade in progress

Connector Arrangement

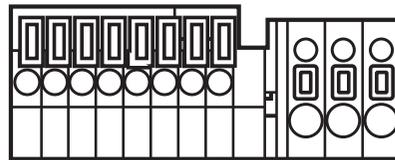

Alarm	GND	Grounding
	Out	Alarm Out (Active Low - Open Collector Output)
	In	Alarm In
Audio	GND	Grounding
	Out	Audio Out
	In	Audio In
Video	GND	Grounding
	CVBS	Video Out
Power	DC12V +	Power connection (Check + and - markings)
	DC12V -	
	FGND	Frame grounding

Installation

Installation of this product does not require the use of special tools.


For more information on other devices comprising the overall system, refer to their respective **installation manuals**.

-  Product color and design may vary depending on the model.




Installation

-  Shield case is included with *DC-D1223F* only.
-  Check the wall or ceiling to see if it needs to be reinforced. The camera may fall off if the wall or ceiling is not strong enough to support its weight.


- 1 Hold the camera body and dome cover and turn the dome cover clockwise to remove the dome cover from the camera body as follows:

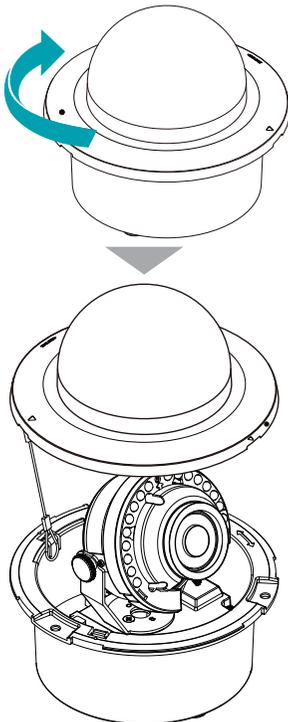

- 2 Turn the camera body counterclockwise while pressing the body hook of the bottom cover to remove the camera body from the bottom cover.

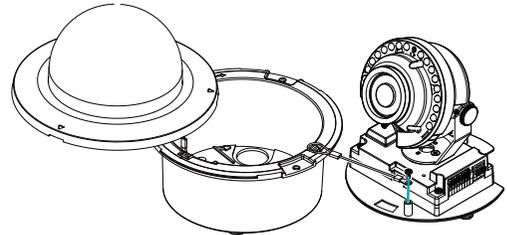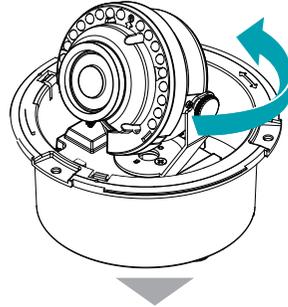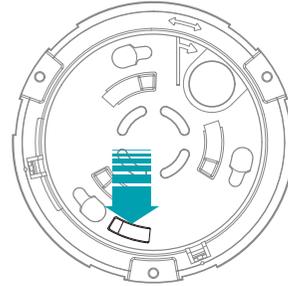

- 3 Remove the ceiling tile from the ceiling. Draw circle on the tile by using the mounting template provided with the camera. Cut the circle out of the ceiling tile.

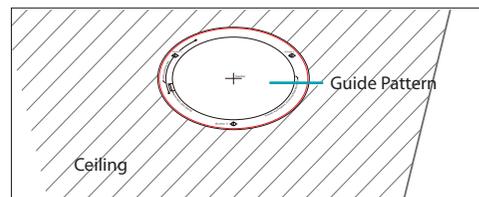


Part 1 – Introduction

4 Connect the safety wire provided with the camera to the bottom cover and ceiling. It prevents the bottom cover from falling on to the floor.


5 Use the screws provided with the camera to secure the bottom cover on a ceiling.

Use the provided guide pattern to check the distance between the screws.

6 Connect external devices, the network cable, and the power adapter. Block the cable access hole to prevent foreign substance from entering by using the enclosed cable access hole rubber when routing cables and wires. .

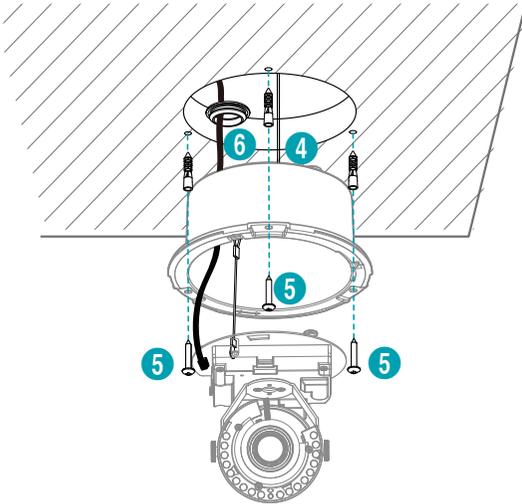

7 Connect the camera body to the bottom cover. Match the cable access hole position of bottom cover and camera body as the following image and turn the camera body clockwise to fix it. Connect the safety wire provided with the camera to the bottom cover and camera body to prevent the camera body from falling.

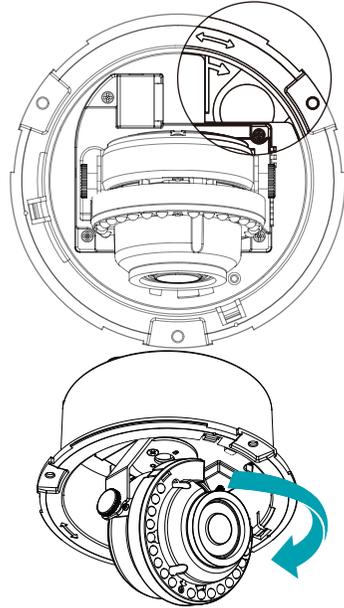


8 Adjust the angle of the lens. For more information, refer to the **Angle Adjustment**.


9 Adjust the focus and zoom levers. For more information, refer to the **Focus/Zoom**.

- 10** Attach the shield case to the vertical rotation adjustment screw and secure it in place.

DC-D1223F only

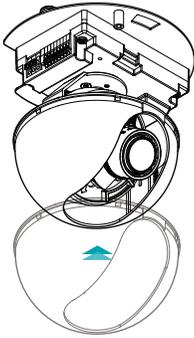


- 11** Connect the dome cover to the camera body. Connect the safety wire provided with the camera to the bottom cover and dome cover to prevent the dome cover from falling.

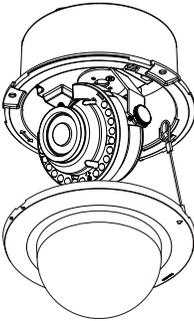

- 12** Connect the power.

Angle Adjustment

The lens can be rotated along three axes.

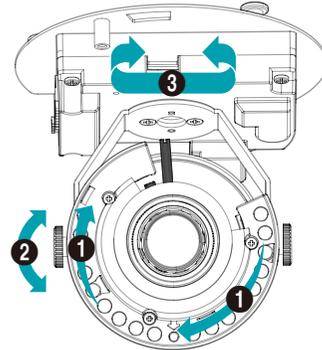


1	Lens Rotation	3	Horizontal Rotation
2	Vertical Rotation		

- Lens Rotation**
 Used to adjust the lens' rotation angle. Turn the rotator in clockwise or counterclockwise direction.
- Vertical Rotation**
 Used to adjust the lens' vertical angle. Loosen the screw, adjust the lens' vertical angle, and then tighten the screw to lock it in place.
- Horizontal Rotation**
 Used to adjust the lens' horizontal angle. Turn the horizontal rotator in the clockwise or counterclockwise direction.

Video may be blocked by a ceiling when the tile angle is wide.

Focus/Zoom

Variable Focus Automatic Iris Lens

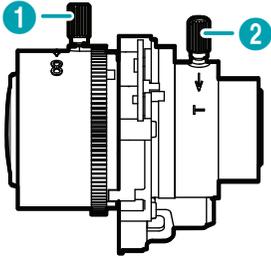

1	Focus Lever	2	Zoom Lever
----------	-------------	----------	------------


- **Focus Lever**

Adjust the focal point by turning the lever in clockwise or counterclockwise direction. Once the focal point has been adjusted, turn the screw in clockwise direction to lock it in place.


- **Zoom Lever**

Adjust the zoom by turning the lever in clockwise or counterclockwise direction. Once the zoom has been adjusted, turn the screw in clockwise direction to lock it in place. Lever length may vary depending on the model.



Dimensions

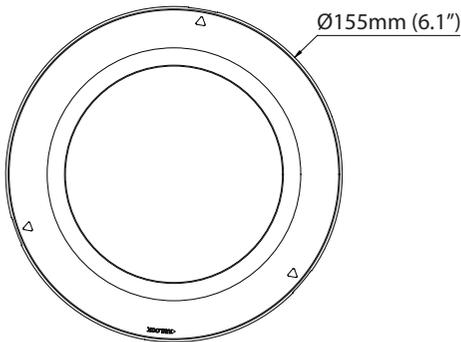

DC-D1223FR

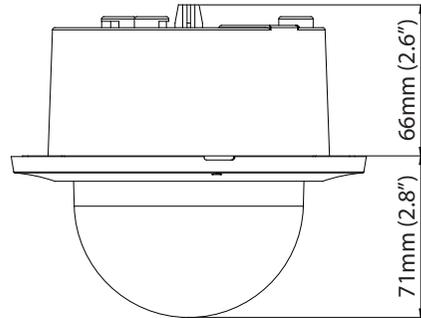


DC-D1223F

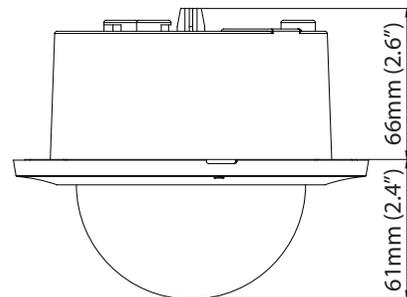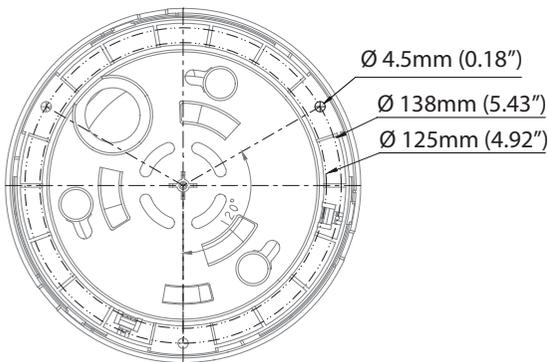

Part 2 - Camera Connection

Use the camera by connecting to DirectIP™ NVR or non DirectIP™ NVR, VMS such as IDIS Solution Suite Compact.


With DirectIP™ NVR-based Layout

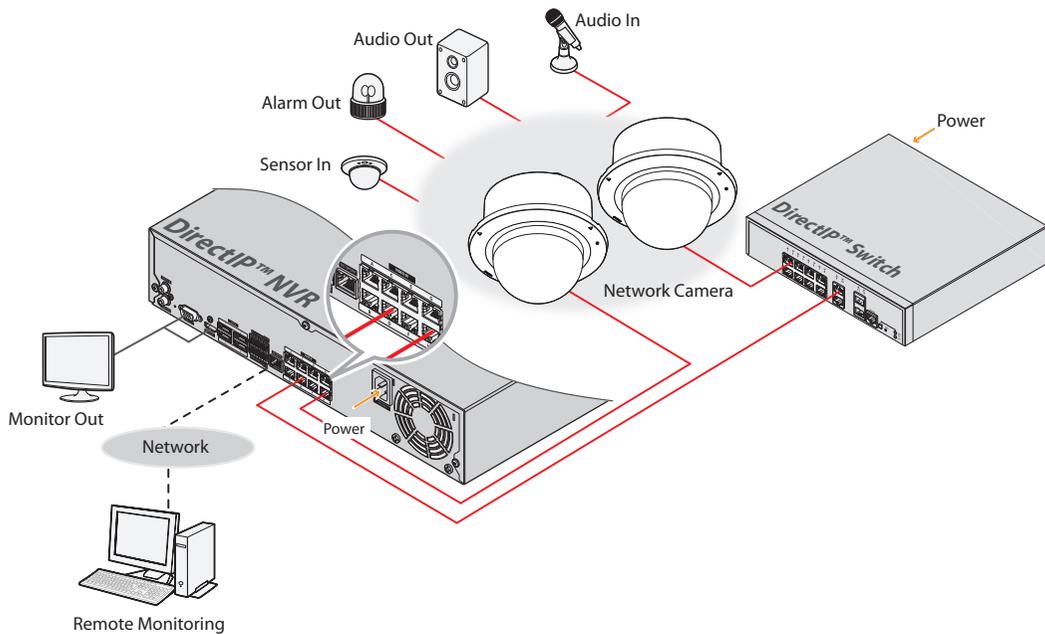

DirectIP™ NVR makes it easy to use cameras without extra network configurations. Each camera can be controlled via the DirectIP™ NVR setup menu, without any PC. For detailed camera settings, please see the camera setting pages of DirectIP™ NVR manual.

For users using the camera with DirectIP™ NVR connection, do not need to consider contents in the camera operation manual.

With non DirectIP™ NVR-based Layout

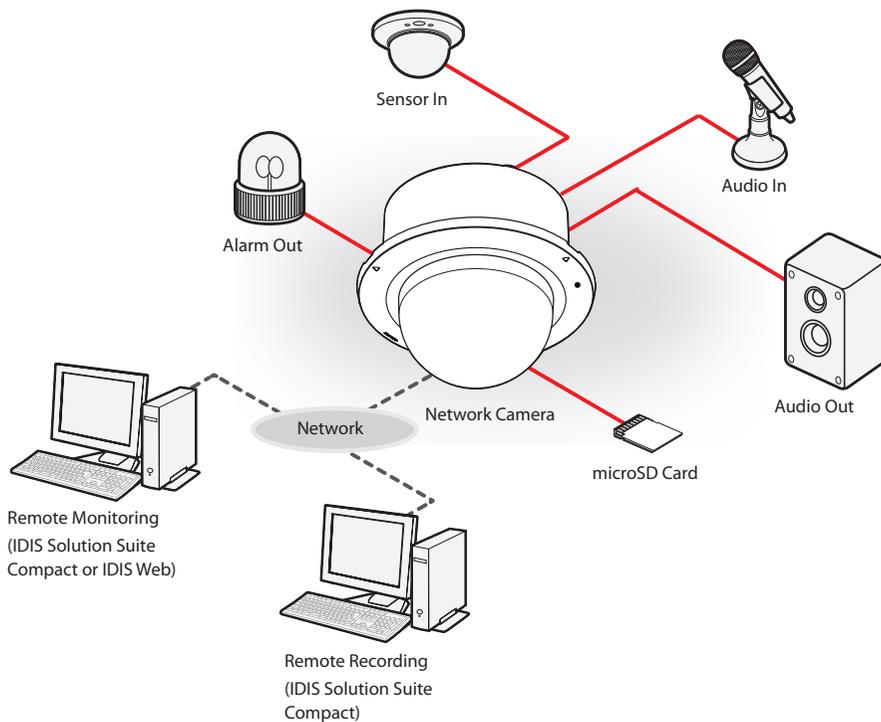

Control the camera over the network from software installed on a computer.
Ideal for using the camera over the network from a remote location.

The contents in the camera operation manual are only for users using the camera with non DirectIP™ NVR connection or VMS connection such as IDIS Solution Suite Compact.

Part 3 - Appendix

Troubleshooting

Problem	Check
The main unit won't turn on.	<ul style="list-style-type: none">• Check the power cable connection.• Check the power outlet.
PoE switch isn't being recognized.	Check the grounding status of the I/O device connected to the camera and the PoE switch. If they are not grounded, ground them and try again.
I can't see Live videos.	<ul style="list-style-type: none">• Check the camera's power status.• Ensure that cables are properly connected to the camera and the lens.• Check the network connection status of the computer and the network camera.
Images are blurry.	<ul style="list-style-type: none">• Make sure the lens is clean. If not, clean it using a soft piece of cloth or a brush.• Make sure the lens is in focus. Adjust the focus during daytime.• If there is too much light coming into the camera or the camera is picking up an overly bright light source, adjust the camera's position/angle accordingly.
Video color appears incorrect.	Check the white balance settings. If using the Auto option, it may take some time for the white balance to be adjusted.
Images are blinking.	If the camera is pointed at the sun or a fluorescent lamp, adjust the camera's angle away.
Lost the admin ID and password and unable to connect to a network camera.	You must perform a factory reset. A factory reset will revert all settings, including network settings, to their factory defaults. After performing a factory reset, make a memo of the admin ID and password as a safety precaution.
Unable to launch IDIS Web.	If the IDIS Web login screen is not loading, check which version of Microsoft Internet Explorer you are using. IDIS Web may not launch properly on versions 8.0 or below.

Specifications



These product specifications may change without prior notice.

Lens

Lens Type	Variable Focus Automatic Iris Lens: F1.2
Focal Length	3mm - 9mm
Viewing Angle	H: 123.0° (Wide) - 37.0° (Tele) V: 66.0° (Wide) - 22.0° (Tele) D: 131° (Wide) - 43° (Tele)
Lens Iris Control	DC Auto Iris
Day & Night Filter	Supported

Camera

Image Sensor	1/2.7" CMOS	
Minimum Subject Lux	DC-D1223FR	IR LED OFF : 0.5 Lux @ F1.2 (30 IRE) IR LED ON : 0 Lux @ F1.2 (30 IRE)
	DC-D1223F	0.5 Lux @ F1.2 (30 IRE)
Scanning Method	Progressive scan	
Signal-to-Noise Ratio	> 45 dB	
Dynamic Range (Digital WDR)	> 90 dB	
Electronic Shutter	Auto	
IR LED	LED x 18 (850 nm)	
Lighting Sensor	DC-D1223FR	Supported
IR Range	DC-D1223FR	20 m
External Storage* (Optional)	MicroSD (SDHC) Card (Class 6 or above, up to 32 GB)	

* An SLC (Single Level Cell) or MLC (Multi Level Cell) card by SanDisk or Transcend is recommended to ensure stable recording performance.

* An SD card is a consumable product with a finite service life. Prolonged use will damage the card's memory sectors and result in data loss or memory card failure. Test the SD card regularly and replace it whenever necessary.

Video

Signal Format	NTSC or PAL (selectable)
Compression Algorithm	H.264, M-JPEG (supports 4-stage image compression rate)
Compression Resolution	352x240, 704x480, 1280x720, 1920x1080
Bitrate Control	H.264 – CBR / VBR (up to 10 Mbps)
Max. Transmission Rate (frames per second)	30 ips @ 1920x1080 + 30 ips @ 704x480
Multi-Stream	Primary, Secondary, Tertiary

Audio

Compression Algorithm	G.726 (16KHz), G.711 μ - Law (8KHz)
------------------------------	---

I/O

Video Out**	1 composite, 1 Vp-p
Audio In	1 Line In
Audio Out	1 Line Out
Alarm In	1 TTL, NC/NO programmable, 4.3V (NC) or 0.3V (NO) threshold, 5 VDC
Alarm Out	1 TTL open collector, 30mA @ 5 VDC
Network Connection	10/100 Mbps Ethernet

** Use these ports for previewing video and not monitoring video.

Connector

Video Out***	Terminal Block
Audio I/O	Terminal Block (mono)
Alarm I/O	Terminal Block
Ethernet Port	RJ-45

*** Use these ports for previewing video and not monitoring video.

General

External Dimensions (Ø x H)	DC-D1223FR	155mm x 137mm (6.1" x 5.39")
	DC-D1223F	155mm x 127mm (6.1" x 5")
Packaging Dimensions (W x H x D)	203mm x 174mm x 203mm (7.99" x 6.85" x 7.99")	
Weight (Main Unit)	0.51 kg (1.12lb)	
Weight (Packaging)	0.82kg (1.81lb)	
Working Temperature	-10°C ~ 50°C (14°F ~ 122°F)[Starting Temperature: 0°C ~ 50°C (32°F ~ 122°F)]	
Operating Humidity	0% ~ 90%	
Power Input	12V DC, PoE(IEEE 802.3af, Class2)	
Power Consumption	Max. 4.8W	
Certifications	FCC, CE	



IDIS Co., Ltd.

For more information, please visit at
www.idisglobal.com