

Hybrid Network Video Recorder

Quick Guide

TR-2616

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the

appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Ventilation

Place this equipment only in an upright position. This equipment has an open-frame Switching Mode Power Supply (SMPS), which can cause a fire or electric shock if anything is inserted through the ventilation holes on the side of the equipment.

7. Accessories

Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

8. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company. You may want to install a UPS (Uninterruptible Power Supply) system for safe operation in order to prevent damage caused by an unexpected power stoppage. Any questions concerning UPS, consult your UPS retailer.

9. Power Cords

Operator or installer must remove power and TNT connections before handling the equipment.

10. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

11. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

12. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

13. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

14. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

A. When the power-supply cord or the plug has been damaged.

B. If liquid is spilled, or objects have fallen into the equipment.

C. If the equipment has been exposed to rain or water.

D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.

E. If the equipment has been dropped, or the cabinet damaged.

F. When the equipment exhibits a distinct change in performance - this indicates a need for service.

15. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

16. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

17. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

18. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

19. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

20. Elevated Operating Ambient Temperature

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).

21. Reduced Air Flow

Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

22. Mechanical Loading

Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.

23. Circuit Overloading

Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

24. Reliable Earthing (Grounding)

Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

CAUTION

RISK OF ELECTRIC SHOCK

bonoronan

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,

DO NOT REMOVE COVER (OR BACK).

NO USER-SERVICEABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Symbol	Publication	Description
\sim	IEC60417, No.5032	Alternating current
	IEC60417, No.5031	Direct current

FCC Compliance Statement

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE. **WARNING:** CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product

(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Copyright

© 2024 IDIS Co., Ltd.

IDIS Co., Ltd. reserves all rights concerning this document.

Use or duplication of this document in part or whole without the prior consent of IDIS Co., Ltd. is strictly prohibited.

Contents of this document are subject to change without prior notice for reasons such as functionality enhancements.

Registered Trademarks

IDIS is a registered trademark of IDIS Co., Ltd.

Other company and product names are registered trademarks of their respective owners.

The information in this manual is believed to be accurate as of the date of publication even though explanations of some functions may not be included. We are not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes. The software included in this product contains some Open Sources. You may obtain the corresponding source code which we have to distribute according to the license policy. Go to System Setup - About page for more information. This product includes software developed by the University of California, Berkeley and its contributors, and software developed by the OpenSSL Project for use in the OpenSSL Toolkit (http://www.openssl.org/). Also, this product includes cryptographic software written by Eric Young (eavg@cryptsoft.com), and software written by Tim Hudson (tjh@cryptsoft.com).

Covered by one or more claims of the patents listed at patentlist.accessadvance.com.

Accessories

Upon unpackaging the product, check the contents inside to ensure that all the following accessories are included.

Item		
Hybrid Network Video Recorder	Power Adapter/Power Cable	
Optical USB Mouse	Quick Guide	

Please download IDIS Center software and product manual from this link:

- https://www.idisglobal.com/

Overview

Front Panel

	2		θ		
HDD/Network/Alarm LEDs IVERTICAL Sector 1	0	HDD/Network/Alarm LEDs		2	USB Port


For more details on front panel buttons, refer to the manual.

Rear Panel



0	Power In Port	2	RJ45 Video Input Port	3	Network Client Port	4	Alarm Connection Ports
6	RS-485 Port	6	RS-232 Port	0	VGA Out Port	8	HDMI Out Port
9	Audio In / Out	0	Analog Video Input				

Connections on the Rear Panel

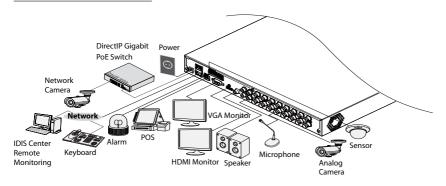

Getting Started

Setup Wizard

· Setup Wizard only appears during initial booting. When you login as an administrator account after initial booting, you can use Wizard to go to Live menu and select Wizard.

- · For more details on Setup Wizard, refer to the manual.
- 1 Select a system language.



Select Cancel from any of the Wizard screen to cancel the setup process and return to the main setup menu.

Quick Setup Wizard

• Start the Quick Setup Wizard

The new date and time settings will only be applied after clicking Next.

 Record Method Setup

• Date/Time Setup



 Record Video **Quality Setup** Higher recording quality uses up more disk space.

Back

• Finish the Quick Setup Wizard

Network Setup Wizard

After exiting from Quick Wizard, the network with Network Wizard will start automatically.

- Start the Network Setup Wizard
- Internet . Connection Yes (I will use an Internet connection)
 No II will Not use an Internet connection Eack Next • LAN Setup This test must be performed before proceeding to the next step. Back • FEN Setup Enter the Recorder name registered on the FEN server in the Device Name field, and click the Check to check its availability. Back >
- Finish the Network Setup Wizard

Camera Registration

Once Network Setup Wizard is complete, live mode screen appears. While in live mode, right-click on the mouse and select Camera Registration to run the Camera Registration mode. It allows you to scan for the cameras connected to the Recorder.



0	Camera Scan Button	0	Camera View Buttons
3	Camera List Area	4	Video Display Area
6	Apply/Cancel Buttons		

Camera Scan Button

Use this button to scan for and register cameras.

Pressing the Scan button displays the following submenu:

- **Rescan**: Scan for DirectIP cameras that were not scanned automatically.
- Go To Camera: Moves the focus automatically to the camera using MAC address of camera in the camera list.
- Screen Auto. Assign: Assigns the detected cameras on the video display area.
- **Camera list**: By using the camera information file, .csv, the user can register the cameras easily.
- Scan Refresh Interval: Configures the refesh interval to scan the camera. If the interval is short, camera scan results are refreshed more frequently. However, if the interval is long, it is advantageous to scan cameras on a wide network.
- Manual Scan: Used to manually scan for third-party cameras that cannot be recognized by the auto scan feature.
 - Protocol: Select the protocol used by the camera (or video encoder) you wish to search for.



Even if the network device uses a protocol supported by the recorder, the device itself may not be visible for scanning and registration by the recorder. For more information about supported network devices and models, contact your retailer. - Mode: Select the scan mode.

Camera View Buttons

- **RESET** \bigcirc Button: Refreshes the video display area and the camera list.
- **Bitrate** (3) Button: Changes the bitrate allocation for each channel.
- TOOL Or Button: Displays netcwork camera tool window and changes the camera protocol.

Camera List Area

Following options can be accessed by right-clicking on a camera list entry:

- Add/Remove Camera: Adds or removes the selected camera. The Add Camera option is inactive if the camera has already been added to the screen.
- Authentication: Enter the necessary camera login info. This option is inactive for DirectIP cameras because they do not require logins.
- Multi-Selection Mode On/Off: Adds or removes cameras simultaneously by selecting multiple cameras from the list.

Video Display Area

Left-click on the video display area to toggle between split screen and single screen modes.

Drag the camera screens around to rearrange them.

					<u>o e</u>	
WE9						
W re						
CAMP1						
WHERE .						
WHEED						
		Apply	Cencel			

Apply/Cancel Buttons

While in Camera Registration mode, select **Apply** to register all changes.

Select **Cancel** to exit Camera Registration mode without applying the changes.



It is not possible to register a camera that has already been registered to a different recorder.

Setting Password

7 The users must first run the system and then be required to set the password for the admin user account.

User - admin		
You must s	et the administrator's password for using the sys	tem
E-ma	il, UPR File are required to find the Password.	
User Password		
User	admin	_
Password		0
Confirm		3
	Export UPR	
Notification		
E-mail	_ @ + Verification	🗆 Not Use
?		OK



 It does not allow a user to run the system without a password.

Click the question mark button on the bottom left corner and refer to the instruction on setting up a password.

 An email address and UPR files are required to find the password. Otherwise, you may not be able to find your password when you enter the incorrect information.

Login

Configuring the recorder's settings and accessing its searching and other functions require an authorized user login.

1 Bring up the Live menu and click on ficon using the mouse to log in.



2 Select a user, enter the password, and then select OK.



 Leaving the admin account unassigned with a password poses a security risk. Please assign a password at your earliest convenience. A warning message will continue to be displayed until a password is assigned.

 Click on the button next to the password field using the mouse. This will bring up a virtual keyboard you can use to assign a password. 3 To log out, bring up the Live menu and click on icon using the mouse.

Find Password

 Enter a user, registered email and then select Get Verification Code.

		After E-mail/UPR Verification, You can change the password.		
User an	idmin		v	
Verification Method E	-mail		*	
E-mail		. 0	. *	Get Verification Code

2 Enter Verification Code and select OK.

Find Password				
		r E-mail/UPR Verific can change the pas		
User	admin			v
Verification Method	E-mail			v
E-mail	test	_ @ exampl	e.com _ 1	e Get Verification Code
Verification Code				02:55
			ОК	Cancel

- Select the question mark button at the bottom left corner of the screen to refer to the passoword settings instructions.
 - The password must be entered only with the virtual keyboard.
 - FEN service must be enabled to use find password function.
- 3 Enter an UPR(User Password Reset) verification and then click on UPR Verification button.



4 Select the UPR file and then click on Import button.

Find Password - "UPR(User Pass	word Reset) File"		
	File not found		
File name			Ŧ
		Import	Cancel
			5



- To use UPR function, the UPR file must be saved in advance.
- You can reset the password using an encrypted UPR (User Password Reset; filname extension * .upr) file.
- It can be used as USB flash driver on local pc, but not remotely.
- Only files exported from the same device are available.
- If you lose the UPR file and change the password of the recorder, the UPR file may not be used.
- 5 To set a new password, click the question mark button in the lower left corner and follow the instructions.

User - admin		
	Please, enter your new password.	
User	admin	
Password		
Confirm		
	Export UPR	
7		OK Cancel

Basic Feature

Live Mode

Once Camera Registration is complete, the system will enter Live Mode.

Placing the mouse pointer near the top portion of the screen also displays the Live menu.

Video Recording

Records the live video.

Refer to the manual for more information.

Panic Recording

Select Live or Search menu's Panic Recording \blacksquare icon to commence panic recording on all registered cameras. To stop panic recording, select the Panic Recording \blacksquare icon again. If the Panic Recording Duration option under Record Setup > General has been configured, Panic Recording will automatically terminate after the specified duration of time has elapsed.



• Panic Recording takes place irrespective of any recording schedule set up by the user.

 Panic Recording video profile from Record Setup – General applies to all Panic Recording videos.



Panic Recording will not take place if recording mode is not set to **Recycle** and the HDD has reached 100% of its capacity.

Audio Recording

If the Record Audio option under **Record Setup > General** has been enabled the camera will record audio along with video.



Check your local laws and regulations on making audio recordings.

Video Recording Playback

You can play back video recordings by using a mouse.

All Channel Playback

- Press the Menu button while in Live mode.
- 2 Select the Search Mode > icon and then select Time-Lapse Search or Event Log Search.
- 3 The selected search mode will be initiated.

IDIS Web

IDIS Web is a program that allows you to view and search video from remote locations over the Internet and can be accessed on the various web browser.

System requirements for running IDIS Web are as follows:

	Recommended
os	Microsoft [®] Windows [®] 10 (Home, Pro) or Microsoft [®] Windows [®] 11
СРИ	Intel Pentium IV 2.4GHz or above (Core 2 Duo E4600 recommended)
RAM	1GB or more
VGA	128MB or more (1280x1024, 24bpp or above)
Chrome	Google Chrome 22.0.1229.0 or above (59.xxx or above recommended)
Edge	98.0.1108.43 or above

Setup IDIS Web

- 1 Launch a web browser and then enter the following information in the address bar.
 - http://IP Address:Port Number (DVR system's IP address and IDIS Web port number configured under Network > General (Default Value: 12088))
 - Or http://fen.idisglobal.com/FEN Name (FEN Name: DVR name configured on the FEN server)
 - Or http://web.idisglobal.com (will be prompted to enter DVR's IP address or FEN name registered to the FEN server upon login)

Contact your network administrator for the IP address of the DVR you wish to connect to and the IDIS Web port number.

When prompted with the IDIS Web login window, select LIVE-PORT or PLAY-PORT as the desired mode. Enter the ID and password and click LOGIN to sign in using the selected mode. If connecting by entering http://web.idisglobal.com, enter the DVR's IP address in the Device Address field.

Selecting the Use FEN option on the login window allows you to enter the DVR name registered to the FEN server instead of its IP address. You will be prompted to enter the FEN server's address and port number under Setup.



IDIS Center Program

System Requirements

	Recommended	Minimum
os	Microsoft® Windows® 11, Microsoft® Windows® 10 64-bit (Home/Pro), Windows Server 2016 or higher	Microsoft [®] Windows [®] 7 (Home Premium, Professional, Ultimate) * Windows XP, Windows Vista, Windows 8 are not supported.
CPU	Intel® Core™ i7-12700K 3.6GHz or better	Intel® Core™ i3-2100 or better
RAM	16GB or more	2GB or more
VGA	NVIDIA GeForce GTX1060 or Quadro P2000 or better (1920x1080 or 2560x1440, 60Hz)	NVIDIA GEForce GT710 (1280x1024, 60Hz) or Intel® HD Graphic 530 or higher
HDD	8GB or more of available space SSD(Solid State Drive)	4GB or more of available space
LAN	Gigabit Ethernet or better	100 Mbps Ethernet

Installation

Prior to installing the software, click on to the Windows Start menu, open Control Panel, click on Power Management, and set options for Turn off monitor and Turn off hard disks as Never.

- Download the software from the IDIS website (www.idisglobal.com).
- 2 Browse to the **Setup** folder in the downloaded file and run **setup.exe**.

- 3 When the installation window appears, click Next.
- 4 Select an installation path for the program, and click Next.
- 5 When the install confirmation window appears, click **Next**.
 - NET Framework and Visual C++ Runtime Libraries will be installed automatically, and it may take a few minutes. If NET Framework and Visual C++ Runtime Libraries are already installed on the system, this step will be skipped automatically.
- 6 When the Installation Completed window appears, click **Close** and finish the installation.

Start Program

When IDIS Center software is installed, **IDIS Center** and **IDIS Center Run as administrator** shortcut icons will be created on the desktop. Run IDIS Center software by double-clicking on **IDIS Center** or **IDIS Center Run as administrator** shortcut icon. If a removable eSATA HDD or SD (SDHC) memory card are connected to the IDIS Center system, you must double-click on **IDIS Center Run as administrator**.

On Microsoft* Windows* Vista or User Account Control window may pop-up. Click Allow and follow the instructions in the installation window to proceed with the installation.

Login

This program does not have a password set by default. Leaving the admin account unassigned with a password poses a security risk. Please assign a password at your earliest convenience.



Once the program is running, you must login. Enter a User ID and Password.



- Remember my ID on this computer: Remembers the ID used to login.
- Restore last Live sessions: Restores the previous Live session on the current Live panel.

· Default User ID is "admin" without a password.

You can change User ID and Password in the User menu.

Device Registration

To use the functions provided by IDIS Center, you must first register a device and add the device to a device group.

1 Select System > IDIS Center Setup > Device in the menu at the top of the screen.



2 On the Site panel, click on All Devices, then click on the + button at the bottom of the Site List panel on the right. A Device Scan window will appear on the screen.

 1015 Center Setup 					×
	184			2	
Oevice				Tipe	Description
User Panic Record System Screen Farmet Screen Dipley	BUDMONE BORAR CHARP BORAR CHARP BORAR CHARP BORAR CHARP BORAR CHARP CHARPEN BORAR CHARPEN				
Vides Enhancement Report Instant Event Notwork Rep					
	+	• - •	J		×

- 3 After selecting a scan mode, click on Start Scan button and the scan results will be displayed on the list.
- 4 Click Add Devices at the bottom of the Device Scan window.

5 When user authentication window appears, enter the User ID and Password set up on each device, and then select OK for remote access.

Us	er Authentication		x
	Name :	<no name=""></no>	
	Address :		
	Device Type :	DVR (8 ch)	
		Apply to All Devices	
		OK Exit	

6 Click Device Group on the Sites panel and click + at the bottom. Add Device Group window will appear.



- Name: Enter a name for the device group.
- Location: Select an location for the subject device group.

When you select a device from the device List on the left, it will be added to the **Selected Device List** on the right. Click **OK** to register the device group.


7 Make sure that the device has been added to the device group correctly. Click **Device Group** on the **Sites** panel and click on next to **Device Group**. When you click on a registered device group, a list of devices added the selected device group will be displayed on the right.



To modify a device group that has been registered, select a device group and click \square on the bottom of the **Sites** panel. **Modify Device Group** window will appear. You can modify the selected device group from this window.

Live Video Mode

- In the Site List, make sure that the device has been added to the device group.
- 2 In the panel tabs, click the Live tab. In the Site list, select a zone you wish to connect to. Then, drag & drop the selected site on the Live screen using your mouse. The live video of the selected site will be displayed on the screen.

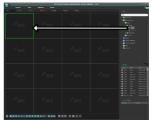

Recorded Video Playback

- 1 In the **Site** List, make sure that the device has been added to the device group.
- 2 In the panel tabs, click on the **Play** tab. In the **Site** list, select a site you wish to connect to. Then, drag & drop the selected site on the playback screen using your mouse. The recorded video of the selected site will be displayed on the screen.

IDIS Mobile Plus



This service requires heavy data traffic, and using a Wi-Fi connection is recommended. Using wireless internet (3G, LTE) may result in excessive data charges.

Android OS device

- Open the Play Store(Google Play) on your Android device.
- 2 In Play Store (Google Play), enter IDIS Mobile Plus in the search field.
- 3 Install IDIS Mobile Plus program and open it.
- 4 Register the device by pressing + (Add Device) button.



- **QR Code**: Register a device by scanning a QR code.
- Address: Register a device with an IP address.
- FEN: Register a device with a FEN name.

Refer to the **IDIS Mobile Plus** manual for more details about adding a device.

iOS device

- 1 Open the App Store on your device.
- 2 Enter IDIS Mobile Plus in the search filed of the App Store.
- 3 Install IDIS Mobile Plus program and open it.
- 4 Register the device by pressing + (Add Device) button.



- **QR Code**: Register a device by scanning a QR code.
- Address: Register a device with an IP address.
- FEN: Register a device with a FEN name.

Specifications

These product specifications may change without prior notice.

VIDEO		
Video Inputs	Analog : 16 BNC, 1 Vp-p, auto-terminating, 75 Ohms Network : 8 channels	
Video Outputs	1 HDMI, 1 VGA	
Display Resolution	HDMI : 3840 x 2160, 1920 x 1080, 1280 x 1024 VGA : 1920 x 1080, 1280 x 1024	
Display Speed	Analog : 240ips@1080p, 240ips@4MPH, 160ips@5MPH Network : 90Mbps, 240ips(8CH)@UHD	

RECORDING		
Max. Throughput	Analog : 240ips@1080p, 240ips@4MPH, 160ips@5MPH Network : 90Mbps, 240ips(8CH)@UHD	
Compression	H.264(not supported for analog cameras), H.265	
Recording Mode	Time-Lapse, Event, Pre-Event, Panic	

PLAYBACK		
Performance	8ch 1080p synchronous playback 8ch 4K + 8ch 5MPH playback	
Recording Mode	Time-lapse, Event log, Text-in	

STORAGE	
HDD	SATA x2
Total Capacity	12TB = 6TB x 2
Data Export Device	USB HDD, USB Stick

NETWORK		
Video in Connection	Gigabit Ethernet(Ext) x1	
Client Connection	Gigabit Ethernet(Client) x 1	
Transmission Speed	50Mbps	
Event Notification	Email (attach clip (.cbf, .MP4)), Callback to Remote S/W, Push notification (IDIS Mobile), NetFS(FTP)	

INTERFACE		
Audio In/Out	Local(NVR) : 4 / 1RCA + 1HDMI IP Camera : 8 / 8(Depending on IP camera)	

Alarm Spec- In	8 TTL, NC/NO programmable, 3.0V (NC) or 0.3V (NO) threshold, 5VDC
Alarm Spec- Out	1 relay output, NO programmable, terminal blocks, 2A@125VAC, 1A@30VDC
Internal Buzzer	Yes
Serial Interface	RS-232 (Terminal Block), RS-485 (Terminal Block)
USB	USB 2.0 X 2

GENERAL		
Unit Dimensions (W x H x D)	340mm x 46.5mm x 315.2mm (13.38" x 1.83" x 12.4")	
Unit Weight	3.3kg (with 2HDDs)	
Working Temperature	0°C – 40°C (32°F ~ 104°F)	
Operating Humidity	0% – 90%	
Power Input	ADAPTER (INPUT: 100V-240V~, 50/60Hz, 1.5A / OUTPUT: 12V 5A)	
Power Consumption	12V, 2.79A, 33.48W	
Approvals	FCC, CE, KC	



IDIS Co., Ltd.

For more information, please visit at www.idisglobal.com