

Hybrid Network Video Recorder

Operation Manual

TR-4616R

TR-4616

TR-1646R

TR-1646

HR-4616R

HR-4616

TR-C1646


TR-S4616

Before reading this manual

This operation manual contains basic instructions on installing and using DirectIP Hybrid Network Video Recorder, an IDIS product. Users who are using this product for the first time, as well as users with experience using comparable products, must read this operation manual carefully before use and heed to the warnings and precautions contained herein while using the product. Safety warnings and precautions contained in this operation manual are intended to promote proper use of the product and thereby prevent accidents and property damage and must be followed at all times. Once you have read this operation manual, keep it at an easily accessible location for future reference.


- ☒
- The manufacturer will not be held responsible for any product damage resulting from the use of unauthorized parts and accessories or from the user's failure to comply with the instructions contained in this operation manual.
 - It is recommended that first-time users of Direct IP Hybrid Network Video Recorder and individuals who are not familiar with its use seek technical assistance from their retailer regarding product installation and use.
 - If you need to disassemble the product for functionality expansion or repair purposes, you must contact your retailer and seek professional assistance.
 - Both retailers and users should be aware that this product has been certified as being electromagnetically compatible for commercial use. If you have sold or purchased this product unintentionally, please replace with a consumer version.

Safety Precautions



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN





CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Symbol	Publication	Description
	IEC60417, No.5032	Alternating current
	IEC60417, No.5031	Direct current

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Ventilation

Place this equipment only in an upright position. This equipment has an open-frame Switching Mode Power Supply (SMPS), which can cause a fire or electric shock if anything is inserted through the ventilation holes on the side of the equipment.

7. Accessories

Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

8. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company. You may want to install a UPS (Uninterruptible Power Supply) system for safe operation in order to prevent damage caused by an unexpected power stoppage. Any questions concerning UPS, consult your UPS retailer.

This equipment should be remain readily operable.

9. Power Cords

Operator or installer must remove power and TNT connections before handling the equipment.

10. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

11. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

12. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

13. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

14. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or the plug has been damaged.
- B. If liquid is spilled, or objects have fallen into the equipment.
- C. If the equipment has been exposed to rain or water.
- D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- E. If the equipment has been dropped, or the cabinet damaged.
- F. When the equipment exhibits a distinct change in performance — this indicates a need for service.

15. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

16. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

17. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

18. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Do not dispose of a battery into fire or hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

Do not leave a battery in an extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

19. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

20. Elevated Operating Ambient Temperature

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).

21. Reduced Air Flow

Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

22. Mechanical Loading

Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.

23. Circuit Overloading

Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

24. Reliable Earthing (Grounding)

Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

25. Child Safety

This equipment is not suitable for use in locations where children are likely to be present.

Mesures de sécurité



MISE EN GARDE

RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRIR





MISE EN GARDE : POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE,
NE RETIREZ PAS LE COUVERCLE (OU LE DOS).
CET ÉQUIPEMENT NE CONTIENT AUCUNE PIÈCE QUI PEUT ÊTRE REMPLACÉE PAR L'UTILISATEUR.
L'ENTRETIEN DOIT ÊTRE CONFIE À UN PERSONNEL QUALIFIÉ.



Le pictogramme de l'éclair avec une tête de flèche au sein d'un triangle équilatéral vise à avertir l'utilisateur de la présence d'éléments sous tension dangereux non isolés au sein du boîtier du produit qui pourraient constituer un risque de choc électrique.



Le triangle équilatéral avec point d'exclamation attire l'attention de l'utilisateur sur l'importance des instructions d'utilisation et d'entretien reprises dans la documentation qui accompagne le produit.

Symbole	Publication	Description
	IEC60417, N° 5032	Courant alternatif
	IEC60417, N° 5031	Courant continu

Précautions importantes

1. Lire les instructions

Il convient de lire toutes les mesures de sécurité et les instructions d'utilisation avant d'utiliser l'appareil.

2. Conserver les instructions

Il convient de conserver les mesures de sécurité et les instructions d'utilisation pour une référence ultérieure.

3. Nettoyage

Débrancher l'équipement de la prise secteur avant de le nettoyer. Ne pas utiliser de produits nettoyant liquides en aérosol. Nettoyer l'équipement à l'aide d'un chiffon doux et humide.

4. Accessoires

Ne jamais ajouter d'accessoires et/ou d'équipements sans l'approbation du fabricant car ces ajouts pourraient entraîner un risque d'incendie, de choc électrique ou d'autres blessures.

5. Eau et/ou humidité

Ne pas utiliser cet équipement à proximité d'eau ou en contact avec l'eau.

6. Aération

Placer cet équipement en position verticale. Cet équipement est doté d'une alimentation à découpage (SMPS) à cadre ouvert qui pourrait provoquer un incendie ou un choc électrique si un corps étranger quelconque est introduit dans les orifices d'aération situés sur les côtés de l'équipement.

7. Accessoires

Ne pas placer cet équipement sur un chariot, un support ou une table instables. L'équipement pourrait tomber et blesser grièvement un enfant ou un adulte, voire s'endommager fortement. L'installation sur un mur ou une étagère doit se faire dans le respect des instructions du fabricant. Il convient d'utiliser un kit d'installation approuvé par le fabricant.



L'ensemble composé de l'équipement et du chariot doit être déplacé avec soin. Les arrêts brusques, la force excessive et les surfaces inégales pourraient entraîner le renversement de l'équipement et du chariot.

8. Sources d'alimentation

Cet équipement doit être alimenté uniquement par un des types de source d'alimentation repris sur l'étiquette de l'équipement. En cas de doute sur le type d'alimentation, consulter le revendeur de l'équipement ou contacter le fournisseur d'énergie électrique local. Il est recommandé d'installer un onduleur pour une utilisation sûre et mettre l'équipement à l'abri des dégâts provoqués par une coupure inattendue de l'alimentation. Pour toutes les questions relatives à l'onduleur, contactez le distributeur d'onduleurs.

Cet équipement doit rester immédiatement utilisable.

9. Cordons d'alimentation

L'opérateur ou l'installateur doit débrancher l'alimentation et les connexions TNT avant de manipuler l'équipement.

10. Foudre

Pour une meilleure protection de cet équipement pendant un orage ou en l'absence d'utilisation ou de supervision pendant de longues périodes, il est conseillé de le débrancher de la prise secteur et de débrancher également l'antenne et le câble. Cette mesure évitera les dégâts potentiels provoqués par la foudre ou des pics de tension.

11. Surcharge

Éviter de surcharger les prises murales et les rallonges électriques afin d'éviter le risque d'incendie ou de choc électrique.

12. Objets et liquides

Ne jamais introduire d'objet quel qu'il soit dans les orifices de cet équipement car il pourrait entrer en contact avec des points de tension dangereux ou provoquer un court-circuit entraînant un incendie ou un choc électrique. Ne jamais renverser de liquide quel qu'il soit sur l'équipement.

13. Entretien

Ne pas réaliser l'entretien soi-même. Confier toute intervention d'entretien à un personnel qualifié.

14. Dégât requérant une intervention d'entretien

Débrancher l'équipement de la prise murale et confier l'entretien à un personnel qualifié dans les conditions suivantes :

- A. Le cordon d'alimentation ou la fiche ont été endommagés.
- B. Un liquide a été renversé ou des objets sont tombés dans l'équipement.
- C. L'équipement a été exposé à la pluie ou à de l'eau.
- D. Si l'équipement ne fonctionne pas normalement malgré le respect des instructions d'utilisation, il faut régler uniquement les commandes couvertes par ces instructions. Le réglage inadéquat des autres commandes pourrait provoquer des dégâts et entraîner une intervention prolongée d'un technicien qualifié pour rétablir le fonctionnement normal de l'équipement.
- E. En cas de chute de l'équipement ou d'endommagement de l'armoire.
- F. Quand les performances de l'équipement se dégradent de façon notable. Ceci indique la nécessité d'un entretien.

15. Pièces de rechange

Quand des pièces doivent être changées, il faut s'assurer que les pièces de rechange utilisées par le technicien sont celles recommandées par le fabricant ou qu'elles possèdent des caractéristiques identiques à celles de la pièce d'origine. Tout remplacement non autorisé pourrait provoquer un incendie, un choc électrique ou d'autres dangers.

16. Contrôle de sécurité

À l'issue de toute opération d'entretien ou de réparation sur l'équipement, le technicien devra réaliser des contrôles de sécurité pour confirmer que l'état de fonctionnement de l'équipement en question est adéquat.

17. Installation sur le terrain

L'installation doit être réalisée par un technicien d'entretien qualifié, dans le respect des réglementations locales.

18. Batteries correctes

Avertissement : risque d'explosion en cas d'utilisation d'une batterie de type incorrect. Le remplacer uniquement par un type identique ou équivalent. Mettre les batteries usées au rebut conformément aux instructions. La batterie ne doit pas être exposée à une source de chaleur excessive, telle que le soleil, le feu, ou analogue.

Ne pas jeter une batterie au feu ou dans un four chaud, ni l'écraser ou la couper mécaniquement, car cela pourrait provoquer une explosion.

Ne pas laisser une batterie dans un environnement exposé à une température extrêmement élevée, car cela pourrait entraîner une explosion ou une fuite de liquide ou de gaz inflammable.

Ne pas laisser une batterie dans un environnement soumis à une pression atmosphérique extrêmement basse, car cela pourrait entraîner une explosion ou une fuite de liquide ou de gaz inflammable.

19. Tamr

Il faut déterminer la température ambiante maximale recommandée par le fabricant pour l'équipement afin que le client et l'installateur puissent identifier les conditions de service maximales adéquates pour l'équipement.

20. Température de service ambiante élevée

En cas d'installation dans un cabinet fermé ou contenant plusieurs appareils, la température de service ambiante du cabinet peut être supérieure à celle de la pièce. Par conséquent, penser à installer l'équipement dans un environnement compatible avec la température ambiante maximum préconisée par le fabricant.

21. Flux d'air réduit

En cas d'installation dans un cabinet, le flux d'air requis pour l'utilisation sans danger de l'équipement doit être garanti.

22. Charge mécanique

L'installation de l'équipement dans un cabinet doit être réalisée de telle sorte qu'aucune situation dangereuse ne découle d'une charge mécanique inégale.

23. Surcharge du circuit

Il convient de penser au branchement de l'équipement au circuit d'alimentation et aux effets d'une surcharge des circuits sur la protection contre le courant et les fils d'alimentation. Pour ce faire, prêter attention aux valeurs reprises sur la plaque signalétique de l'équipement.



24. Mise à la masse fiable (Mise à la terre)

Il convient de préserver la mise à la masse fiable des équipements montés sur bâti. Prêter une attention particulière aux connexions d'alimentation autres que les connexions directes au circuit (par exemple, utilisation d'un bloc multiprise).

25. Sécurité des enfants

Cet équipement n'est pas adapté à une utilisation dans des endroits où des enfants sont susceptibles d'être présents.

In-Text

Symbol	Type	Description
	Caution	Important information concerning a specific function.
	Note	Useful information concerning a specific function.

User's Caution Statement

Caution: Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

FCC Compliance Statement

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

WARNING: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.

AVERTISSEMENT: TOUT CHANGEMENT OU MODIFICATION QUI N'A PAS OBTENU L'APPROBATION EXPRESSE DE L'AUTORITÉ RESPONSABLE DE LA CONFORMITÉ POURRAIT SE TRADUIRE POUR L'UTILISATEUR PAR LE RETRAIT DE L'AUTORISATION D'UTILISER L'ÉQUIPEMENT.

CETTE CLASSE D'APPAREIL NUMÉRIQUE RÉPOND À TOUTES LES EXIGENCES DES RÉGLEMENTATIONS CANADIENNES APPLICABLES AUX ÉQUIPEMENTS QUI PROVOQUENT DES INTERFÉRENCES.

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product

(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Copyright

© 2025 IDIS Co., Ltd.

IDIS Co., Ltd. reserves all rights concerning this operation manual.

Use or duplication of this operation manual in part or whole without the prior consent of IDIS Co., Ltd. is strictly prohibited.

Contents of this operation manual are subject to change without prior notice.

Registered Trademarks

IDIS is a registered trademark of IDIS Co., Ltd.

Other company and product names are registered trademarks of their respective owners.

The information in this manual is believed to be accurate as of the date of publication even though explanations of some functions may not be included. We are not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

The software included in this product contains some Open Sources. You may obtain the corresponding source code which we have to distribute according to the license policy. Go to System Setup - About page for more information. This product includes software developed by the University of California, Berkeley and its contributors, and software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>). Also, this product includes cryptographic software written by Eric Young (eay@cryptsoft.com), and software written by Tim Hudson (tjh@cryptsoft.com).

Table of Contents

1

- Part 1 - Getting Started 12**
 - Setting Password12
 - Setup Wizard12
 - Camera Registration16
 - Camera Scan Button.....16
 - Camera View Buttons.....18
 - Camera List Area19
 - Video Display Area20
 - Apply/Cancel Buttons21
 - Diagnosis Process21
 - Camera Registration Mode.....22
 - Login22
 - Live Menu24
 - Zoom.....27
 - PTZ Control27
 - Dewarping Control (Camera)28
 - Event Monitoring28
 - Covert Camera28
 - Context Menu Access29
 - Edit Group29
 - Video Recording.....30
 - Panic Recording.....30
 - Audio Recording30
 - Video Recording Playback31
 - All Channel Playback31
 - Context Menu.....31

2

- Part 2 - Configuration32**
 - Menu Use32
 - Text Input via Virtual Keyboard33
 - Batch Assignment.....33
 - Mouse33
 - System Setup34
 - General34

Date/Time	35
User	36
Security.....	39
Storage	39
Self-Diagnosis.....	41
Custom Value	43
About.....	43
Camera Setup	43
General	43
Advanced Setup	44
Stream I.....	50
Stream II.....	51
Audio.....	52
Maintenance.....	53
Record Setup.....	54
General	54
Advanced Setup	55
Schedule.....	56
Pre-Event	57
Statistics	58
Event Setup	59
System Event	59
Camera System	61
Camera System_Video Loss.....	61
Camera System_Recording Fail	62
Video-Analytics	62
Video-Analytics_Motion.....	62
Video-Analytics_Tampering	64
Additional Event	65
Additional Event_Alarm-In	65
Additional Event_Network Alarm	66
Additional Event_Text-In	67
Device Setup.....	68
Alarm-Out	68
Alarm-Out_Setup	68
Alarm-Out_Schedule.....	68
Local Audio	69
Connector	69

Remote Control	70
Network Setup	70
General	70
IDIS Web	72
WAN	72
VIN	75
FEN	76
NetFS	77
RTSP	78
Firewall	78
NAT	79
Notification Setup	79
Schedule	79
Callback	80
Mail	81
Push	83
FTP	83
HTTP	84
Display Setup	85
Device	85
Screen	85
Event Monitoring	85
Sequence	86
OSD	86
Status Setup	87
Camera	87
Device	87
System	88
Storage	88
Network	89

Part 3 - Search.....91

Time-Lapse Search	91
Search Menu	91
Context Menu	94
Text-In Search	95
Clip Copy	95
Event Log Search	97

4

Part 4 - IDIS Web.....98

Web Live Mode.....	100
Web Search Mode.....	102

5

Part 5 - Appendix.....105

NAT Function Example	105
Camera WebSetup Connection	106
IDIS Web Connection through IDIS Camera.....	106
IDIS Center Program Connection through IDIS Camera	107
RTSP Connection through IDIS Camera.....	108

Part 1 - Getting Started

Setting Password

- 1 The users must first run the system and then be required to set the password for the admin user account.

- ✓ It does not allow a user to run the system without a password.
- Click the question mark button on the bottom left corner and refer to the instruction on setting up a password.
- An email address and UPR files are required to find the password. Otherwise, you may not be able to find your password when you enter the incorrect information.

Setup Wizard

Setup Wizard lets you configure basic settings required for operating the system.

- ✓ Setup Wizard only appears during initial booting. When you login as an administrator account after initial booting, you can use Wizard to go to Live menu and select Wizard.

- 1 Select a system language.

- ✓ Select **Cancel** from any of the Wizard screen to cancel the setup process and return to the main setup menu.

Quick Wizard

1 Select Quick Wizard.

Quick Setup Wizard (Step 1/6)

You are about to start the Quick Setup Wizard. This Wizard will guide you through:

- Date/Time Setup
- Record Method Setup
- Record Video Quality Setup
- H.265 Camera Codec Setup
- Network Setup Wizard

Click the 'Next' button to start the wizard.

2 Specify the current date and time and then click **Next**.

Quick Setup Wizard (Step 2/6)

Date/Time Setup

Date:

Time:

Time Zone:

☒ Use Daylight Saving Time



- The new date and time settings will only be applied after clicking **Next**.
- For more information on date and time settings, refer to the **Date/Time** section under **Date/Time on page 35**.

3 Choose the desired **Recording Method** and click **Next**.

Quick Setup Wizard (Step 3/6)

Record Method Setup

Which recording method would you prefer to use?

- ☐ Event Record
- ☒ Continuous & Event Record (Recommended)
- ☐ Continuous Record

Event Record means that the system will record when a Event is detected. Generally, video quality is more important for Event Recording than it is for Continuous Recording, so the system records at a higher quality for Events. For actual recording according to event recording, detailed settings are required on each event setting page.

4 Choose the desired **Recording Quality** and click **Next**.

Quick Setup Wizard (Step 4/6)

Record Video Quality Setup

Which video quality profile would you prefer to use?

- ☒ High Video Quality Priority Profile (HVQPP)
- ☐ Standard Recording Profile (SRP)
- ☐ Longer Recording Time Priority Profile (LRTPP)

The HVQPP provides the highest video quality recording at that highest frame rate but requires more hard disk space than the LRTPP. Please see the User's Manual for details.



- Higher recording quality uses up more disk space.
- Recording resolution is determined based on the selected recording quality.
 - **High Video Quality Priority Profile:** Very high
 - **Standard Recording Profile:** High
 - **Longer Recording Time Priority Profile:** Standard

Part 1 - Getting Started

- Recording resolutions used under each recording method and record video quality setting are as follows:

	High Video Quality Priority Profile	Standard Recording Profile	Longer Recording Time Priority Profile
Event Record	Profile 1	Profile 2	Profile 3
Continuous & Event Record	Profile 2 (Continuous) / Profile 1 (Event)	Profile 3 (Continuous) / Profile 2 (Event)	Profile 4 (Continuous) / Profile 3 (Event)
Continuous	Profile 1	Profile 2	Profile 4

5 Choose the desired codec and click **Next**.

Quick Setup Wizard (Step 5/6)

H.265 Camera Codec Setup

Select default codec for H.265 camera

- ☒ H.265 only mode (Optimal mode for storage space and network bandwidth)
- ☐ H.265 / H.264 Hybrid mode (Optimal mode for storage space and remote monitoring)

H.265 only mode reduces both storage space and network bandwidth. Be aware that H.265 does increase processor load on remote monitoring PCs or Mobile devices.

H.265 / H.264 hybrid mode reduces both storage space and processor load for remote monitoring PCs or mobile devices. Recorded video is stored using the higher compression ratio of H.265, however, video streams to remote monitoring devices are compressed using H.264 which requires less processor power on remote monitoring PCs or mobile devices.

Cancel Back Next

6 Click **Finish** to exit Quick Wizard.

Quick Setup Wizard (Step 6/6)

Now you have completed setup for basic operation.
Click the 'Finish' button to start Network Setup.

Cancel Finish

Network Wizard

- ☒ After exiting from Quick Wizard, the network with Network Wizard will start automatically.

1 Select Network Wizard.

Network Setup Wizard (Step 1/5)

Network Wizard will help configure the Device for your Network.
Please make sure to connect an Ethernet cable between your device and router or cable modem.

The wizard includes:

- LAN Setup
- UPnP (Port forwarding) Setup
- FEN Setup

Click the "Next" button to start the wizard.

Cancel Next

2 Specify whether the system is connected to the Internet and click **Next**.

Network Setup Wizard (Step 2/5)

Internet Connection

Is your Device connected to the Internet?

- ☒ Yes (I will use an Internet connection)
- ☐ No (I will Not use an Internet connection)

Cancel Back Next

- ☒ If you have chosen **No**, wait for the test to finish and then click **Finish** to exit Network Wizard.

- 3 Select **Network Configuration** and then click **Next**. Select either **Auto Configuration** or **Manual Configuration** and then click **Test** to test the system's current network configuration.



- This test must be performed before proceeding to the next step.
- If the NVR is on a network connected to a network that has a DHCP server, selecting **Auto Configuration** retrieves LAN settings such as IP and DNS addresses automatically. Selecting **Manual Configuration**, on the other hand, lets you specify the settings manually.
- **UPnP support device not found.** If this error message is displayed, check to see if the IP router (or NAT) supports UPnP and if UPnP has been enabled. For more information about the router's UPnP function, refer to the router's operation manual.

- 4 Enter in the **Device Name** field the NVR name to be registered on the FEN server and then click **Check** to check its availability.



- The device name you register on the FEN server will be a unique name used to identify the NVR. Once registered, the name can be used to access the NVR directly from clients such as the IDIS Center. Check the name's availability to complete the registration process. The Finish button will then become activated.
- You will be prompted with an error message if you do not enter a name for the NVR or enter a name already registered on the FEN server.
- Depending on the network environment, FEN services may not be active and therefore prevent the NVR from connecting to the network. In this case, you will need to manually configure the ports.

- 5 Click **Finish** to exit Network Wizard.

Camera Registration


Once Network Setup Wizard is complete, live mode screen appears. While in live mode, right-click on the mouse and select Camera Registration to run the Camera Registration mode. It allows you to scan for the cameras connected to the NVR.



1	Camera Scan Button
2	Camera View Menus
3	Camera List Area
4	Video Display Area
5	Apply/Cancel Buttons

Camera Scan Button

You can scan and search and register cameras that were not detected automatically or third party cameras. Pressing the **Scan** button displays the following sub-menu.

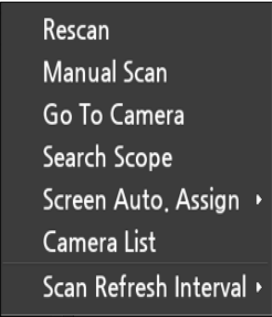

Rescan


Scans for DirectIP cameras that were not scanned automatically.

Manual Scan

Used to manually scan for cameras that cannot be recognized by the auto scan feature.



- Some functions may not be supported for the third-party cameras depending on their protocol and model.
- The device to be registered must have different IP addresses. Otherwise, the connection may fail.

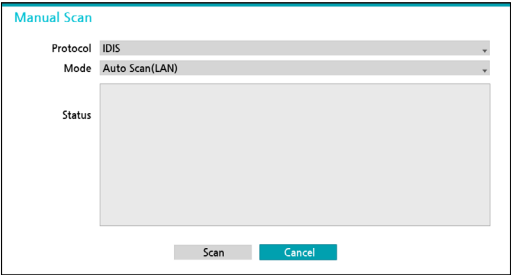

- Protocol:** Select the protocol used by the camera you wish to search for.



- Some functions may not be supported for the third-party cameras depending on their protocol and model.
- This system is optimized for combination with IDIS cameras. When registering other cameras, recording performance cannot be guaranteed and it can be restricted from several functions if the related video settings exceed the system performance. In this case, please make adjustments to optimize the performance.
- When registering third-party cameras, they must not exceed 50% of total channels.

- Mode:** Select the scan mode.
 - Auto Scan (LAN):** Lists cameras in a LAN environment. If **Auto Scan (LAN)** fails to recognize a camera, try using **IP Address Scan** instead.
 - IP Address:** Enter the IP address of a camera. The NVR scans for the camera matching the specified address. If you enter IP address's range, the NVR scans for cameras falling under the specified address's range. By specifying an IP address, you can also specify which port to use with the Remote Admin feature. It is recommended that the camera not be networked via DHCP (Dynamic Host Configuration Protocol). If the camera is networked via DHCP, connection to the camera may not be made properly depending on changes in the external network environment.

1 Select **Scan** to commence scanning.



- Only cameras that are connected to the NVR via VIDEO IN ports can be scanned and registered.

2 Select a camera from the scan list and then select **Add Camera**. The device login window will appear.

3 Enter a **User ID** and a **Password** for the selected camera.

Set Camera Password

For IDIS protocol cameras that support changing and finding the camera password, you must set the camera password at the time of initial camera registration. The email information is used to change and find the camera password.

Go To Camera

Moves the focus automatically to the camera using the MAC address and model of camera in the camera list.

Search Scope

Filters the cameras in the camera list depending on the search scope such as specified IP address range.

Screen Auto. Assign

Assigns the detected cameras on the video display area.

Camera list

By using the camera information file, .csv, the user can register the cameras easily.

No.	MAC
<input checked="" type="checkbox"/> 1	00:03:22:2B:00:75
<input checked="" type="checkbox"/> 2	00:03:22:0F:D4:9C
<input checked="" type="checkbox"/> 3	00:03:22:36:2B:D5
<input checked="" type="checkbox"/> 4	00:03:22:34:BA:CC
<input type="checkbox"/> 5	None
<input type="checkbox"/> 6	None
<input type="checkbox"/> 7	None
<input type="checkbox"/> 8	None
<input type="checkbox"/> 9	None
<input type="checkbox"/> 10	None

Import Export OK Cancel

- **Export** : Button : Exports the list of camera information on USB as a .csv file
- **Import** : Button : Imports a camera information file, .csv file. The user can edit a csv file directly.
 - A column indicates camera number, B column the camera MAC address, C column the Video In port of the **analog camera** in the .csv file. C column indicates only for **analog cameras**. If camera information displays as follows: 5,00:11:22:18:30:20,3, 5 = CAM 5, 5,00:11:22:18:30:20 = MAC address, 3 means **analog camera**.
 - Before using this feature, the cameras must be scanned first. If the cameras to be registered do not exist in the list, the camera cannot be registered.
 - This feature is not supported for the third-party cameras.

Scan Refresh Interval

Configures the refresh interval to scan the camera. If the interval is short, camera scan results are refreshed more frequently. However, if the interval is long, it is advantageous to scan cameras on a wide network.

Camera View Buttons

- **RESET** Button: Refreshes the video display area and the camera list.
- **Bitrate** Button: Displays the following window to change the bitrate allocation for each channel.

1. 11 Mbps	2. 9 Mbps	3. 6 Mbps	4. 6 Mbps
5. 6 Mbps	6. 6 Mbps	7. 6 Mbps	8. 6 Mbps
9. 6 Mbps	10. 6 Mbps	11. 6 Mbps	12. 6 Mbps
13. 6 Mbps	14. 6 Mbps	15. 6 Mbps	16. 8 Mbps

Total Bitrate : 106M (Max. : 120M)

Apply Cancel

When registering the camera, you can set the stream as much as the performance (bitrate) assigned to the channel. If high performance (bitrate) is not allocated, Quality, IPS and Resolution can be low.

- **Tool** Button: Displays network camera tool window to run a camera-related actions. There are Authentication, Screen Assignment and Camera Protocol Change for actions.


- 1 Select an **Action** to execute.
- 2 Select a camera from the list and press the **Apply** button.

No.	Model	MAC	IP Address	Protocol	Result
1	DC-D1223R	00:03:22:11:2D:11	188.254.133.207	DirectIP	
2	DC-D1223R	00:03:22:12:FD:78	188.254.46.82	DirectIP	

Close

- IDIS cameras can be detected automatically but IDIS protocol cannot be detected automatically. We recommend you use the DirectIP protocol to detect the cameras automatically. When you change the protocol, the camera reboots and then you can register the camera on the NVR. For more information on the settings, please refer to the network camera manual.

Camera List Area

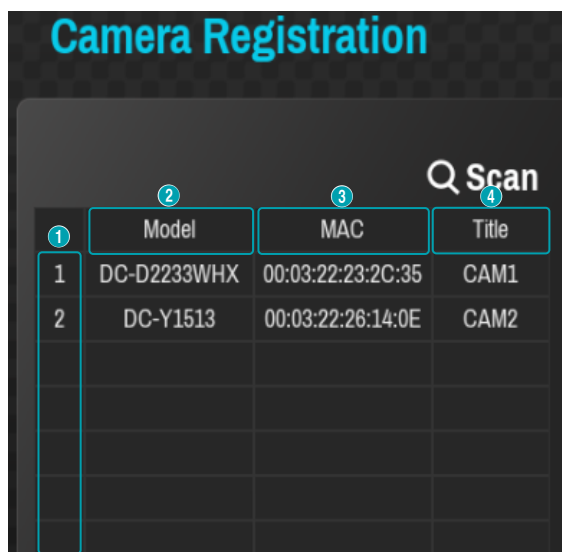

Registered	14	DC-D1011	00:03:22:13:57:FF	CAM14
Initial registration	15	DC-D2233WHX	00:03:22:23:2C:3C	CAM15
	16	DC-D1022VR/WR	00:03:22:13:61:35	CAM16
		DC-T1233WHX	00:03:22:18:F5:A6	None
other NVRs (Registration X)		DC-D1022V/W	00:03:22:13:60:F8	None
		DC-T1233WHR	00:03:22:1E:E9:86	None

- **Multi-Selection Mode On/Off:** Adds or removes cameras simultaneously by selecting multiple cameras from the list.

① **Screen Position/Registration Status:** Identifies the camera's position in the video display area. A blue background indicates a camera that is available for registration. A gray background indicates an already registered camera. Other registered cameras are shown in black background.

② **Model:** Indicates the camera's model.

③ **MAC:** Displays the 12 digits of the camera's MAC address.

④ **Title:** Indicates the camera's name. Changing a camera's name in the video display area updates the camera list as well.


Following options can be accessed by right-clicking on a camera list entry:

- **Add/Remove Camera:** Adds or removes the selected camera. The Add Camera option is inactive if the camera has already been added to the screen.
- **Authentication:** Enter the necessary camera login info. This option is inactive for DirectIP / IDIS cameras because they do not require logins. This option is inactive for IDIS protocol only if the password is set.


Video Display Area

Left-click on the video display area to toggle between split screen and single screen modes.

Drag the camera screens around to rearrange them.

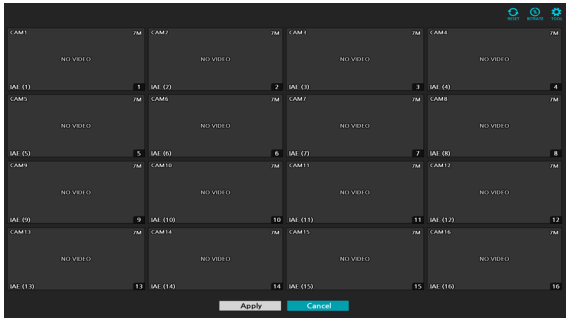


Camera Screen

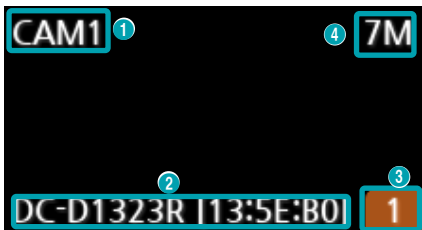

1 Camera Title

Indicates the camera's title. Left-click on the title to edit the camera's title.

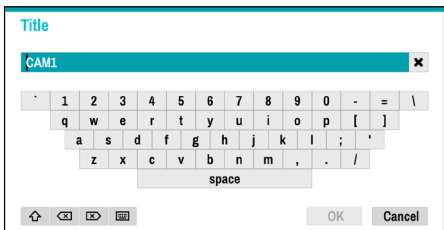

2 MAC Address

Camera's model and MAC address are shown if the camera has not been registered to the NVR.

3 Screen Position/Registration Info


Flashes in orange if the camera has not been registered to the NVR.



- Information is not indicated on the bottom of the screen for cameras already registered to the NVR, and the **Screen Position/Registration Info** icon is shown with a black background.
- Screen Position/Registration Info** icon for cameras registered to another NVR is shown with a steady orange background on top of a gray screen.


4 Bitrate Allocation

Indicates the performance (bitrate) allocated to the channel. Left-click on the upper right corner of the screen to change the bitrate.

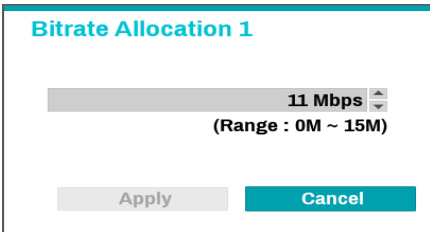

Camera Menu

Right-click on the video display area to bring up the camera menu.

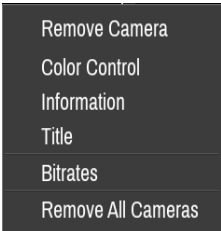


- Remove Camera:** Removes the registered camera.
- Color Control:** Adjusts the camera's color settings.
- Information:** Displays the camera's basic information.
- Title:** Edits the camera's title.
- Bitrates:** Changes the bitrate allocated to the channel.
- Remove All Cameras:** Removes all registered cameras.



You can drag & drop to add or remove cameras.

Apply/Cancel Buttons

While in Camera Registration mode, select **Apply** to register all changes. When selecting **Apply**, the following message will be displayed. You can activate or deactivate Self-diagnosis.

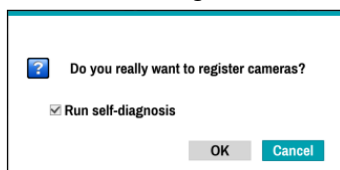


Select **Cancel** to exit Camera Registration mode without applying the changes.




It is not possible to register a camera that has already been registered to a different NVR.

Diagnosis Process

When the camera is registered to the NVR, **Self-diagnosis** runs automatically for the new registered and changed cameras. If **Self-diagnosis** is processing, **Diagnosis Processing** message will be displayed.

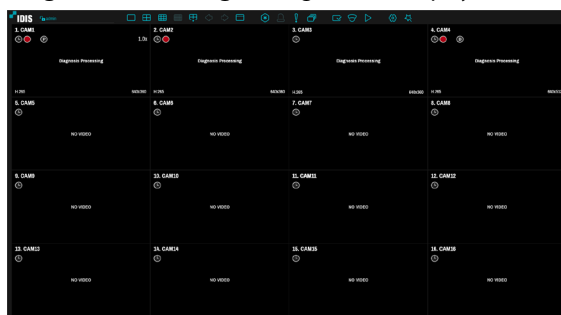


If **Self-diagnosis** is failed, **Diagnosis Required** message will be displayed. In this case, you can run **Self-diagnosis** manually.

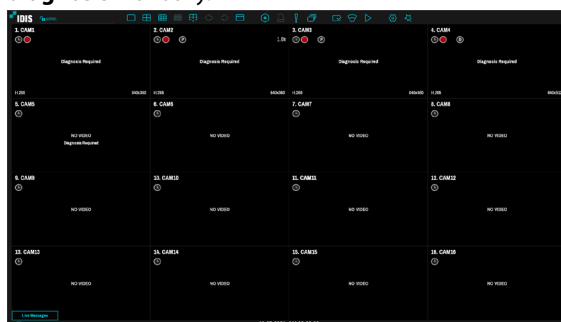


Camera Registration Mode

While in Live mode, right-click and select **Camera Registration**.

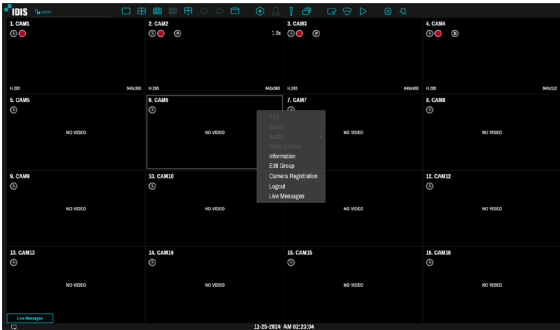

Login

Configuring the NVR's settings and accessing its searching and other functions require an authorized user login.

- 1 Bring up the Live menu and click on  icon using the mouse to log in.

Login


User admin


Password

Find PW OK Cancel

- 2 Select a user, enter the password, and then select **OK**.



- Leaving the admin account unassigned with a password poses a security risk. Please assign a password at your earliest convenience. A warning message will continue to be displayed until a password is assigned.
- Click on the  button next to the password field using the mouse. This will bring up a virtual keyboard you can use to assign a password. For more information on using the virtual keyboard, refer to the [Text Input via Virtual Keyboard on page 33](#).

- 3 To log out, bring up the Live menu and click on  icon using the mouse.

Are you sure you want to log out?

admin

Log out Cancel

Find Password

If you do not know the password, select **FIND PW**. You can set a new password.

- 1 Enter a user, registered email and then select **Get Verification Code**.

- 2 Enter Verification Code and select **OK**.



- Select the question mark button at the bottom left corner of the screen to refer to the password settings instructions.
- The password must be entered only with the virtual keyboard.
- FEN service must be enabled to use find password function. For more information on e-mail, refer to **Mail on page 81**.

- 3 Enter an UPR(User Password Reset) verification and then click on **UPR Verification** button.

- 4 Select the UPR file and then click on **Import** button.




- To use UPR function, the UPR file must be saved in advance. For more information on saving the UPR file, refer to **User on page 36**.
- You can reset the password using an encrypted UPR (User Password Reset; filename extension *.upr) file.
- It can be used as USB flash driver on local pc, but not remotely.
- Only files exported from the same device are available.
- If you lose the UPR file and change the password of the NVR, the UPR file may not be used.

- 5 To set a new password, click the question mark button in the lower left corner and follow the instructions.

Live Mode

Live Menu

☒ Placing the mouse pointer near the top portion of the screen also displays the Live menu.

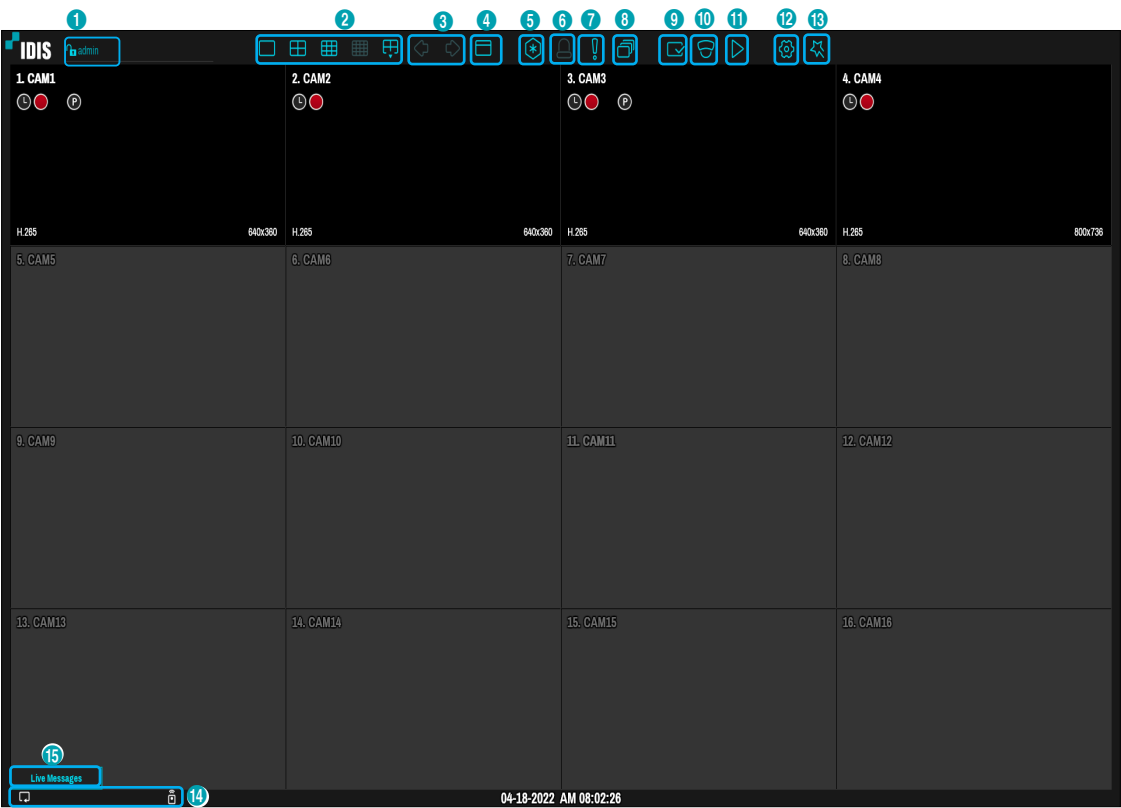

1	Login/Logout	2	Layout	3	Previous Group, Next Group	4	Display
5	Freeze	6	Alarm	7	Panic Recording	8	Sequence
9	Status	10	Select Camera	11	Search Mode	12	Setup
13	Wizard	14	Status Indication	15	Live Messages		

① Login/Logout

Log into and out from accounts. If in the logged in state, the account ID is shown. If in the logged out state, the login icon is shown.

② Layout

Used to change the screen layout to single screen, 1x2, corridor format(1x3), 2x2, 1+5, 1+7, 3x3, 1+12, or 4x4.



Corridor Format: Divides the screen into 3 panes. This format displays vertically and is set to display the optimized video of the camera when using the camera's pivot feature. This is particularly effective when monitoring hallways, passages, and other confined spaces.

③ Previous/Next Group

Loads the previous/next screen group.

④ Display

- **Full Screen On/Off:** Enables the full screen mode.
- **Camera OSD On/Off:** Enables/ disables the camera OSD feature.
- **Status OSD On/Off:** Enables/ disables the status OSD feature.
- **Aspect Ratio On/Off:** Setting On displays video on the camera screen in its original ratio.

⑤ Freeze

Freezes the screen. Select **Freeze** again to unfreeze.


⑥ Alarm

Pressing this button while the alarm has been activated resets all NVR outputs, including the built-in buzzer. When an event occurs, the button is enabled. Press the button to turn off the alarm and deactivate it.

⑦ Panic Recording

Activates/deactivates Panic Recording.


⑧ Sequence

Selecting the Sequence icon while in Live mode changes to the sequence mode. To exit, select **Sequence** once more. The  icon is displayed on the upper right part of the screen while Sequence is in progress.

Full Sequence

Displays all channels in sequence while in Live mode (single and split screen settings). In order to use the Full Sequence feature, **Full Sequence** (Display Setup > Sequence > **Mode**) must first be enabled.

e.g.) Full Sequence in 2x2 split screen mode

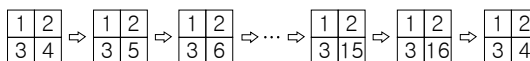

Cameo Sequence

In **Cameo Sequence** mode, only the bottom right screen in a split screen setup changes sequence. In order to use the **Cameo Sequence** feature, **Cameo Sequence** (Display Setup - Main Monitor > Sequence) must first be enabled.

e.g.) Cameo Sequence in 2x2 split screen mode



- If using the **Full Sequence** setting, page numbers appear on the system status area on the upper right part of the screen, next to the Sequence icon.
- Pages are skipped under the following circumstances:
 - If all cameras included in the page are deactivated.
 - If there are no video signals.
 - If the page contains "covert" cameras.
 - If the user does not have permission to view feeds from the cameras.

⑨ Status

Displays the status window for NVR's system and device.

⑩ Select Camera

Displays the selected camera in a single screen format.

⑪ Search Mode

- **Time-Lapse Search:** Select **Search Mode** > **Time-Lapse Search** to search for and play back saved data directly from the record table.
- **Event Log Search:** Select **Search Mode** > **Event Log Search** to search for event logs and play back associated event recordings.

⑫ Setup

Used to access the Setup menu.












⑬ Wizard

Launches the Setup Wizard.
Running the Wizard lets you configure basic settings required for operating the system.

⑭ Status Indication


Displays system status icons.

Status Indication


	Indicates connection to the NVR from a remote program.
	Indicates two-way audio connection between NVR and PC.
	Indicates two-way audio connection between NVR and camera.
	Indicates two-way audio connection among NVR, PC and camera.
	Indicates connection to the NVR using the DirectNDC service.
	Indicates a zoomed in state.
	Indicates Freeze is in use.
	Indicates Sequence is in use.
1 / 4	Indicates the current screen's group.
	Indicates an event monitoring.
	Indicates dewarping is in use.
	Indicates HDD use. The icon to the left is shown if using the overwrite setting. Otherwise, remaining HDD space is shown as a percentage value.

⑮ Live Messages

Display a message to make it easier for users to recognize critical events and system information that happen in real time.

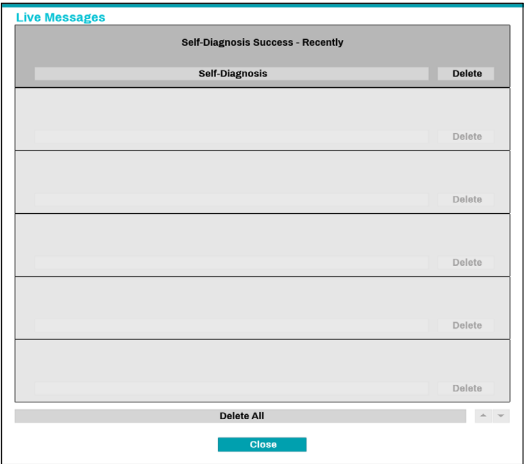

Zoom

Right-click on the mouse to select a channel you wish to zoom in on while in live mode or time-lapse mode. When a zoom frame appears on the selected channel, right-click on the mouse or press the **Enter** button to zoom in. Use the arrow buttons to position the frame. When Zoom is activated,  icon is on the status bar located on the **bottom left** corner of the system.

- ☒ In Full Screen mode, activating Zoom automatically selects the current channel.
- To restore the channel to normal size, press the **Exit Zoom** button again.




- ☒ You can use the mouse to control PTZ cameras. Left-click on the mouse and drag to move the camera in the desired direction and use the mouse wheel to zoom in/out.

PTZ Control

While in Live mode, right-click on a camera and select PTZ from the context menu and then enter PTZ mode. After entering PTZ mode, the P icon will blink in the camera OSD window.

- ☒ Logging in with an account that has **PTZ Control Authority** is necessary in order to control PTZ cameras.
- A message will prompt if there is no PTZ camera displayed on the Live screen.
- To exit PTZ mode, press the **Exit PTZ** button again.



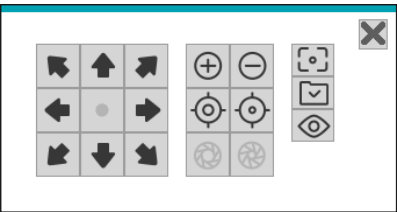




While in PTZ mode, place the mouse pointer close to the bottom edge of the screen to display the PTZ Tools window.




Advanced Settings


Right-clicking on a PTZ camera on the live screen and selecting PTZ mode will bring up the Advanced PTZ menu as shown below. This menu lists **Speed, Auto Pan,** and other advanced PTZ camera control options available for the camera.

Also selecting **Point Move** button moves PTZ camera to the point that the user clicks. Options that are not available for the selected PTZ camera remain inactive.

	PTZ Camera Pan and Tilt
	Zoom In/Out
	Focus Near / Far
	IRIS Open / Close
	One Push
	Set / Move to Preset
	Device Menu supported by the camera

- ☒ The exact PTZ protocol supported by the camera must be specified in order to use the NVR's PTZ controls.
- Drag and drop to reposition the PTZ Tools window.
- Select the  icon to hide the PTZ Tools window.


Dewarping Control (Camera)

While in Live mode, right-click on the mouse to select Dewarping(camera) from the context menu. The  icon will begin to flash on the selected camera's OSD window. You can change the direction by dragging on the mouse. In order to select the type and mode of View Mode, **Video** (Camera - Advanced Setup) must first be enabled.



- This feature is supported only with Fisheye camera connected on the DirectIP protocol.
- Original mode does not support dewarping control feature.
- Configuring this feature requires an authorized user login.

Event Monitoring

When an event occurs, the NVR automatically changes to the camera screen linking event monitoring and shows the  icon on the system status area on the upper right portion of the screen. To use the Event Monitoring feature, navigate to **Display Setup > Event Monitoring**. Event Monitoring remains in effect throughout the entire **Linked Time**. After that, the NVR will return to the previous screen if a new event does not take place. Pressing the **Layout** or a **Camera** button before the end of the **Linked Time** reverts the system to Live mode.

Covert Camera

Use this feature to assign **Covert Camera View** permissions.

Navigate to **Camera Setup > General** and designate cameras as **Covert 1** or **Covert 2**.

- **Covert 1:** Hides images from the camera in Live mode but does indicate the camera's title and status via icons.
- **Covert 2:** The camera is indicated as being inactive. Images from the camera are not shown. Camera title and status icons are not shown.



Users that have a cover **Covert Camera View** are able to view both images from and status icons for all **Covert 1** and **Covert 2** cameras.

Context Menu Access

Right-click on the mouse to access the Context menu.

- **PTZ:** Access PTZ controls.
- **Dewarping (camera):** Dewarps the fisheye camera image.
- **Zoom:** Zoom in.
- **Audio:** Select the audio source and enable audio. (This function supports only in single screen.)



- Camera audio may not be enabled depending on the type of the camera.
- If no audio is set, the submenu of the audio is disabled.

- **Color Control:** Select a channel to display its Color Control window. Adjust the selected camera's brightness, contrast, saturation, and hue settings.
- **Self-Adjusting Video Mode :** Select the image preset (Natural, Vivid, Noise Reduction) and you can control it directly.



Even if two-way audio communication is set up between the NVR and camera, the microphone connected to the NVR will terminate automatically when the microphone on the remote is turned on (The remote microphone takes priority).

- **Information:** Select a network channel to display information about the selected channel's device.
- **Edit Group:** Rearrange the split screen layout.
- **Camera Registration:** Activate Camera Registration mode.
- **Login/Logout:** Log into the account or log out of the account.
- **Live Messages:** Receive the message in real time.

Edit Group

Edit Group lets you customize split screen pages in both Live and Search modes.

- 1 While displaying a split screen page, select the **Edit Group** option from the context menu. A yellow border is drawn around the page. Use the mouse to select a different page.
- 2 Press a **Camera** button or select a camera after pressing the **Menu** button. Selected camera is then loaded on to the selected page. Repeat to assign other channels to the page.
- 3 Press the **Menu** button and then select **Exit Group Edit** to exit.




Edit Group will terminate automatically after 15 seconds of inactivity.


Video Recording

Video recording will only take place if all the connections are made correctly as per information contained in Part 2 of this operation manual.

For more information on video recording settings, refer to the **Record Setup on page 54.**

Panic Recording

Select **Live** or **Search** menu's Panic Recording  icon to commence panic recording on all registered cameras.

To stop panic recording, select the Panic Recording  icon. If the **Panic Recording Duration** option under **Record Setup > General** has been configured, Panic Recording will automatically terminate after the specified duration of time has elapsed. For more information, refer to the **Record Setup on page 54.**



- Panic Recording takes place irrespective of any recording schedule set up by the user.
- Panic Recording video profile from **Record Setup – General** applies to all Panic Recording videos.



Panic Recording will not take place if recording mode is not set to **Recycle** and the HDD has reached 100% of its capacity.



L'enregistrement de panique n'aura pas lieu si le mode d'enregistrement n'est pas **Recycler** ou si le disque dur a atteint 100 % de sa capacité.

Audio Recording

If the Record Audio option under **Record Setup > General** has been enabled the camera will record audio along with video. For more information, refer to the **Stream II on page 51, Record Setup on page 54.**



Check your local laws and regulations on making audio recordings.



Vérifiez les réglementations et les législations locales avant de réaliser des enregistrements audio.

Video Recording Playback

You can play back video recordings by using mouse. Recorded audio can be played by selecting the audio source to link from the context menu.



- Login with an account that has search permission is needed to playback video recordings.
- The initial video playback point in Search mode is the recording's last playback point or the end of the recording data.
- Audio playback of the selected recording is available in full screen mode only.
- Covert protection on cameras also applies to video recording playback.
- Playback of recorded audio is only possible if the audio source selected from the context menu was actually recorded.

Context Menu

While in Search mode, right-click on the mouse to access the Context Menu.

- **Zoom:** Zoom in.
- **Audio:** Select the audio source and enable audio. (This function supports only in single screen.)



- All the audio menu is enabled by default.
- The audio will not play if it is not recorded.
- **Edit Group:** Rearrange the split screen layout.
- **Live Messages:** Receive the message in real time.

All Channel Playback










- 1 Press the **Menu** button while in Live mode.
- 2 Select the Search Mode ► icon and then select **Time-Lapse Search** or **Event Log Search**.
- 3 The selected search mode will be initiated. For more information on data search, refer to the **Part 3 - Search on page 91**.

Part 2 - Configuration

Menu Use


Information contained in this section (Menu Use) applies to all other instructions found throughout Part 2 - Configuration.

Menu Icon

	Use the virtual keyboard to enter text.
	Type the text.
	Open a drop-down menu.
	Delete the item.
	Change the order of table entries.
	Change the range of values.
	Add new items or works.
	Indicate that there are predefined items for convenience.
	Display the submenu or pop-up window. (except for information, error and alert windows)

Login with an ID that has permission to access the setup menu is needed to access and make changes to the Setup menu.

1 While in Live mode, select **Live menu > Setup** using the mouse.

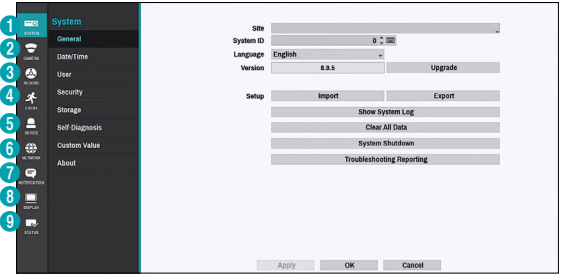

1	System Setup
2	Camera Setup
3	Record Setup
4	Event Setup
5	Device Setup
6	Network Setup
7	Notification Setup
8	Display Setup
9	Status Setup


2 Left-click on the option using the mouse.

3 Change the setting and then select **Apply** or **OK** to save the change.

☒ To apply default settings, select the Default button located on the left bottom corner of the setup window.

Text Input via Virtual Keyboard

Click on the key using the mouse.

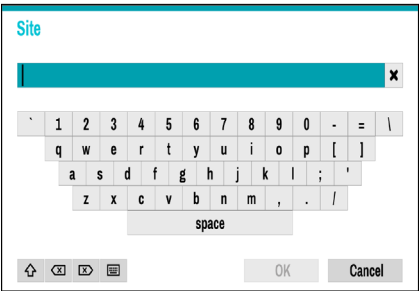

	Toggle case.
	Deletes the character to the left of the cursor.
	Deletes the character to the right of the cursor.
	Converts keyboard.

Batch Assignment

Certain table-format menus such as the shown in the **Camera Setup on page 43** allow you to change the title value. In this case, changing the title value simultaneously changes all other entry values on the same row.

Mouse

Using a mouse makes it easier to configure the settings. A mouse lets you make selections faster and use its wheel to scroll through long menus. You can also use the mouse wheel to increase/decrease numerical values.

System Setup

Refer to the **Menu Use on page 32** for basic information on using the Setup menus.

General

This Setup menu contains general system options.

- **Site:** Used to enter a description about the system's installation site (no description by default). You can edit the information using the virtual keyboard.
- **System ID:** Used to identify the NVR apart from other NVRs.



The default System ID is 0 and can be changed to a value between 0 and 99. The System ID can also be entered using the virtual keyboard.

- **Language:** Choose a language.
- **Version:** Indicates the software version.
- **Upgrade:** Upgrade the system. If NetFS feature is in use, click Upgrade. You can select the **USB Port** or **NetFS**. If the NetFS feature is not in use, you can only select the USB port. Selecting the USB port displays the USB search window. You will then be able to select an upgrade package and upgrade the system. Selecting NetFS displays the list of registered FTP sites. Once the upgrade is completed, the NVR will reboot automatically.

- **Setup:** Exports current NVR settings or imports existing settings. If the NetFS feature is in use, you can export or import NVR settings in the registered FTP site.

- **Import:** Decide whether to import network settings as well. If you do not wish to change the current network settings, do not select **Include Network Setup**.



Selecting **Setup Import** does not change the settings below.

- Time-related settings (Date/Time, Time Zone, and Use Daylight Saving Time)
- Camera-related **Advanced Settings** settings
- Camera-related **Stream** settings (Only if the resolution is different from the camera in exporting)
- Camera-related **Audio** settings

If users and groups are deleted, existing user settings are retained.


- **Export:** Exports the current system settings to a storage device connected to the system's USB port or the registered FTP site in NetFS. You can designate a **File Name** for the export file.



For USB flash memory devices, the NVR supports the FAT32 file format only.



Pour les mémoires Flash USB, le NVR prend uniquement en charge le format de fichier FAT32.

- **Show System Log:** Displays a searchable list of 5,000 most recent system log entries. For more information on types of system log entries, refer to the **System Log Types in the installation manual**. The  icon appears next to log entries originating from a remote source. To export the system log, select the **Export** at the bottom of the screen and then designate a file name.

System Log	
Time	Type
04-18-2022 AM 08:06:05	Setup Begin
04-18-2022 AM 08:06:01	Setup End
04-18-2022 AM 08:05:28	Setup Begin
04-18-2022 AM 08:02:20	Login : admin
04-18-2022 AM 08:00:23	Logout : admin
04-18-2022 AM 08:00:20	Setup End
04-18-2022 AM 07:56:58	Setup Begin
04-18-2022 AM 07:57:03	Self-Diagnosis Success
04-18-2022 AM 07:56:17	Some cameras were added : ((CH1-4))
04-18-2022 AM 07:56:17	Camera Registration succeeded
04-18-2022 AM 07:53:47	Camera Registration mode is on
04-18-2022 AM 07:53:44	Camera Registration canceled
04-18-2022 AM 07:51:14	Camera Registration mode is on
04-18-2022 AM 07:51:05	Camera Registration canceled
04-18-2022 AM 07:47:32	Camera Registration mode is on
04-18-2022 AM 07:47:32	Login : admin

☒ In order to display the system_log.txt file, you must use the correct character encoding settings and use a fixed-width font.

- **Clear All Data:** Erases all recording data. Selecting **Clear All Data** displays a confirmation window. Select **Clear** to proceed.

☒ Before you perform **Clear All Data**, make sure you are not accidentally deleting important data. Erased data cannot be recovered.

- **Clear All Data** does not affect the system log. Instead, the **Clear All Data** event will be added to the log.

- **System Shutdown:** Shuts down the system. When prompted, select **System Shutdown**.

- **Troubleshooting Reporting:** When there is a problem with NVR system, generate reports for troubleshooting.

Troubleshooting Reporting

No.	Time	Reports	X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
			X
</			


- **Holiday:** Designate holidays. On specified holidays, recording takes place according to the holiday recording schedule specified under Record Schedule.

- 1 Select the **+** button at the bottom of the window.
- 2 Select a date.
- 3 Select **OK** to apply and exit.

No.	Date	
		✕
		✕
		✕
		✕
		✕
		✕
		✕

+ OK Cancel



Select the  icon to delete the existing holiday date.

User

Use this option to register users and assign permissions.

Group	User	
Administrator		✕
admin		✕
		✕
		✕
		✕
		✕
		✕
		✕
		✕

+ Group + User

Auto Login: Never
Auto Logout: Never

Apply OK Cancel

- 1 Select **+ Group** and enter a group name. A group name can be up to 15 characters in length.
- 2 Specify the group's permission settings. For more information on permission settings, refer to the **Group Permissions on page 37**.

Group: _____

Authority (All):

- ☒ Shutdown
- ☒ Upgrade
- ☒ Color Control
- ☒ System Check
- ☒ PTZ(Dewarping) Control
- ☒ Alarm-Out Control
- ☒ Covert Camera View

Remote Connection Policy:

Camera is Hidden: Not Using

Schedule: Off

Auto Expiration: 60 minutes

Waiting Period: 20 minutes

OK Cancel

- 3 Select **+ User** and then enter a user name.

E-mail, UPRL File are required to find the Password.

User: _____

Group: Administrator

Password: _____

Confirm: _____

E-mail: _____ Verification ☐ Not Use ☐

Export UPRL...

RTSP/HTTP

☐ Use RTSP/HTTP

Password: <None>

OK Cancel

4 Select a group for the user and then enter a password. The password can be up to 16 characters in length and may include letters, symbols, and numbers. The e-mail address will be used as information on password verification.

5 Select the Export button to create the UPR(User Password Reset) file. The UPR file can be used to finding a password offline. Select the location to save the UPR file and enter the file name.





6 If you wish to use RTSP connection and HTTP API function, set the password. For security, it is recommended that you set a different password for RTSP, HTTP and User. For more information on RTSP, refer to **RTSP on page 78**.

7 Select **OK**.

8 Configure **Auto Login** and **Auto Logout** settings.

9 Select **Apply** or **OK** to exit.




- Group names, user names, passwords and email can be entered using the virtual keyboard. For more information on using the virtual keyboard, refer to the **Text Input via Virtual Keyboard on page 33**
- To delete a registered user or group, select the  icon on the right of the corresponding user/group. **Group Administrator** and User admin cannot be deleted.
- Select the  icon next to Group & User on the top of the screen to delete all groups and users except **Group Administrator** and **User admin** simultaneously.
- A password entry is required to edit existing groups and users.
- Group Administrator's** permissions cannot be changed.
- With the **User admin** account, only the password can be changed.
- When the system starts up, it will automatically log into the account designated under **Auto Login**.
- The system will automatically log out of the account if the duration of inactivity specified under **Auto Logout**.

Group Permissions

Shutdown		May shutdown the system from the system menu.
Upgrade		May upgrade the system from the system menu (System Setup).
Color Control		May adjust each camera's brightness, contrast, saturation, and hue settings.
System Check		May view System Check results.
PTZ(Dewarping) Control		May control PTZ and Dewarping cameras.
Alarm-Out Control		May reset in the event of an alarm-out. Alarm-outs can be reset by pressing the Alarm button on the device or selecting the Alarm-Out Control button on the remote program.
Covert Camera View		May access covert cameras in Live and Search modes.
Audio (Live)		May use the camera audio on remote program and locals (NVR).
Factory Reset (NVR)		May reset the NVR to all its initial factory settings.
Search	Clip Copy	The user who has permission for Clip Copy can perform Clip Copy. If the user does not have permission, Clip Copy is not allowed but only search is allowed.

Setup	Camera Setup	May configure camera settings.
	System Time Change	May change the system's date and time settings.
	Data Clear / Protection	May clear data stored in the system or protect data from being deleted.
	PTZ Setup	May configure PTZ settings.
	Alarm-Out Setup	May configure alarm-out settings.
	Covert Camera Setup	May configure covert camera settings.
	Record Setup	May configure recording settings.
	DirectNDC Setup	May access the NVR and control it remotely via network.
	EventUpload	<ul style="list-style-type: none"> - May upload the video clips when an event occurs. - May configure FTP settings.
	Self-Diagnosis	May configure the NVR self-diagnostic settings.
	Setup Import	May import previously saved NVR settings.
	Setup Export	May export current NVR settings.

Remote Connection Policy

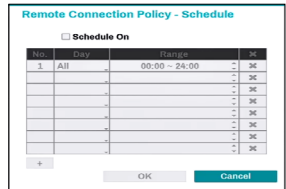
Camera Is Hidden		Select camera channels to hide on the screen when connecting remotely.
Schedule		<p>Select Schedule On and then configure the days of the week and remote connection interval. If not selecting Schedule On, remote connection is allowed regardless of scheduled intervals.</p> 
Use	Auto Expiration	Select Enable to set whether the auto-expiration period works. You can set the retention time when connecting to the NVR from a remote location.
	Waiting Period	Select the limit time for access after automatic expiration.

Security

Use this option to configure security settings.




This is the certificate management menu for network security access. It supports checking the product certificate information, creating the new certificate, exporting and importing certificates.

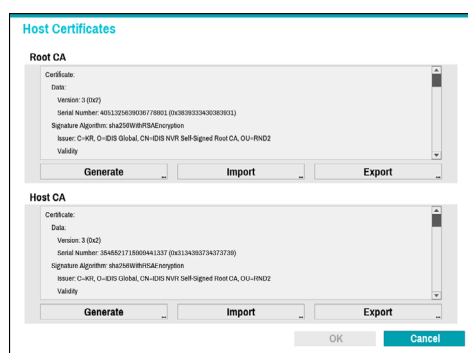

Storage

Use this option to configure storage settings.

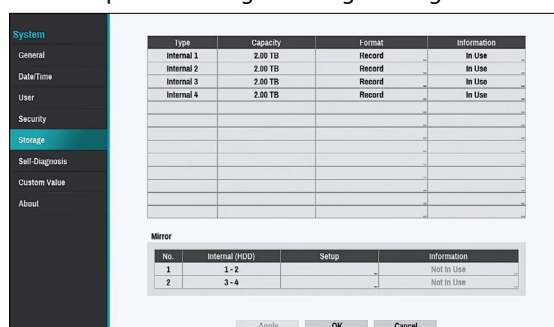

- **Type:** Indicates the type of the installed disk.
- **Capacity:** Indicates the disk's capacity.
- **Format:** If the disk has been formatted, indicates either **Record** or **Not Using**. If you have connected an unformatted storage device, the Use As value will be indicated as **Not Formatted**.
- **Information:** Indicates if the disk is being used for recording purposes. Disks that were used in different systems will show up as **Other**. Select **Information** to check the saved data's time information or select **Delete** to erase the data.



- Select **Format** to prepare the disk as a storage for data recording.
- Disks formatted with Use As set to **Not Using** will not be used for data recording.
- This NVR supports SATA3 HDDs.

Mirror

The NVR supports function that records the same data on the two disks at the same time. You can set up mirroring by selecting **Storage** in the System menu and then selecting **Setup** in the Mirror.



- This function is supported only on models that end with the letter R in their model name.



- This function only works if the two internal hard disks have the same capacity and model.



- If you change the setup related to Mirror, you must reboot the system.
- A disk problem may cause mirroring to stop. The separated disk can be used to reboot the system.



- Si vous modifiez la configuration liée au miroir, vous devez redémarrer le système.
- Un problème de disque peut entraîner l'arrêt de la mise en miroir. Le disque dissocié peut être utilisé pour redémarrer le système.
- **Internal HDD:** Indicates the available disks for mirroring.
- **Setup:** Configure detailed settings related to Mirror.
 - **Mirror:** Click OK to start mirroring. Once mirroring begins (writing data simultaneously to both disks), all existing data on both disks will be erased.

1. Mirror

1 - 2

Mirror

OK

Cancel



- Once mirroring starts, all existing data on both disks will be erased. Please double-check to avoid selecting the wrong disk.
- **Stop:** Once mirroring starts, you can stop it by selecting **Stop** option and then designating disks to delete.

1. Mirror

1 - 2

Stop

OK

Cancel

- **Information:** Indicates if the installed disk is being used for **mirroring** or **Resync** purposes. Select information about mirroring to check the disk's model and serial number.

RAID Configuration Precautions

The following two types of mirroring configurations are supported.

Configuration 1	*R1(1,2), R1(3,4)
	HDDs are supported when connected to internal SATA ports 1, 2, 3, and 4.
Configuration 2	R1(1,2) or R1(3,4)
	HDDs are supported when connected to either internal SATA ports 1 and 2 or ports 3 and 4.

* R1 (1,2) indicates a RAID 1 mirroring setup using hard drives connected to internal SATA ports 1 and 2."



- If you're using RAID 1 (mirroring) and want to remove just one drive and try to reconnect it, it may not work properly. So, you need to remove both mirrorings first, and then set up the mirroring again from the beginning.
- When using mirroring with Configuration 2, ensure that any hard disks not designated for mirroring are not connected to the internal SATA ports.\ Hard disks that are not part of the mirroring setup will not be available for recording. Additionally, if a RAID hard disk becomes disconnected, it may result in unintended behavior, such as an automatic rebuild or system malfunction.

Mirror Configuration Error



- This function is supported only on models that end with the letter R in their model name.


- **RAID Broken :** When some of the HDDs that make up mirroring are in error and then the defective HDDs are replaced, the data cannot be recovered.
- **Degrade :** If the defective HDDs are replaced, the data can be recovered by rebuilding the system. However, performance may be degraded in this case.

Self-Diagnosis

Use this option to configure self-diagnostic settings.




This feature is also supported when connected to the NVR from a remote program.

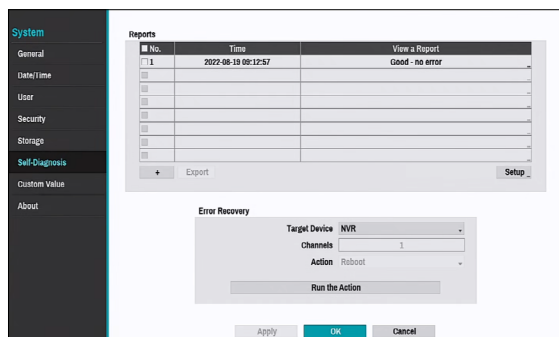

• Reports

- **No.:** Selects which reports to export.
- **Time:** Displays when you started the self-diagnosis.
- **View a Report:** Briefly displays whether the report is “Good” or “Bad”.
- **+**: Click the + icon at the bottom left corner of the screen to run the self-diagnosis.
- **Export:** Saves the reports to a storage device, such as the USB port and NetFS site, by converting them to HTML format. You can export more than one report at a time by selecting multiple reports.

- **Set up** Auto Generating Interval and Check IP Duplicate.

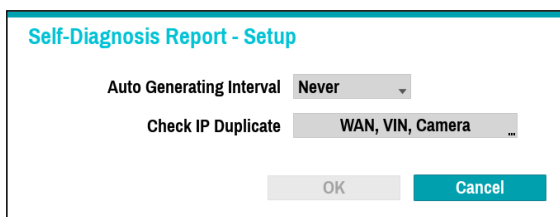

- **Auto Generating Interval:** Select any time period between 6 hours and 7 days.
- **Check IP Duplicate:** Check the IPs of the WAN, VIN, and Camera are network-specific.



- These settings can be periodically checked for IP duplication, but Camera IP duplication checks have a long verification cycle, so you can check the results immediately after self-diagnosis.
- Camera IP duplication checks only the VIN network.



- The reports are stored in up to 24 files. If you have configured **Auto Generating Interval** as one-day period, only the reports from the last 24 days can be viewed.
- If the NVR is turned off, the reports will automatically turn off.
- The reports are organized by recent date and time.


- **Error Recovery:** When a problem is detected on the target device, click the **Run the Action** button to resolve the problem.

- **Target Device.:** Selects which device to run Error Recovery.
- **Channels:** Select the camera channel if a camera is set to the target device.
- **Action:** Select the type of action to run the Error Recovery.
- **Run the Action:** Click the **Run the Action** button when a fail is detected on the target device to resolve the problem.



- Once **Run the Action** function have made to the camera, the camera will reboot automatically.

Part 2 - Configuration

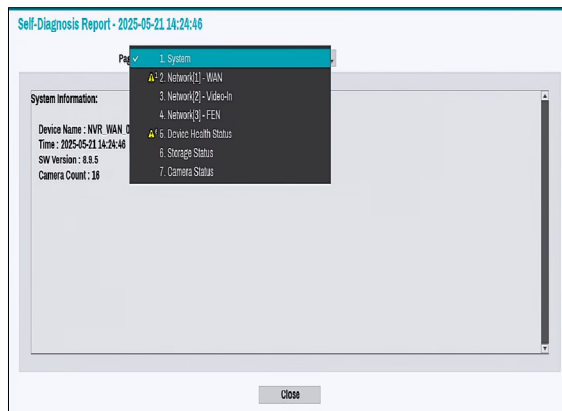

Once you have run failover on the camera, the camera will reboot automatically. By selecting **System**, **Network**, **Device Health Status**, **Storage Status**, **Camera Status**, you can see the brief results of the self-diagnosis for the target device.

 The NVR **self-diagnostic report** can only be viewed in text form.

This feature is also supported when connected to the NVR from a remote program.

We recommend clicking the **Export** button at the bottom of the list, which allows you to view the reports on a PC web browser. We also recommend scanning the self-diagnostic report on a remote program, which allows you to view the reports in HTML format as shown below.

System Information:

- Device Name : NVR_WAN_00032288B526
- Time : 2025-05-21 14:04:48
- SW Version : 8.9.5.140895GA (May, 16 2025)
- Camera Count : 16
- Switch Port : 0

Device Health Status:

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16												
Camera Signal	O	O	O	O	O	O	O	O	O	O	O	X	X	X	X	X												
Recording Fail/Main	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-												
Recording Fail/Sub	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-												
Recording Status	Good																											
Recorded Video	2024-02-17 04:31:45 ~ 2025-05-21 14:25:05																											
Record -> Replay	On																											
Record -> Schedule	On																											
HDD#	Internal 1 : In Use				Internal 2 : In Use				Internal 3 : In Use				Internal 4 : In Use															
Disk Bad	Good (0 %)				Good (0 %)				Good (0 %)				Good (0 %)															
Mirror																												
Mirror Status																												
HDD Temperature	Good (38.0°C)																											
S.M.A.R.T	Good																											
Fan Status	Good (0)																											

Camera Status:

No.	Title	Product	MAC Address	IP Address	Version	Connection	Network Status	Port
1	CAM1	AHD 4MP30	-	-	-	-	-	-
2	CAM2	AHD 4MP30	-	-	-	-	-	-
3	CAM3	AHD 4MP30	-	-	-	-	-	-
4	CAM4	AHD 4MP30	-	-	-	-	-	-
5	CAM5	AHD 4MP30	-	-	-	-	-	-

S.M.A.R.T Attributes #0						
id	flags	current	worst	raw	threshold	name
1	15	111	99	136,140,7,2,0,0	6	Raw_Read_Error_Rate
3	3	98	96	0,0,0,0,0,0	0	Spin_Up_Time
4	50	100	100	109,2,0,0,0,0	20	Start_Stop_Count
5	51	100	100	0,0,0,0,0,0	10	Reallocated_Sector_Ct
7	15	78	60	153,54,224,3,0,0	30	Seek_Error_Rate
9	50	94	94	162,22,0,0,0,0	0	Power_On_Hours
10	19	100	100	0,0,0,0,0,0	97	Spin_Retry_Count
12	50	100	100	225,1,0,0,0,0	20	Power_Cycle_Count
184	50	100	100	0,0,0,0,0,0	99	End-to-End_Error
187	50	100	100	0,0,0,0,0,0	0	Reported_Uncorrect
188	50	100	100	0,0,0,0,0,0	0	Command_Timeout
189	58	69	69	31,0,0,0,0,0	0	High_Fly_Writes
190	34	64	49	36,0,32,36,0,0	45	Airflow_Temperature_Cel
191	50	100	100	0,0,0,0,0,0	0	G-Sense_Error_Rate
192	50	100	100	215,1,0,0,0,0	0	Power-Off_Retract_Count
193	50	100	100	114,2,0,0,0,0	0	Load_Cycle_Count
194	34	36	51	36,0,0,0,19,0	0	Temperature_Celsius
197	18	100	100	0,0,0,0,0,0	0	Current_Pending_Sector
198	16	100	100	0,0,0,0,0,0	0	Offline_Uncorrectable
199	62	200	200	0,0,0,0,0,0	0	UDMA_CRC_Error_Count

Clicking on the S.M.A.R.T status (e.g., 'Good') allows you to view detailed S.M.A.R.T attribute information.

Custom Value

- **Name:** Set the name of system properties to be included in a JSON file on HTTP notifications.
- **Value:** Set the value of system properties to be included in a JSON file on HTTP notifications.

About

- **User agreement:** User agreement for the use of the FEN service. If you agree, we collect device information such as IP address, port and router information to the FEN server.

Camera Setup

Refer to the [Menu Use on page 32](#) for basic information on using the Setup menus.

General

Enable/disable the covert view and rename cameras.

- **Title:** Edit the camera's name.
- **Use:** Set the camera as **Normal**, **Covert 1**, or **Covert 2**.
Live images and video recordings from cameras that have been set as **Covert 1** or **Covert 2** will not be available to users who do not have covert camera access. Setting a camera as **Covert 1** hides its images but does display OSD information about the camera. Setting a camera as **Covert 2** hides its images as well as ODS information about the camera as if it has been deactivated completely.
- **MAC Address:** Displays the camera MAC address.
- **Password:** Set the camera password.

Advanced Setup

Configure security and other advanced camera settings.

No.	Video	Privacy Masking	PTZ	SSL	Reset	Input
1				Unavailable	Reset	
2			On	Standard	Reset	
3				Standard	Reset	
4				Standard	Reset	
5			Off			Auto / Auto
6			Off			Auto / Auto
7			Off			Auto / Auto
8			Off			Auto / Auto
9			Off			Auto / Auto
10			Off			Auto / Auto
11			Off			Auto / Auto
12			Off			Auto / Auto
13			Off			Auto / Auto
14			Off			Auto / Auto
15			Off			Auto / Auto
16			Off			Auto / Auto

- **Video:** Adjust the camera image sensor settings such as white balance and exposure. Configuration options may differ depending on the camera model.
- **Privacy Masking:** Enable/disable and configure privacy masking for the camera.
- **SSL:** Set the camera's security level as **Unavailable**, **Standard**, **High**, or **Very High**. **Standard**, **High** and **Very High** settings apply SSL (Secure Sockets Layer) protection to the camera.

☒ The more cameras security level is set to **Very High**, the more the device loads may occur due to the decoding of received data such as video and audio. This may cause the total recording performance to decrease and not work as you set it to. In this case, you must improve the load by lowering the security level or by lowering the recording bitrate.

- **Reset:** Resets the port or cameras.
 - **Factory Reset :** Control the PoE Switch's port. This option is available when connecting to Video In/ PoE port or using a DirectIP PoE Switch (optional). Select **PoE Reset** to reboot the camera. **It is not supported by video encoders.**
 - **Soft Reset :** Reboots the camera.
 - **Factory Reset :** Resets the NVR to all its initial factory settings. It is supported by DirectIP cameras only.
- **Input:** Select the input type and mode. It is only supported for **analog cameras**.
- **PTZ:** If using an RS-485-compliant camera, configure it for use in PTZ Mode.

- **PTZ Product:** Choose to select the model of installed PTZ device.
- **ID:** Choose to assign an ID to each PTZ device.
- Choose to set up **Baud Rate**, **Data Bit**, **Stop Bit** and **Parity** of the connected device.

☒ Refer to the PTZ device manufacturer's instructions for the proper settings.

☒ Types of configuration options shown vary depending on the PTZ functions supported by the camera.

☒ Numbers shown below Preset, Scan, Pattern, and Tour indicate the numbers of configured functions.

① Preset

Use the buttons below to choose a preset position.

- Directional Buttons (⬅️ ⬆️ ⬇️ ⬅️ ⬆️ ⬇️ ⬅️ ⬆️): Used to tilt and pan the camera.
- **Zoom** (⊕ ⊖): Zoom in and out.
- **Focus** (🔍 🔍): Adjust camera focus to far or near.
- **Speed:** Specify the camera's panning and tilting speed.

- **Set:** Choose a preset number and then enter a name. This saves the current preset under the specified preset number and name.
- **Go to:** Select a preset from the list and then click Go to to move the camera to the selected preset position.
- **Edit:** Used to change the selected preset's name.
- **Remove:** Used to remove the selected preset.

② Scan

Used to set up a profile for moving the camera between two points. At least two presets must be available in order to use the scan feature.

No.	Name	Start	Stop
1	scan1	1	2
2	scan2	2	3
3	scan3	3	4
4			
5			
6			
7			
8			

Set: Used to set up a scan profile.

- **Name:** Enter a name for the scan profile.
- **Start/Stop:** Specify which presets to use as start and stop points.
- **Dwell Time (sec.):** Specify how long the camera will dwell at start and stop positions.
- **Speed/Direction:** Specify scanning speed and direction.
- **Test:** Select a scan profile and then click Test to test it.
- **Edit:** Used to edit the selected scan profile.
- **Remove:** Used to remove the selected scan profile.

③ Pattern

Used to set up a pattern profile for the camera to follow along.

No.	Name
1	pattern1
2	pattern2
3	pattern3
4	
5	
6	
7	
8	

Start recording: Select a pattern number, enter a name for the pattern, and then click **OK** to save the pattern. Move the camera using directional, zoom, and focus buttons and then click **Stop recording** to save the pattern profile. You can record up to two minutes of movement.

- **Directional Buttons** (← ↑ → ↓ ↶ ↷): Used to tilt and pan the camera.
- **Zoom** (⊕ ⊖): Zoom in and out.
- **Focus** (⊕ ⊖): Adjust camera focus to far or near.
- **Speed:** Specify the camera's panning and tilting speed.

- **Test:** Select a pattern profile and then click Test to test it.
- **Edit:** Used to edit the selected pattern profile.
- **Remove:** Used to remove the selected pattern profile.

④ Tour

Used to set up a tour profile of multiple functions in a designated sequence.

No.	Name
1	tour1
2	tour2
3	tour3
4	
5	
6	
7	
8	


Set: Used to set up a tour profile.

No.	Function	Dwell Time (sec.)	Speed
1.	None	1	16
2.	None	1	16
3.	None	1	16
4.	None	1	16
5.	None	1	16
6.	None	1	16
7.	None	1	16
8.	None	1	16

- **Name:** Enter a name for the tour profile.
- **Function:** Indicates the order of the function in the


tour sequence.


- **Dwell Time (sec.):** Specify how long to perform the selected function for.
- **Speed:** Specify the preset speed.
- **Test:** Select a tour profile and then click Test to test it.
- **Edit:** Used to edit the selected tour profile.
- **Remove:** Used to remove the selected tour profile.


 Select **Apply** after setting up a preset, scan, pattern, or tour profile to see images from the concerned camera on the left side of the screen. Selecting **Apply** or **OK** displays a popup screen that indicates whether the profile has been set up successfully.

- ⑤ **PTZ Reset:** Reboots the camera's panning / tilting and zoom settings.
- ⑥ **Home Position:** Specify the camera's home position.
 - **Default:** Uses the factory-default position as the camera's home position.
 - **Custom:** Uses the user-defined position as the home position.
 - Select **Set** to change the home position.
- ⑦ **Auto Run:** Specify which action to take if the camera has not been controlled for the specified duration of time.
- ⑧ **Auto Pan:** Specify the camera's panning direction. When Auto Pan is selected from a remote program, the camera pans in the direction selected here.
- ⑨ **Auto Flip:** Automatically flips the image when the camera tilts past 90° to prevent the objects from appearing upside down.
 - **Digital:** Flips the image left to right or top to bottom.
 - **Mechanical:** Automatically pans or tilts the camera.
 - **Off:** Disables Auto Flip.
- ⑩ **Tilt-Range:** Specify the camera's tilting range.
- ⑪ **Restore:** Specify whether to restore the camera to its last position or function. Enabling this option restores the camera to its last position or function after being restarted.
- ⑫ **Wiper:** Operate the wipers connected to the camera (stop after three round trips).
- ⑬ **Periodic Moving:** Operate the PTZ camera at each operation cycle for the specified schedule period.

Privacy Masking Options

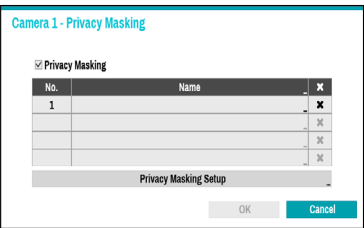


Select **Name** to rename the privacy masking area. Select the  icon to delete the existing privacy masking area. Select **Privacy Masking Setup** to display additional privacy masking area options. You can drag on the area with the mouse to resize it or add up to 4 different areas.

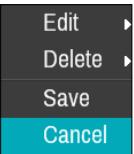

- **Edit:** Rename the selected privacy masking area.
- **Delete:** Delete the selected privacy masking area.
- **Save:** Save the changes and exit the privacy masking area options screen.
- **Cancel:** Exit the privacy masking area options screen without saving the changes.

Image Sensor Options

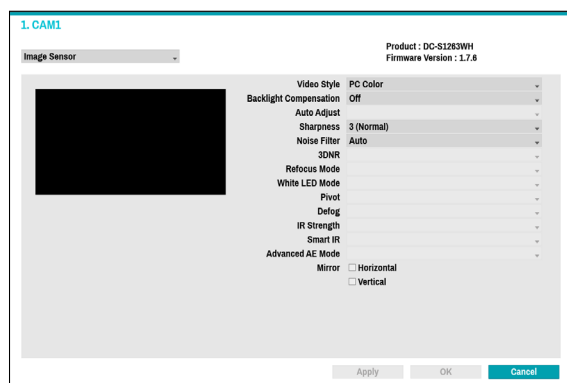


- **Product, Firmware Version:** Displays the camera model name and firmware version.
- **Video Style:** Select **TV1 Color** or **PC Color**.
- **Backlight Compensation:** Enable/disable Backlight Compensation. If enabled, objects are exposed brighter in backlit situations.
- **Auto Adjust:** Selecting **Auto** allows the system to assess the lighting conditions and adjust the setting automatically. Selecting **Manual** allows the user to adjust the setting manually.
- **Sharpness:** Adjust the sharpness level. Adjust the contours to make the images look sharper. Increasing the value raises the sharpness level, but using too high a value can result in unwanted noise.
- **Noise Filter:** Select the noise filter level. Noise filter can reduce the noise in images taken under low-lighting conditions. Increasing the value reduces the noise, but using too high a value can result in blurry images.
- **3DNR :** Enable/disable 3DNR (3D Noise Removal). 3DNR reduces background noise in images taken under low-lighting conditions. 3DNR does not produce blurry images like Noise Filter but can result in ghosting.
- **Refocus Mode :** Readjust the focus of the camera when changing daytime to nighttime or nighttime to daytime.
 - **On/off:** Enable/disable **Refocus Mode**.
 - **DN Mode Shift:** When image of the camera is switched to daytime or nighttime, the focus of the camera will be adjusted.
 - **IR Adaptive Shift:** Readjust the focus of the camera when IR is detected by the camera.
- **White LED Mode:** Clicking on/off enables or disables White LED lighting when motion is detected by the PIR sensor. Also clicking auto allows the system to enable/disable **White LED mode** automatically.
- **Pivot:** Enable this option and choose the direction of the pivot. You can turn the image by 90 degree in the clockwise or counterclockwise direction. This feature is particularly effective when monitoring hallways, passages, and other confined spaces.
- **Defog:** Disables or enables the Defog feature. When it is enabled, image with a fog is adjusted.
- **IR Strength:** Adjust the IR LED's brightness level. Select a brightness level manually between 0% (darkest) and 100% (brightest). Selecting Auto(Smart IR) allows the system to control the IR LED's brightness level automatically.
- **Smart IR:** Help solve the problem of infrared LEDs whitening out images, such as people's faces, when they are too close to the IR LEDs of a night vision camera. In this case, the image is adjusted through AE control.
- **Advanced AE Mode:** Select desired setup mode between **Normal** and **Number-Identification**. In **Number-Identification** mode, when a certain area of images is too bright due to backlight under low lighting conditions and it causes the other area to be too dark, this function provides the other area of images brightly and clearly by blocking the backlight in the certain area. Dark parking lot entrances and gas station entrances at night, for example (Local Exposure compensates for the bright light coming from incoming vehicle headlights and makes it possible to see the license plates). When setting to the **Number-Identification** mode, some option settings will be adjusted automatically, and you cannot change them as long as the Setup Mode is not changed.
- **Mirror:** Select **Horizontal** or **Vertical** to flip the image horizontally and/or vertically.



Select **Apply** after setting up a camera to see images from the concerned camera on the left side of the screen. Selecting **Apply** or **OK** displays a popup screen that indicates whether the camera has been set up successfully or not.


White Balance Options

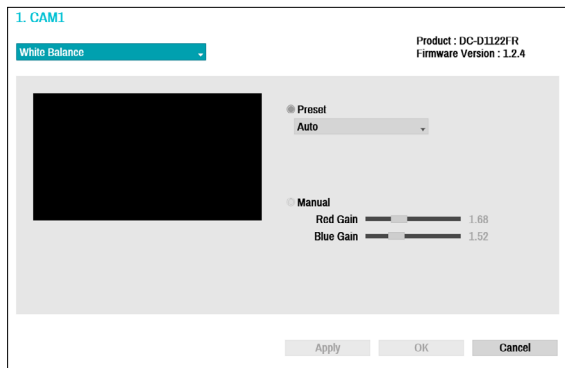

- **Preset:** Use preconfigured white balance settings.
 - **Auto:** Allow the system to adjust the white balance automatically. The system will assess the lighting conditions and adjust the white balance automatically.
 - **Incandescent - Fluorescent Cold:** Select a lighting type to apply the appropriate white balance.
- **Manual:** Adjust the white balance manually. Adjust Red and Blue gain values. Greater the value, greater the intensity of the corresponding color.

☒ Select **Apply** after setting up a camera to see images from the concerned camera on the left side of the screen. Selecting **Apply** or **OK** displays a popup screen that indicates whether the camera has been set up successfully or not.

Exposure Options

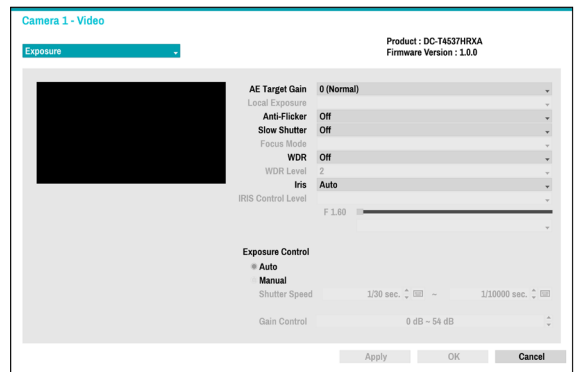


- **AE Target Gain:** Specify exposure compensation's target gain. Exposure is compensated automatically based on the specified target gain. Higher the gain, brighter the images.
- **Local Exposure:** Activate Local Exposure. Use Local Exposure on images that appear too dark due to backlighting conditions and on images containing over-exposed sections. Greater the value, clearer the image. e.g.) Dark parking lot entrances and gas station entrances at night (Local Exposure compensates for the bright light coming from incoming vehicle headlights and makes it possible to see the license plates).
- **Anti-Flicker:** If the lights in the area where the camera is located use alternating current, specify the frequency of the lights to minimize flickering. Matching the frequencies can eliminate flickering completely. (NTSC: 60Hz, PAL: 50Hz).
- **Slow Shutter:** Activate Slow Shutter. The slow shutter mode functions only under low lighting conditions. When the slow shutter mode is enabled, images are displayed bright even under the low-lighting conditions. There may be a difference in the way it functions depending on the camera model. See the camera user's manual for details.
- **Focus Mode:** Used to change the focus movement format as Auto/Manual/Semi-Automatic. It may not be supported depending on the device.
- **WDR:** Disables or enables the WDR (Wide Dynamic Range). When the very dark and very bright areas exist simultaneously on the screen, WDR allows you to recognize the both areas.

- **IRIS:** Depending on the camera type, the user can select DC-IRIS or P-IRIS.
 - **DC IRIS**
 - **OFF** : Select this if a manual IRIS lens is mounted on the camera.
 - **DC-IRIS (Auto)** : Select THIS IF A DC-type auto IRIS lens is mounted.
 - **P-IRIS**
 - **P-IRIS (Auto)** : The system will assess the lighting conditions and adjust the openness of IRIS automatically.
 - **P-IRIS (Fix)** : Use the slider to select the desired openness of IRIS. Select the most suitable value for the lighting conditions in the area where the camera is located.
- **IRIS Control Level:** Adjust the openness of the lens IRIS. The larger levels look brighter, the smaller levels look darker. (DC-IRIS (Auto) type only)
- **Exposure Control:** Adjust Shutter Speed and Gain. This option is available only when **Anti-Flicker** and **Slow Shutter** are both set to **Off**.
 - **Auto:** The system will assess the lighting conditions and adjust the shutter speed and gain automatically.
 - **Manual:** Use the slider to select the desired shutter speed and gain. Select the most suitable minimum and maximum shutter speeds and gains for the lighting conditions in the area where the camera is located. (1/30 to 1/8000)


☒ Select **Apply** after setting up a camera to see images from the concerned camera on the left side of the screen. Selecting **Apply** or **OK** displays a popup screen that indicates whether the camera has been set up successfully or not.

Day & Night Options

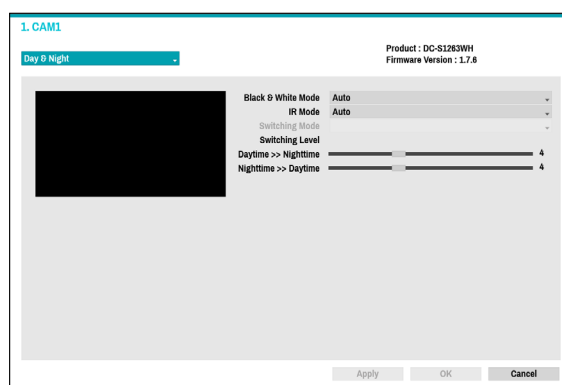

- **Black & White Mode:** Display the images in grayscale for greater clarity in low-lighting conditions.
 - **On/Off:** Enable/disable **Black & White Mode**.
 - **Auto:** Allow the system to enable/disable **Black & White Mode** automatically.
 - **Schedule:** Set up the **Black & White Mode** schedule. **Black & White Mode** is disabled for all days and times that are designated as **Daytime** in the schedule and is enabled at all other times.
 - **IR Mode:** **IR Mode** blocks out the infrared spectrum. You can ensure clear images at all times by blocking out the infrared spectrum in high-lighting conditions and allowing the infrared spectrum to pass through in low-lighting conditions.
 - **Daytime Mode/Nighttime Mode:** Enable/disable **IR Mode**.
 - **Auto:** Allow the system to enable/disable **IR Mode** automatically.
 - **Schedule:** Set up the **IR Mode** schedule. **IR Mode** is disabled for all days and times that are designated as **Daytime** in the schedule and is enabled at all other times.
- ☒ Some camera models may not support the **Schedule** function.
- **Switching Mode :** Changes the switching mode of daytime and nighttime. In normal mode, daytime/nighttime is switched through the amount of light received by the ambient light sensor. In advanced mode, it is switched through the amount of light and the analysis of the camera video.
 - **Switching Level :** Controls the changing time of daytime / nighttime mode, depending on the Switching Level. The higher the value is, day / nighttime mode is changed under high-lighting conditions. Also the lower the value is, day / nighttime mode is changed under low-lighting conditions.

View Options

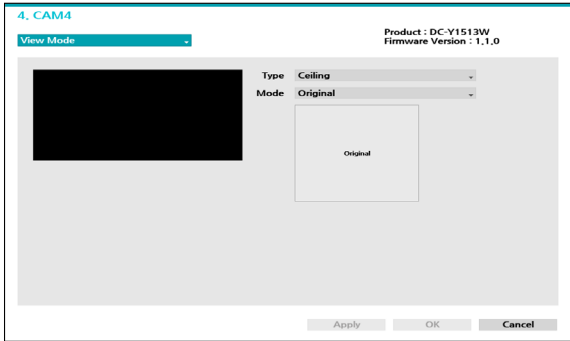


- **Type:** Selects the camera view.
- **Mode:** Selects the screen layout in live mode.




- Dewarping feature is not supported when mode is set to the original.
- When changing the view mode, the resolution will be applied automatically.

Miscellaneous

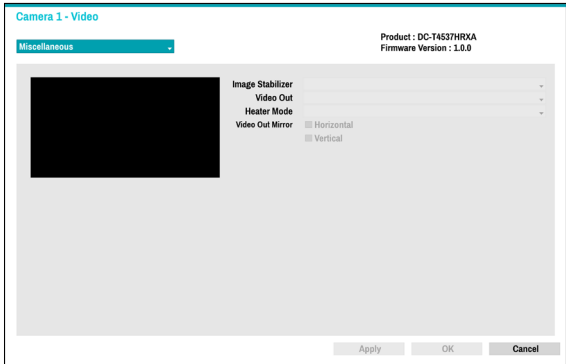


- **Image Stabilizer:** Activate Image Stabilizer. The Image Stabilizer reduces blurring caused by camera shake that results from external conditions such as the wind.
- **Video Out Mirror:** If the video output is CVBS, the screen can be inverted.
- **Heater Mode:** Set whether to use the heater. If On, the heater will operate if the camera's temperature is lower than the heater operating temperature. If Off, the heater will not operate regardless of temperature.

Stream I

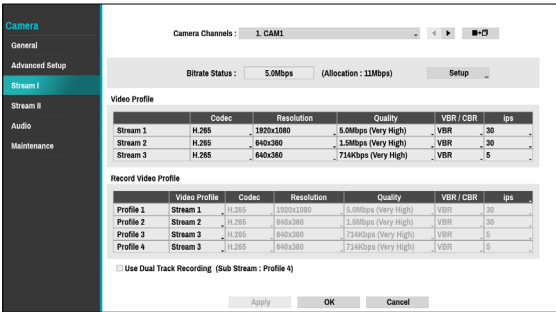

Configure the camera's live and recording resolution, codec, picture quality, transfer speed, and ips speed settings.

- **Camera Channels:** It's possible to configure a unique video profile for each camera.
- **Bitrate Status:** Display the highest value of stream. Click the Setup button to change the allocation for each channel. For more information on bitrate, refer to [Camera View Buttons on page 18](#).
- : Apply the video profile settings of the camera selected under Camera Channel to a different camera.
- **Video Profile:** Check the current Live video picture quality and edit remote video profile settings.
- **Record Video Profile:** Set up 4 recording quality profiles.

- **Video Profile:** Select **Stream 1**, **Stream 2**, **Stream 3**, or **Custom** (available from Record Video Profile only).
 - **Codec:** Supports H.264 and H.265.
 - **Resolution:** Select a resolution supported by the camera. Maximum available resolution is chosen automatically based on the selected video profile.
 - **Quality:** Assign different Quality settings to different cameras.
 - **VBR/CBR:** Select **VBR** or **CBR**. Transmitted data size varies depending on the amount of movements in the images with **VBR** but is fixed with **CBR**.
 - **ips:** Select a value between 1 and 30. Maximum **ips** is determined automatically based on the selected video profile.
- **Use Dual Track Recording:** Set to record with the video profile value (main stream) set in the schedule and record with the profile 4 value (sub stream) at the same time.



- It displays as below when recording on a network video recorder.
 - If the screen layout is less than 3x3, video profile (main stream) is displayed and if it is larger than 3x3, profile 4 (sub stream) is displayed.
 - If the channel is larger than 3x3 size on the screen layout such as 1+7 and 1+12, the video profile (main stream) is displayed first but otherwise the profile 4 (sub stream) is displayed first.
- This function is supported only for cameras supporting dual recording function.

Stream II

No.	Failover Profile	Intelligent Codec	MAT	Sensor Mode
1	Profile 1	On	Off	Normal
2	Profile 1	On	Off	30 ips
3	Profile 1	On	Off	4 : 3 / 30 ips
4	Profile 1	On	Off	Normal
5	Profile 1	Off	Off	Normal
6	Profile 1	Off	Off	Normal
7	Profile 1	Off	Off	Normal
8	Profile 1	Off	Off	Normal
9	Profile 1	Off	Off	Normal
10	Profile 1	Off	Off	Normal
11	Profile 1	Off	Off	Normal
12	Profile 1	Off	Off	Normal
13	Profile 1	Off	Off	Normal
14	Profile 1	Off	Off	Normal
15	Profile 1	Off	Off	Normal
16	Profile 1	Off	Off	Normal

Configure the camera's failover profile, intelligent codec and MAT settings.

- **Failover Profile:** Select a video profile for the smart failover recording.
- **Intelligent Codec:** Lower bitrate by using the intelligent codec.



- Some camera models may not support the Intelligent Codec function.
- When using intelligent codec function, the start of some functions, such as clip copy or clip attachment can be changed to an earlier point than the selected point.
- **MAT Setup :** Select the MAP Setup option to use the **MAT (Motion Adaptive Transmission)** function during video transmission and recording.
- When the MAT (Motion Adaptive Transmission) function is active, the associated VA device may not work properly.
- It is recommended that you do not use the MAT function of the associated camera to increase the accuracy of the image analysis.
- Some camera models may not support the MAT function.

* MAT function(Motion Adaptive Transmission) reduces bandwidth overload and saves storage capacity by reducing the frame rate of the video during periods of inactivity. The user can select the period of sustained inactivity which triggers this function by adjusting Inactivity Period.

MAT

☐ MAT

Sensitivity

Inactivity Period

Frame Rate

Stream 1

Stream 2

Stream 3

Custom

3

10 sec.

5 ips

5 ips

5 ips

5 ips

OK

Cancel

- **Sensitivity** : Set the motion detection sensitivity. Higher values will result in more sensitive motion detection.
- **Inactivity Period** : Set the Inactivity Period. If motion is not detected for the duration of time specified, video is transmitted and recorded using the frame rate designated below until movement is detected again.
- **Sensor Mode**: Set the camera resolution to 16:9, 4:3. Depending on the mode you have set, the resolution that can be set in the stream section changes.

Audio

Configure audio recording settings for all cameras simultaneously.

No.	Audio
1	UNKNOWN
2	UNKNOWN
3	G.711 u-Law
4	G.711 u-Law
5	None
6	None
7	None
8	None
9	None
10	None
11	None
12	None
13	None
14	None
15	None
16	None

Camera - Audio

Associated Audio In: Audio In 1

Audio Codec: ADPCM 16KHz

☒ Audio In

Device: Line-In

Auto Detection: ☐ Use

Volume Control: Manual

Volume: 8

Noise Filter: Off

☒ Audio Out

Volume: 8

OK Cancel

- **Associated Audio In**: Associates the selected audio channel with the camera.
- **Audio Codec**: Select an audio codec. (G.711 u-Law, G.711 a-Law, G.722, ADPCM 16KHz, G.726 or OPUS 16KHz)



The supported audio codec types may vary depending on the camera model.

- **Audio In**
 - **Device**: Select an audio input source (microphone, line-in or HDMI) and then adjust the volume.
 - **Auto detection**: Detects the audio input and automatically selects the audio-in device.
 - **Volume Control**: Adjust the volume manually or automatically. Select the **Auto** option to adjust the volume automatically depending on the surrounding circumstances.
 - **Volume**: Adjust the volume manually by using the slider.
 - **Noise Filter**: reduces the environmental noise and enhances the voice. If you turn on the noise filter, the sound may be distorted somewhat. We recommend that you do not use this function in a loud place because it may degrade performance.
- **Audio Out**: Adjust the volume.



Cameras do not feature built-in audio amplifier units and therefore require the user to purchase a speaker system with a built-in amplifier separately.

Maintenance

When using NetFS, select Firmware Upgrade. You can select USB port or NetFS. If not, you can only select USB port.

Select USB port to display USB search window and then select the corresponding upgrade package from the storage device connected to the NVR's USB port. After selecting an upgrade package, select Apply to upgrade the camera. Camera settings can be imported or exported.

No.	Product	Version	Import	Export	Firmware Upgrade	
1	VDR-10214R0	1.0.0				<input type="checkbox"/>
2	DC-S8186HDX-A	1.1.0				<input type="checkbox"/>
3	DC-T374SHDXA	1.1.0				<input type="checkbox"/>
4	UNKNOWN	1.2.0				<input type="checkbox"/>
5						<input type="checkbox"/>
6						<input type="checkbox"/>
7						<input type="checkbox"/>
8						<input type="checkbox"/>
9						<input type="checkbox"/>
10						<input type="checkbox"/>
11						<input type="checkbox"/>
12						<input type="checkbox"/>
13						<input type="checkbox"/>
14						<input type="checkbox"/>
15						<input type="checkbox"/>
16						<input type="checkbox"/>

Upgrade

Apply OK Cancel



- If an upgrade attempt fails, an upgrade failure message will be displayed. Refer to **Error Code Types in the installation manual** for more details.
- The camera will reboot after the upgrade and then reconnect automatically.

Record Setup

Refer to the **Menu Use on page 32** for basic information on using the Setup menus.

General

Configure general recording settings.

The screenshot shows the 'Record' menu with 'General' selected. The settings are as follows:

- ☒ Recycle
- ☐ Record Audio
- Event Record Dwell: 5 sec.
- Auto Deletion: Dwell (slider from 0 to 999 days)
- ☒ Recording Failover Service
- ☒ Use Panic Recording
- Panic Recording Duration: No Limit
- Video Profile: Profile 1

Buttons at the bottom: Default, Apply, OK, Cancel.

- **Recycle:** When the recording disks become full, the system overwrites existing data with new data, starting with the oldest first. If **Recycle** is disabled, recording will simply stop when the recording disks reach their maximum capacity.
- **Record Audio:** The camera will record audio along with video.
- **Event Record Dwell:** If linked recording is designated as an event-triggered action, recording takes place for the duration specified under this setting.
- **Auto Deletion:** Configure this option to delete recording data automatically after the specified number of days has elapsed.
 - **Dwell:** Recording data will be stored on the NVR for the specified number of days and then deleted automatically. It can be set from 1 day to a maximum of 999 days.



- To disable Auto Deletion, select **Never**.
- Recording data are deleted automatically at midnight and will be deleted even if the system reboots or the Auto Deletion setting has been changed.



- Pour désactiver la suppression automatique, choisissez **Jamais**.
- Les données d'enregistrement sont supprimées automatiquement à minuit et seront supprimées même si le système redémarre ou si le paramètre de suppression automatique a été modifié.

- **Recording Failover Service:** When a network failure is restored, videos stored on the camera SD memory card can be recorded on the NVR.




Data from the camera SD memory card can not be recorded to the NVR if the recording failover service function is not selected.

- **Use Panic Recording:** Enable/disable Panic Recording.
- **Panic Recording Duration:** Disable Panic Recording automatically. Select between 5 mins and 1 hr. If you do not wish to disable the feature automatically, select **No Limit**.
- **Video Profile:** Select a recording profile value for Panic Recording.

Advanced Setup


Quota Based Time

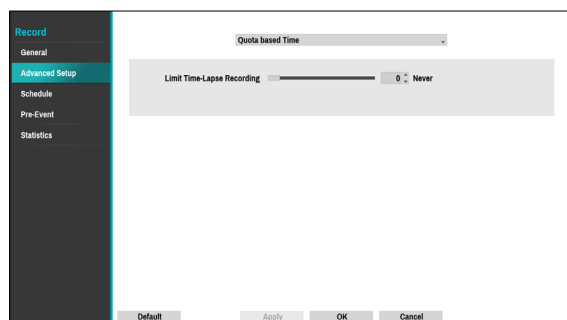


- Limit Time-Lapse Recording:** You can store event recording data for longer. If you do not wish to use **Limit Time-Lapse Recording**, select **Never**. This function is activated when data has been stored for longer than as configured because the recording disk has sufficient capacity and saves new data by overwriting **Time Lapse Recording** data that are older than as specified under Recycle mode.
- ☒ If the recording stored on the disk is shorter than the duration specified under **Limit Time-Lapse Recording**, the older of **Event Recording** or **Time Recording** data is deleted first.
- The system's recording time may change depending on recording quality, resolution, motion, and other configurations made by the user. The duration specified under **Limit Time-Lapse Recording** may not be guaranteed in certain situations.

Quota Based Size


Cameras and disks are grouped to enable recording according to the set ratio.

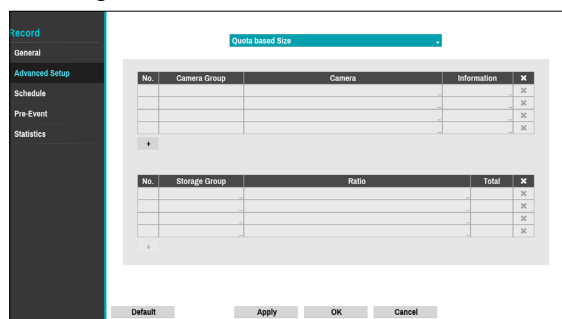


Click the + icon at the bottom left corner of the Camera Group list table to group the cameras by specifying the camera numbers as below.

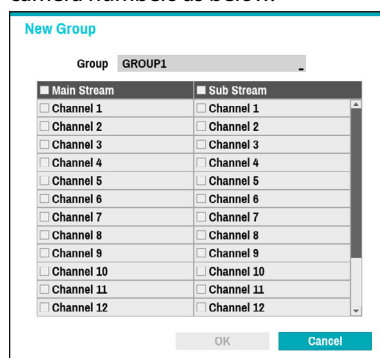


Click the + icon at the bottom left corner of the Storage Group list to create a separate storage group by setting the recording storage space of each camera group.

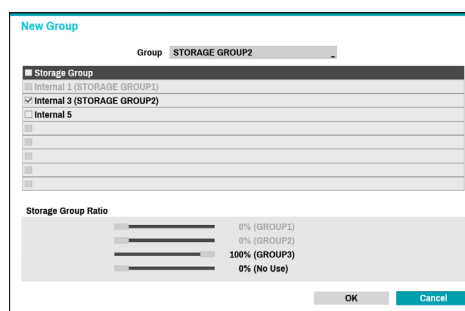

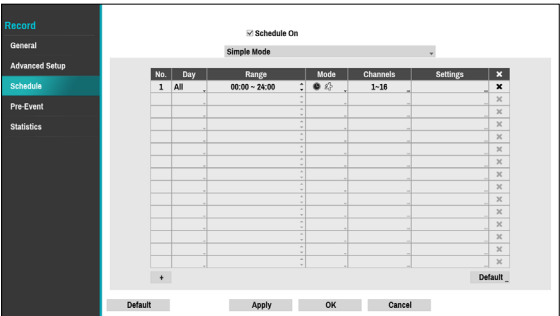

Schedule

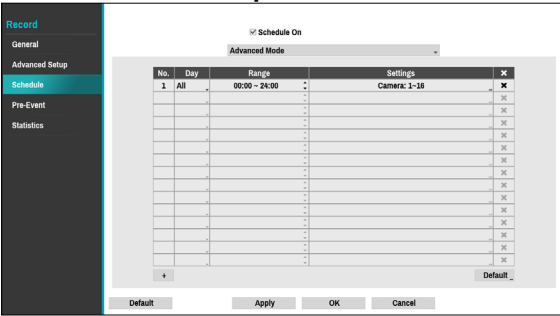


<Simple Mode>



<Advanced Mode>











Disabling **Schedule On** suspends schedule recording regardless of the schedule and displays the  icon on the upper left corner of each camera screen. Pressing the **Panic Record** button displays the  icon and commences panic recording.

Set Record Schedule mode as **Simple Mode** or **Advanced Mode**. **Advanced Mode** allows you to configure a unique recording schedule for each event. Select the  icon to delete a schedule.


- ☒ Changing the recording schedule mode suspends all active event-linked actions.
- Select the + button on the bottom left of the screen to add a schedule. Select **Day** to specify the **Day** setting or select **All**. Select **Scope** to specify the time frame.

Simple Mode Options


- **Mode:** Select **No Record**, **Time**, **Event**, or **Time & Event**.

No Record	Unless the Panic Record button is pressed, no recording will take place during the scheduled time frames on the scheduled days.
Time	The  icon appears on the upper left corner of the screen. The  icon appears at scheduled times to indicate recording is in progress.
Event	<p>The  icon appears on the upper left corner of the screen. The  icon appears when the specified event occurs to indicate recording is in progress.</p> <p><input checked="" type="checkbox"/> If Pre-Event is enabled, the  and  icons appear when recording is not in progress, or the  and  icons appear when an event occurs and recording is in progress.</p>
Time & Event	The  icon appears on the upper left corner of the screen and recording commences as per the video profile selected for time under Setup . When an event occurs, the icon changes into  icon and recording commences as per the video profile selected for events under Setup .

- **Channel:** Select which cameras to apply the schedule to.
- **Settings:** Select to configure default recording profile values for Time Lapse and Event Recording modes.

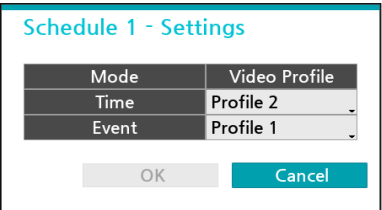

If a camera supporting the Dual Track Recording function (Main and Sub stream) is in use, the following icon will be displayed.

	Recording both mainstream and substream
---	---

	Recording one of the mainstream and substream
	Failed to record both mainstream and substream

Advanced Mode Options

Select to configure event types and video profiles.

- **Type:** Event-specific and time recording icons are as follows:

	Time Lapse (Time)		Network Alarm
	Alarm-In		Recording Fail
	Motion		Tampering
	Video Loss		Text-In

- **Video Profile:** Configure the profile to use for recording.
 - **Dwell:** Specify how long to record for after a corresponding event occurs.
- ☒ • When multiple schedules are applied to a single channel, the settings of the most recently configured schedule will be applied.
- Channels not included in the current schedule will follow the previous schedule. However, if the channel was not included in any previous schedules, recording for that channel will not occur.
 - If multiple events take place on a specific channel and different **Video Profile** and **Dwell Time** settings apply, highest settings apply to all event-linked recordings.

Pre-Event

When an event occurs, enabling this option includes the specified duration prior to the event in the event-triggered recording.

No.	Video Profile	Dwell
1. CAM1	Profile 1	00 min, 05 sec.
2. CAM2	Profile 1	00 min, 05 sec.
3. CAM3	Profile 1	00 min, 05 sec.
4. CAM4	Profile 1	00 min, 05 sec.
5. CAM5	Profile 1	00 min, 05 sec.
6. CAM6	Profile 1	00 min, 05 sec.
7. CAM7	Profile 1	00 min, 05 sec.
8. CAM8	Profile 1	00 min, 05 sec.
9. CAM9	Profile 1	00 min, 05 sec.
10. CAM10	Profile 1	00 min, 05 sec.
11. CAM11	Profile 1	00 min, 05 sec.
12. CAM12	Profile 1	00 min, 05 sec.
13. CAM13	Profile 1	00 min, 05 sec.
14. CAM14	Profile 1	00 min, 05 sec.
15. CAM15	Profile 1	00 min, 05 sec.
16. CAM16	Profile 1	00 min, 05 sec.

There is no event mode scheduled in record schedule list.
Add event mode schedule in Record Schedule setup for pre-event recording.

Default Apply OK Cancel

- **No.:** Select which cameras to apply Pre-Event to.
 - **Video Profile:** Select a video profile for the recording.
 - **Dwell:** Specify the duration of pre-event recording data.
- ☒ • If no event mode schedule exists in the schedule, a warning message prompting you to add an event mode schedule will be displayed.
- The warning message will appear even in **Time & Event** mode.

Statistics

Displays the throughput and recordable time that is being recorded depending on the camera and storage capacity by each group set in the NVR.



Results may vary depending on camera settings or video conditions.

Storage Calculator

You can check recordable time by setting the throughput and capacity by each camera group.

Click **Calculate** button to calculate the capacity and throughput by camera group of storage calculator and display the recordable time.

Statistics

- **Camera Group:** Indicates the name of the camera group.
- **Throughput:** Indicates the throughput of all cameras in the camera group. It is based on the longest accumulated time unit. Clicking ... icon under **Throughput** tab displays the throughput that accumulates data by camera group, showing data throughput in terms of average duration, as shown below.

GROUP1 - Throughput

No.	AVG. (1minute)	AVG. (1hour)	AVG. (1day)	AVG. (1week)
Total	2.7 MB/sec.	2.7 MB/sec.	2.8 MB/sec.	2.7 MB/sec.
1 (Main)	188 KB/sec.	200 KB/sec.	203 KB/sec.	201 KB/sec.
1 (Sub)	188 KB/sec.	200 KB/sec.	203 KB/sec.	201 KB/sec.
2 (Main)	101 KB/sec.	101 KB/sec.	106 KB/sec.	104 KB/sec.
2 (Sub)	101 KB/sec.	101 KB/sec.	106 KB/sec.	104 KB/sec.
3 (Main)	126 KB/sec.	126 KB/sec.	134 KB/sec.	133 KB/sec.
3 (Sub)	126 KB/sec.	126 KB/sec.	134 KB/sec.	133 KB/sec.
4 (Main)	86 KB/sec.	87 KB/sec.	88 KB/sec.	87 KB/sec.
4 (Sub)	86 KB/sec.	87 KB/sec.	88 KB/sec.	87 KB/sec.
5 (Main)	61 KB/sec.	60 KB/sec.	62 KB/sec.	62 KB/sec.

Export Close

- **Capacity:** Indicates the sum of all storage capacity in the camera group. Click ... icon under **Capacity** tab to calculate the capacity and throughput by each group and display the remaining time for recording.

ALL CAM - Capacity

HDD	Capacity	Free Space	Throughput	Time remaining (Until overwritten)
Total	4.00 TB	3.05 TB	-	-
Internal 1	4.00 TB	3.05 TB	-	-

Export Close

- **Recordable Time:** It calculates the throughput and capacity of the camera group and displays the recordable time.
- **Reset:** Initializes accumulated throughput data used by statistics.

Event Setup

Refer to the **Menu Use on page 32** for basic information on using the Setup menus.

System Event

Use this option to configure Monitoring settings.

The screenshot shows the 'Event' menu with 'System Event' selected. The settings table is as follows:

Event	Settings	Actions
System	Never	<input type="checkbox"/>
Boot Up		<input type="checkbox"/>
Restart		<input type="checkbox"/>
Shutdown		<input type="checkbox"/>
Panic Record		<input type="checkbox"/>
Check Recording	Off	<input type="checkbox"/> <input type="checkbox"/>
Check Alarm-In	Off	<input type="checkbox"/> <input type="checkbox"/>
Disk Almost Full	99 %	<input type="checkbox"/> <input type="checkbox"/>
Disk Full		<input type="checkbox"/> <input type="checkbox"/>
Disk Partially Almost Full	80 %	<input type="checkbox"/> <input type="checkbox"/>
Disk Partially Full		<input type="checkbox"/> <input type="checkbox"/>
Disk Bad	50 %	<input type="checkbox"/> <input type="checkbox"/>
Disk Temperature	-10 °C / 70 °C ~	<input type="checkbox"/> <input type="checkbox"/>
Disk S.M.A.R.T.		<input type="checkbox"/> <input type="checkbox"/>
Fan Error		<input type="checkbox"/> <input type="checkbox"/>
Storage Disconnected		<input type="checkbox"/> <input type="checkbox"/>
Disk Config Change		<input type="checkbox"/> <input type="checkbox"/>
No Storage Found		<input type="checkbox"/> <input type="checkbox"/>
Consecutive Invalid PW		<input type="checkbox"/> <input type="checkbox"/>
RAID Broken		<input type="checkbox"/> <input type="checkbox"/>

Buttons at the bottom: Default, Apply, OK, Cancel.

- **Settings:** Configure when and what the system should monitor for.
- **Actions:** Configure alarm-out (NVR alarm-out channel, NVR beep, camera alarm-out channel) and notification (email, LAN1 through 5, push, HTTP, alert window) settings.

Monitoring Options

System	Define monitoring times. If self-diagnosis is not performed on a regular basis, the system will assume an error.																																																																																
Bootup, Restart, Shutdown	Define bootup, restart and shutdown actions.																																																																																
Panic Record	Define panic recording actions.																																																																																
Check Recording	<div><p>The system will assume an error if the system has been scheduled to record normally but recording does not take place during scheduled intervals.</p><div><div><input checked="" type="checkbox"/></div><div>Select Schedule On and then configure the days of the week, times, and monitoring interval. Select the + button on the bottom left of the screen to add a schedule. Select ✕ icon to delete the schedule.</div></div><div><div><div>Check Recording</div><div><div><input type="checkbox"/> Schedule On</div><div><input type="checkbox"/> Always Report</div></div><table><thead><tr><th>No.</th><th>Day</th><th>Range</th><th>Interval</th><th>✕</th></tr></thead><tbody><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr><tr><td></td><td></td><td>-</td><td>-</td><td>✕</td></tr></tbody></table><div><div>+</div><div>OK</div><div>Cancel</div></div></div></div></div>	No.	Day	Range	Interval	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕			-	-	✕
No.	Day	Range	Interval	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
		-	-	✕																																																																													
Check Alarm-In	The system will assume an error if the alarm-in status does not change during the specified monitoring interval while alarm-in is active.																																																																																
Disk Almost Full	Generates an event if the disk reaches the specified capacity (80% to 99%).																																																																																
Disk Full	Generates an event when all disks reach their maximum capacity.																																																																																
Disk Partially Almost Full	Generates an event when a disk in one of multiple quota groups reaches the specified capacity (80% to 99%).																																																																																

Disk Partially Full	Generates an event when a disk in one of multiple quota groups reaches the specified capacity.
Disk Bad	Generates an event when the specified percentage of the disk becomes damaged. Set to between 10% and 90% in 10% intervals.
Disk Temperature	Specify high/low threshold temperature. If the temperature of any storage device is below the set low temperature threshold or above the high temperature threshold, the system will issue an alert. (Depending on the HDD model, performance may degrade in low temperature environments.)
Disk S.M.A.R.T.	Monitors disks that support S.M.A.R.T. and notifies the user if a disk error is detected.
Fan Error	Notifies the user when the fan inside the system malfunctions.
	Notifies the user if the storage becomes disconnected while in use.
Disk Config Change	It will be highlighted when the NVR reboots after the hard disk drive has been replaced.
No Storage Found	It will be highlighted when no hard disk drive has been connected.
Consecutive Invalid PW	It will be highlighted when login fails by entering a wrong password for consecutive attempts.
RAID BROKEN	It will be highlighted when the mirroring configuration is broken. (This function is supported only on models that end with the letter R in their model name.)
Degrade	It will be highlighted when one of the HDDs composing mirroring is in error. (This function is supported only on models that end with the letter R in their model name.)



- For system events, only an e-mail notification of actions can be selected.
- In order to use the Notify(Callback) feature, the NVR must be registered to the remote program on the receiving PC's end.
- For more information on RAID Broken and Degrade, refer to the **Mirror Configuration Error on page 40.**

Camera System

A list of events that occur in the camera except for video analysis.

Event

List of events that occur in camera except video analysis

Video Loss
Event that occurs when no image is input because of camera, network, system, etc.

Recording Fail
Event that occurs when recording can not proceed because of camera, network, system, etc.

Apply OK Cancel

Camera System_Video Loss

No.	Activation Time	Ignoring Interval	Actions
1	20 sec.	Never	Q
2	20 sec.	Never	Q
3	20 sec.	Never	Q
4	20 sec.	Never	Q
5		0.1 sec.	Q
6		0.1 sec.	Q
7		0.1 sec.	Q
8		0.1 sec.	Q
9		0.1 sec.	Q
10		0.1 sec.	Q
11		0.1 sec.	Q
12		0.1 sec.	Q
13		0.1 sec.	Q
14		0.1 sec.	Q
15		0.1 sec.	Q
16		0.1 sec.	Q
17		0.1 sec.	Q
18		0.1 sec.	Q

Analog

☐ Use Ignoring Time Time Setup

Default Apply OK Cancel

- **Activation Time:** Specify how long video loss has to last in order for it to be considered as an event. When the video loss is not detected for the specified duration of time, it will not be considered as an event.
- **Ignoring Interval:** The system does not produce event log entries or issue remote notifications for video loss detected for the time specified after the initial video loss was detected. Set the value between 0.1 and 15 seconds or choose **Never**.
- **Actions:** Specify which actions to take when a Video Loss event occurs.
 - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to **Event** or **Time & Event** mode, the selected cameras will begin linked recording when an event occurs.
 - **Alarm-Out:** Designate event-triggered alarm-out channels (each for the NVR and camera) and beeps.
 - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, Push, HTTP, FTP, and/or Alert Window.
 - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.
 - **Event Monitoring:** Selects the cameras to monitor when an event occurs.



In order to use the Callback feature, the NVR must be registered on the remote program.

- **Use Ignoring Time:** Select **Time Setup** to specify the time to ignore video loss detection. Video loss detection will be disabled for a specified time period.

Camera System_Recording Fail

No.	Activation Time	Actions
1	30 sec.	
2	30 sec.	
3	30 sec.	
4	30 sec.	
5	30 sec.	
6	30 sec.	
7	30 sec.	
8	30 sec.	
9	30 sec.	
10	30 sec.	
11	30 sec.	
12	30 sec.	
13	30 sec.	
14	30 sec.	
15	30 sec.	
16	30 sec.	
17	30 sec.	
18	30 sec.	

- **Activation Time:** Specify how long recording fail has to last in order for it to be considered as an event. When the recording fail is not detected for the specified duration of time, it will not be considered as an event.
- **Actions:** Specify which actions to take when a Recording Fail event occurs.
 - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to **Event** or **Time & Event** mode, the selected cameras will begin linked recording when an event occurs.
 - **Alarm-Out:** Designate event-triggered alarm-out channels (each for the NVR and camera) and beeps.
 - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, Push, HTTP, FTP, and/or Alert Window.
 - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.
 - **Event Monitoring:** Selects the cameras to monitor when an event occurs.

☒ In order to use the Callback feature, the NVR must be registered on the remote program.

Video-Analytics

Event lists that occur through video analysis include Motion and Tampering.

List of events that occur during video analysis


Motion
Event that occurs when motion is detected

Tampering
Event that occurs when camera angles are changed or physical damage occurs

Video-Analytics_Motion

No.	Zone	Setup	Actions
1	575	Sensitivity : 2/3, Min. Blocks : 2/1	
2	576	Sensitivity : 2/3, Min. Blocks : 2/1	
3	768	Sensitivity : 2/3, Min. Blocks : 2/1	
4	320	Sensitivity : 2/3, Min. Blocks : 2/1	
5	300	Sensitivity : 2/3, Min. Blocks : 2/1	
6	300	Sensitivity : 2/3, Min. Blocks : 2/1	
7	300	Sensitivity : 2/3, Min. Blocks : 2/1	
8	300	Sensitivity : 2/3, Min. Blocks : 2/1	
9	300	Sensitivity : 2/3, Min. Blocks : 2/1	
10	300	Sensitivity : 2/3, Min. Blocks : 2/1	
11	300	Sensitivity : 2/3, Min. Blocks : 2/1	
12	300	Sensitivity : 2/3, Min. Blocks : 2/1	
13	300	Sensitivity : 2/3, Min. Blocks : 2/1	
14	300	Sensitivity : 2/3, Min. Blocks : 2/1	
15	300	Sensitivity : 2/3, Min. Blocks : 2/1	
16	300	Sensitivity : 2/3, Min. Blocks : 2/1	
17	300	Sensitivity : 2/3, Min. Blocks : 2/1	
18	300	Sensitivity : 2/3, Min. Blocks : 2/1	

- **No.:** Select which cameras to apply Motion Detection to.
- **Zone:** Define the motion detection block.

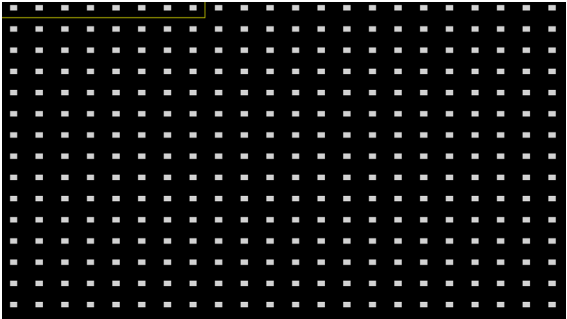

The selection window consists of 8 blocks per row. Select/deselect individual blocks using the **Camera** buttons. You can use the mouse to drag the zone and then select, clear, or reverse the selection. From the zone selection screen, right-click on the mouse to open up the Zone Setup menu.



- **Select:** Confirm the block selection in the selection window.
- **Clear:** Clear the block selection in the selection window.
- **Reverse:** Clear the blocks selected within the selection window and select all unselected blocks within the selection window.
- **Select All:** Select all blocks.
- **Clear All:** Clear all block selections.
- **Reverse All:** Clear all selected blocks within the screen and select all unselected blocks within the screen.
- **OK:** Save the changes and exit the menu.
- **Cancel:** Exit the menu without saving the changes.

• Setup

- **Sensitivity:** Set daytime and nighttime sensitivity settings between 1 (Low) and 5 (High).
- **Min. Blocks:** Motion needs to be detected in more than the specified number of blocks in order to trigger a Motion Detection event. You may select a value between 1 and the number of blocks selected under **Zone** for daytime and nighttime, each.
- **Ignoring Interval:** The system does not produce event log entries or remote notifications for motion detected within a certain period of time after the motion of the camera channels is detected. Set the value between 1 sec and 5 secs or choose **Never**.

☒ Ignoring Interval does not affect motion detection recording.

- **Daytime Setup:** Specify when daytime starts and ends. Adjust the time frame in 15-minute

increments. Times outside the specified range will be assumed as nighttime by the system.

- **Detecting motion in PTZ movement:** It can be set to detect events during PTZ operation.
- **Actions:** Specify which actions to take when motion is detected.
 - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to Event or Time & Event mode, the selected cameras will begin linked recording when an event occurs.
 - **Alarm-Out:** Designate event-triggered alarm-out channels (each for the NVR and camera) and beeps.
 - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, Push, HTTP, FTP, and/or Alert Window.
 - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.
 - **Event Monitoring:** Selects the cameras to monitor when an event occurs.

☒ In order to use the Callback feature, the NVR must be registered on the remote program.

Video-Analytics_Tampering



In order to use the Callback feature, the NVR must be registered on the remote program.

No.	Sensitivity	Activation Time	Ignore Condition	Actions
1	3	01 sec.	-	☑
2	3	01 sec.	Not Use	☑
3	3	01 sec.	Not Use	☑
4	3	01 sec.	Not Use	☑
5	3	01 sec.	Not Use	☑
6	3	01 sec.	Not Use	☑
7	3	01 sec.	Not Use	☑
8	3	01 sec.	Not Use	☑
9	3	01 sec.	Not Use	☑
10	3	01 sec.	Not Use	☑
11	3	01 sec.	Not Use	☑
12	3	01 sec.	Not Use	☑
13	3	01 sec.	Not Use	☑
14	3	01 sec.	Not Use	☑
15	3	01 sec.	Not Use	☑
16	3	01 sec.	Not Use	☑

- **No.:** Select which cameras to apply Tampering to.
- **Sensitivity:** Set to between 1 (Low) and 5 (High).
- **Activation Time:** Specify how long tampering detection needs to last in order for it to be considered an event. Tampering detections that do not last for the specified duration of time will not be considered as events.
- **Ignore Condition**

Tampering 1 - Ignore Condition

☐ Use Ignoring Time 18:00 ~ 09:00

OK Cancel

- **Use Ignoring Time:** Select **Time Setup** to specify the tampering detection ignore time of camera channels. Tampering detection will be disabled during the specified time frame.
- **Actions:** Specify which actions to take when Tampering is detected.
 - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to **Event** or **Time & Event** mode, the selected cameras will begin linked recording when an event occurs.
 - **Alarm-Out:** Designate event-triggered alarm-out channels (each for the NVR and camera) and beeps.
 - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, Push, HTTP, FTP, and/or Alert Window.
 - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.
 - **Event Monitoring:** Selects the cameras to monitor when an event occur.

Additional Event

A list of events that occur in the camera, system and other device.

Additional Event_Alarm-In

No.	Source	Title	Type	Actions
1		AI 1	NC	
2		AI 2	NC	
3		AI 3	NC	
4		AI 4	NC	
5		AI 5	NC	
6		AI 6	NC	
7		AI 7	NC	
8		AI 8	NC	
9		AI 9	NC	
10		AI 10	NC	
11		AI 11	NC	
12		AI 12	NC	
13		AI 13	NC	
14		AI 14	NC	
15		AI 15	NC	
16		AI 16	NC	
17	Local 1	NVR AI 1	NC	
18	Local 2	NVR AI 2	NC	
19	Local 3	NVR AI 3	NC	

- **No.:** Enable / disable alarm-ins.



This option includes both local and network camera alarm-ins. 1 through 16 are network camera alarm-ins, whereas 17 through 32 are local alarm-ins.

- **Source:** Specify the device to use for Alarm-In event.

- **Channel:** Set the channel of the source you set.
- **Sub Channel:** Set the sub channel of the source you set.

- **Title:** Use the virtual keyboard to enter titles.
- **Type:** Change the alarm-in type.
- **Actions:** Specify which actions to take when Alarm-In is detected.
 - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to Event or Time & Event mode, the selected cameras will begin linked recording when an event occurs.
 - **Alarm-Out:** Designate event-triggered alarm-out channels (each for the NVR and camera) and beeps.
 - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, Push, FTP, and/or Alert Window.
 - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.
 - **Event Monitoring:** Selects the cameras to monitor when an event occurs.

- ☒
- In order to use the Callback feature, the NVR must be registered on the remote program.
 - Select **Panic Record** to specify which alarm-in channels to use. Panic Record commences when the corresponding alarm-in occurs and terminates when the alarm-in is deactivated.

Additional Event_Network Alarm

Event

System Event

Camera System

Video-Analytics

Additional Event

Alarm-In

Network Alarm

Text-In

No.	Title	Actions
1	ALARM 1	
2	ALARM 2	
3	ALARM 3	
4	ALARM 4	
5	ALARM 5	
6	ALARM 6	
7	ALARM 7	
8	ALARM 8	
9	ALARM 9	
10	ALARM 10	
11	ALARM 11	
12	ALARM 12	
13	ALARM 13	
14	ALARM 14	
15	ALARM 15	
16	ALARM 16	

Default

Apply


OK

Cancel


- **No.:** Enable or disable network alarm.
- **Title:** Use the virtual keyboard to enter titles.
- **Actions:** Specify which actions to take when Network Alarm is detected.
 - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to Event or Time & Event mode, the selected cameras will begin linked recording when an event occurs.
 - **Alarm-Out:** Designate event-triggered alarm-out channels (each for the NVR and camera) and beeps.
 - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, Push, FTP, and/or Alert Window.
 - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.
 - **Event Monitoring:** Selects the cameras to monitor when an event occurs.

- ☒
- In order to use the Callback feature, the NVR must be registered on the remote program.

Additional Event_Text-In

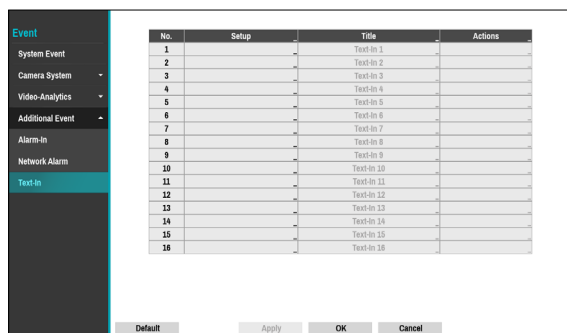


- **Setup:** Configure text-in devices.

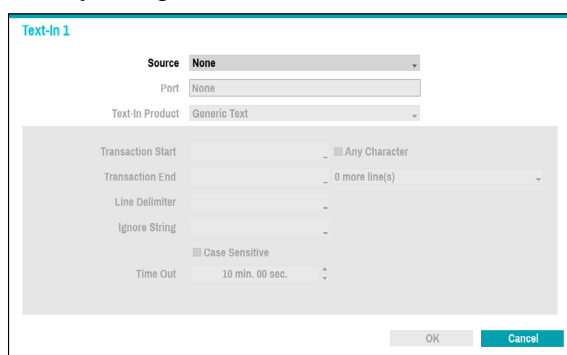

- ☒
 - It's possible to batch configure all text-in devices with the exception for source settings.
 - An influx of large amounts of text-in data from multiple channels can hinder system performance.
- **Source:** Set the connected device to use Text-in events.
 - **Port:** Indicates text-in device connected in the Connectors tab.
 - **Text-In Product:** The setup window is updated so that the portion below the port setting matches the corresponding text-in device. Displayed screenshot illustrates Generic Text settings.
 - **Transaction Start:** Once **Transaction Start** has been designated, the system will recognize the specified string as the beginning of a transaction. You can choose the Any Character setting. Under this setting, any character will trigger the system into recognizing the start of a new transaction.
 - **Transaction End:** Once **Transaction End** has been designated, the system will recognize the specified string as the end of a transaction. Select **0 more line(s)** next to Transaction End and specify a value between 1 and 10. The system will recognize the specified Transaction End string plus the number of

lines as being the end of a transaction.

- **Line Delimiter:** Designate a string to mark the end of a line. You can enter control strings by selecting  and then entering ^, followed by a letter. For example, Carriage Return is ^M and Line Feed (new line) is ^J.
- **Ignore String:** Specify a string to ignore from transaction records.
- **Case Sensitive:** Ignores case in strings designated under **Transaction Start**, **Transaction End**, **Line Delimiter**, and **Ignore String**.



Case Sensitive does not apply to control strings.

- **Time Out:** Once **Time Out** has been enabled, the system will assume the end of a transaction if no new string is entered within the specified duration of time. Select between 5 secs and 15 mins.
- **Title:** Designate a name for the text-in device.
- **Actions:** Specify which actions to take when text-in is detected.
 - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to Event or Time & Event mode, the selected cameras will begin linked recording when an event occurs.
 - **Alarm-Out:** Designate event-triggered alarm-out channels (each for the NVR and camera) and beeps.
 - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, Push, HTTP, FTP, and/or Alert Window.
 - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.
 - **Event Monitoring:** Selects the cameras to monitor when an event occurs.




In order to use the Callback feature, the NVR must be registered on the remote program.

Device Setup


Refer to the **Menu Use on page 32** for basic information on using the Setup menus.

Alarm-Out

A list of events for setting up Alarm-Out.

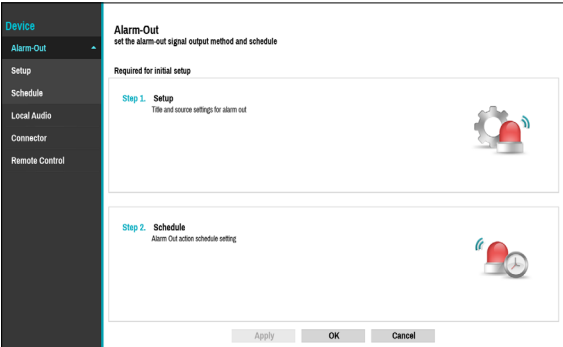

Alarm-Out_Setup

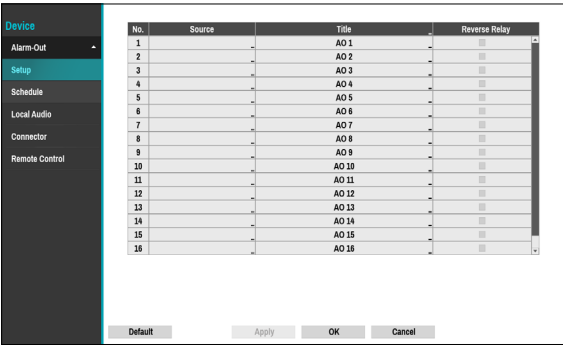

- **Source:** Specify the device to use for Alarm-In event.


Source

Source
Channel
Sub Channel

- **Channel:** Set the channel of the source you set.
- **Sub Channel:** Set the sub channel of the source you set.
- **Title:** Designate a name for the alarm-out.

- **Reverse Relay:** Reverse the alarm-out type of the device you set at the source.

Alarm-Out_Schedule

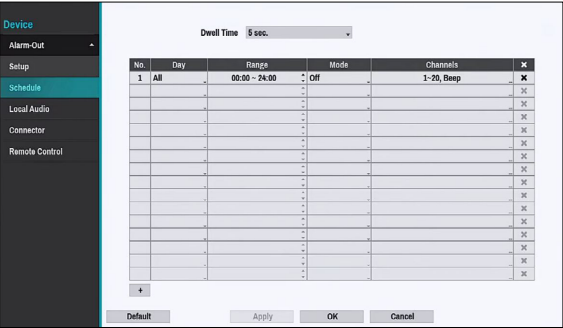

Click the + icon at the bottom left corner of the screen to add a schedule.


Select ☒ icon to delete the schedule.

- **Dwell Time:** Select a value between 5 secs and 15 mins as the alarm-out duration.
- **Day:** Apply different schedules for different Days of the week.
- **Range:** Change the schedule time frame.
- **Mode:** Select **Event**, **On**, or **Off**.


Event	Generates an alarm-out when an event occurs.
On	Alarm-out is always on.
Off	Alarm-out is always off.

- **Channels:** Configure alarm-out port and beep settings.


Local Audio

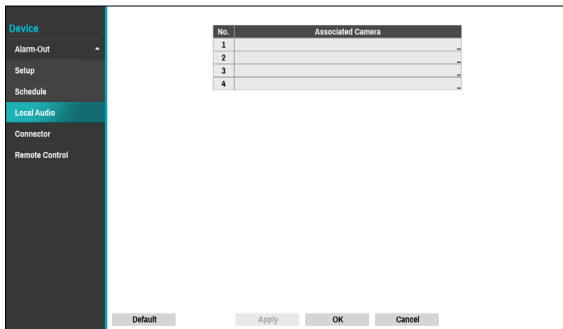


Click the **Associated Camera** and the following screen will appear. Select the camera to link to local audio.

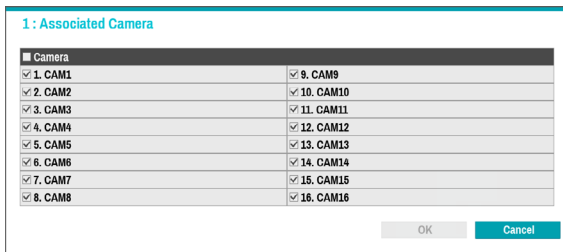

Connector

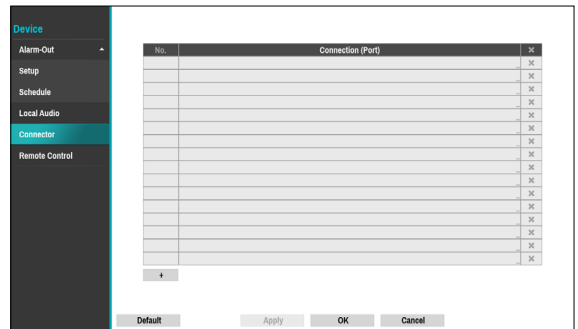


Click the + icon at the bottom left corner of the screen to add a connection device.

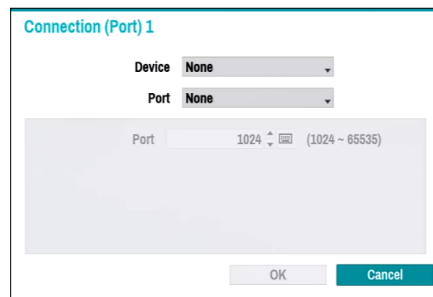

- **Device:** Select a connection device supported by the NVR.
 - **Port:** Select the ports supported by the selected device. Depending on the port, you can set the port speed, data, stop, parity value or LAN port.
- ☒
 - If the same LAN port is being used, a warning window appears: "Same Port Number".
 - When using a USB-serial port, Text-in function may malfunction if the USB cable is removed while the system is running.

Remote Control

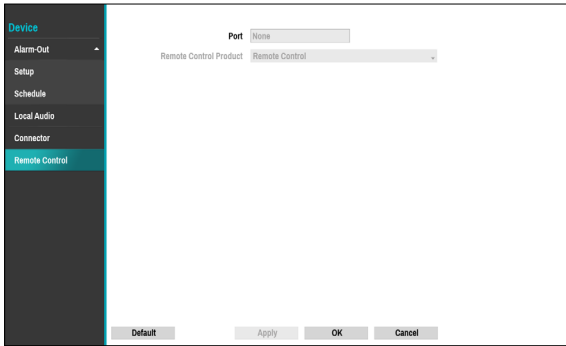


- **Port:** Indicates the remote control device connected in the previous Connectors tab.
- **Remote Control Product:** Select remote control products.

Network Setup

Refer to the **Menu Use on page 32** for basic information on using the Setup menus.

General

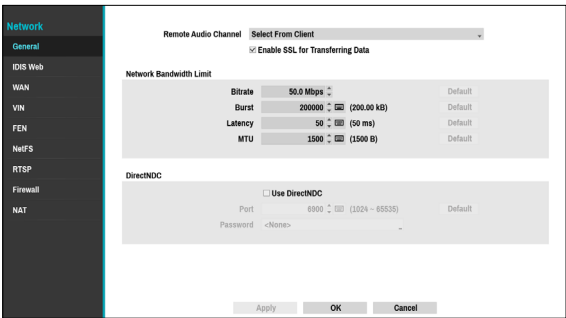

- **Remote Audio Channel:** Transmits the selected channel's audio to the remote program. Select **Select From Client** to stream audio of the channel selected on the remote program.
- ☒ Audio skipping and sync issues can occur under poor network conditions.
- **Enable SSL for Transferring Data:** Applies SSL (Secure Sockets Layer) protection on remote viewing and recording data transmissions.
 - ☒ If using the SSL feature, it will not be possible to connect to the NVR from a remote program or a network keyboard that does not support SSL.
 - Changing the SSL setting temporarily severs all remote connections to the NVR in order to apply the change.
 - This product contains content developed by OpenSSL Project for use in Open SSL Toolkit (<http://www.openssl.org/>).
- **Network Bandwidth Limit:** Configure the network bandwidth sent to the remote locale.
 - **Bitrate:** Set the size of the bandwidth.
 - **Burst:** Set the burst-byte or buffer byte size.
 - **Latency:** Set the latency.
 - **MTU:** Set the maximum transmission unit (MTU).
- ☒ If you configured **Network Bandwidth Limit**, the live video may not display smoothly in a remote program.

- **DirectNDC:** Use Direct Network Display Control (NDC) by clicking the **Use DirectNDC** button to toggle between On and Off. You will be able to change the settings if Use DirectNDC is enabled. DirectNDC service allows you to access the NVR and control it remotely using a PC or mobile devices via Ethernet.

- **Port:** Configure the port number of the DirectNDC server.
- **Password:** Configure the **Password** to connect to the NVR from a remote locale.



Up to three users at a time can access a NVR remotely via DirectNDC service.

When using the keyboard to control the NVR remotely, the shortcut keys have the following functions.

Key	Function
←	Press the ← to move to the left in the menu.
→	Press the → to move to the right in the menu.
↑	Press the ↑ to move up in the menu.
↓	Press the ↓ to move down in the menu.
Enter or Return	Press the Enter or Return key to select the highlighted item or complete an entry that you have made during system setup.
Character Input, Delete, BackSpace, Space	They play the same role as a keyboard input.
Esc	Press the Esc to escape the sequence.
F1	Press the F1 key to perform the panic recording. This is the same as pressing the PANIC button on the front panel.
F2	Press the F2 key to reset all NVR outputs while the alarm has been activated including the built-in buzzer. This is the same as pressing the ALARM button on the front panel.
F3	Press the F3 key to initiate PTZ mode. This is the same as pressing the PTZ button on the front panel.

F4 or PaceUP/ PageDown	Press the F4 or PageUp or PageDown key to toggle between different display formats. This is the same as pressing the LAYOUT button on the front panel.
F5	Press the F5 key to refresh the current DirectNDC screen.
F6	Press the F6 key to switch to the search mode. This is the same as pressing the Search Mode Button on the front panel.
F10 or Windows	Press the F10 or Windows key to display the Live Monitoring menu or Search menu on the screen. This is the same as pressing the MENU button on the front panel.
Home	Press the Home key to copy video clips. This is the same as pressing the CLIP COPY button on the front panel.

IDIS Web




- **Use IDIS Web Service:** If you wish to use IDIS Web, select **IDIS Web - Use IDIS Web Service**. Select IDIS Web - IDIS Web Port and choose a port number between 1024 and 65535. The port number can also be entered using the virtual keyboard. For more information on IDIS Web, refer to the [Part 4 - IDIS Web on page 98](#).
- **Expose HTTP server's banner:** Expose server information in HTTP headers.
- **SSL/TLS**
 - **USE :** When connecting to IDIS Web, the way of HTTPS communication is enabled.
 - **Enable Weak Cipher Suite:** Select or deselect Enable Weak Cipher Suite function.

WAN


Designate the IP address type as **IPv4_None**, **IPv4_Manual**, **IPv4_DHCP**, **IPv6_None** or **IPv6_Link-local**.

IPv4_None

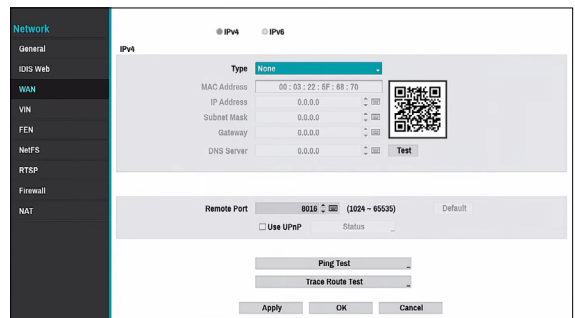

Select **None** and then **save** to disable IPv4 mode.

IPv4_Manual

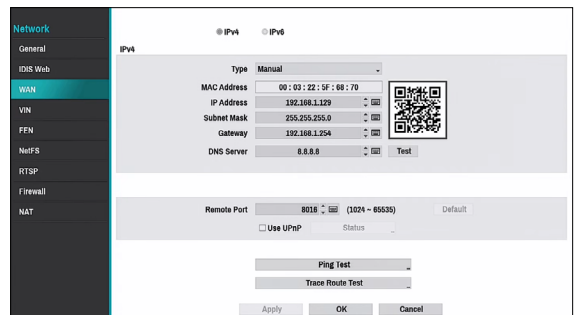

- Set **Type** to Manual.



- **Manual** lets you configure related settings manually. Configure **IP Address**, **Gateway**, and **Subnet Mask** settings manually using the virtual keyboard.
- When registering NVR with the IDIS mobile application, you can easily enter the IP address using the QR code.
- **DNS Server:** Enter the DNS server's IP address. The IP address can also be entered using the virtual keyboard.
- **Remote Port:** The port used by the remote program to connect to the NVR. Choose a value between 1024 and 65535. The port number can also be entered using the virtual keyboard.
- **Ping Test:** Select to test the current WAN settings you made.

Network Test

Network Address: 192.168.1.254 Default

Test Count: 5 Run

Test Result:

See More

Transmission Status:

Round-Trip Status:

Close

- 1 Enter the IP address of the NVR.
- 2 Adjust the frequency of the ping test.
- 3 Select **Run** to do the test. The test result is displayed.
- 4 Select **Close** to exit.



- If using a firewall, select Change Port to change the port number to one that is permitted by the firewall.
- Changing the port temporarily severs the NVR's remote connection.



Remote point IP and port settings on the remote program must also be changed in order for it to connect to the NVR.

- To use the **UPnP** (Universal Plug and Play) feature, select **Use UPnP**. If using an IP router (or NAT), UPnP service allows the device to automatically forward the port to the NVR.



- This port is used to access a port that has a private IP address.
- In order to use the UPnP service, the IP router (or NAT) must support UPnP port forwarding and have the relevant options enabled.
- Port number cannot be changed with **Use UPnP** selected.

- **Status:** Indicates the number of the port forwarded by the IP router (or NAT) to the NVR via UPnP service.
- **Trace Route Test:** The NVR tries to trace a network path to its destination.

Trace Route Test

Network Address: 10.0.0.1 Default

Max Hop Count: 10 Run

Result:

Close

- 1 Set the network address of the destination.
- 2 Set the maximum number of hops.
- 3 Select **Run** to do the test. The test result is displayed.
- 4 Select **Close** to exit.

IPv4_DHCP

Select **DHCP** and then **Save** to retrieve IP address and other network settings automatically from the DHCP server. Once the network settings have been retrieved, the NVR's current IP address is displayed in the IP Address field.



- It may not be possible to retrieve the IP address if there is no DHCP server. If this is the case, contact your network administrator.
- With DHCP, the NVR's IP address might change with each startup.
- When registering NVR with the IDIS mobile application, you can easily enter the IP address using the QR code.



There is a limit to the number of users allowed to connect remotely at the same time. Contact the service center for more information.

IPv6_None

Select **None** and then **save** to disable IPv6 mode.

IPv6_Manual



- Manual** lets you configure related settings manually. Configure **IP Address**, **Prefix Length**, **Gateway**, and **DNS Server** settings manually using the virtual keyboard.
- When registering NVR with the IDIS mobile application, you can easily enter the IP address using the QR code.

IPv6_Link-local


Configure the Link-local address. It is used by nodes when communicating with neighboring nodes on the same link.

VIN


If the camera is networked but not scanned, use this setup. This setup allows you to change the network setting of the NVR's VIDEO IN port which is camera's network environment. Check the camera's network setting first before you use this setup.




- Check the camera's network setting first before you use this setup.
- Make sure that this setting does not conflict with the WAN setting.

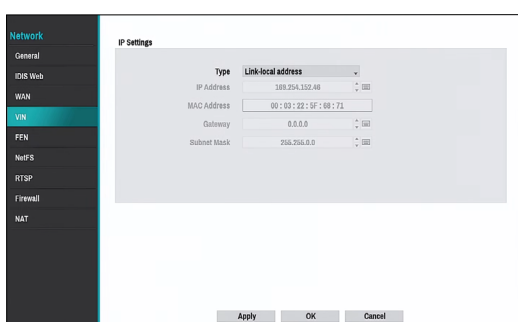


- **Link-local address:** Indicates the default IP address of VIDEO IN port.

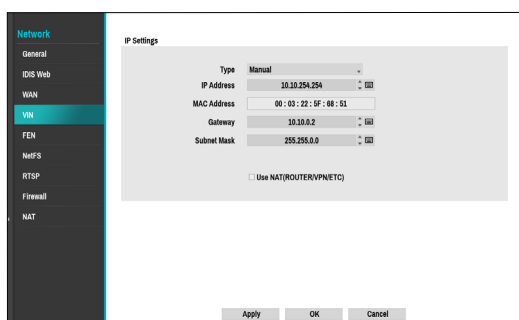

- **Manual:** Allows you to enter the IP address and other network settings manually.
 - **Use NAT(ROUTER/VPN/ETC):** Allows access to specific subnets. (It is not recommended unless you are a network expert)

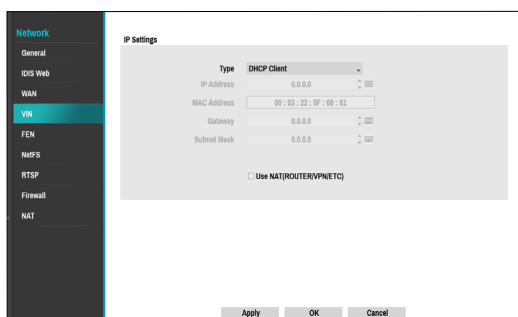

- **DHCP Client:** Retrieves an IP address and other network settings automatically from a DHCP server.
 - **Use NAT(ROUTER/VPN/ETC):** Allows access to specific subnets. (It is not recommended unless you are a network expert)

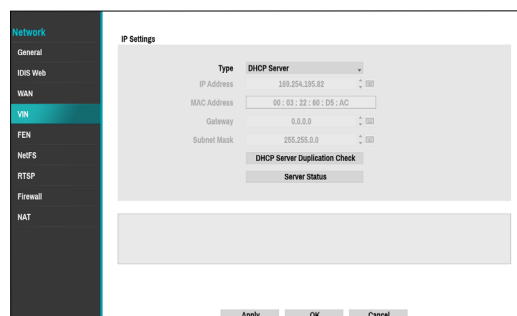

- **DHCP Server:** It makes the NVR run as a DHCP server. Check if there is another DHCP server on the same network. If there is no DHCP server, this option is enabled. The NVR allocates an IP address automatically in the range of **10.10.0.128** to **10.10.254.254** by using DHCP to the camera connected to the NVR's VIDEO IN port.
 - **Server Status:** Indicates client's MAC address, IP address, and expiration period.



When several NVRs exist in the same network, only one of NVRs has to be run as a DHCP server. If several DHCP servers are running, the redundant IP may be allocated to the camera.

FEN

If using a dynamic IP address, FEN service makes it easy to connect to the NVR from a remote program without having to configure dynamic IP or router settings.

The screenshot shows the 'FEN' configuration page. On the left is a sidebar with menu items: Network, General, IDIS Web, WAN, VIN, FEN (highlighted), NetFS, RTSP, Firewall, and NAT. The main area has a 'Use FEN' checkbox which is checked. Below it are fields for 'FEN Name' (0007-073-000), 'FEN Server' (fen.idisglobal.com), 'Port' (10004), and 'Help Desk' (support@idisglobal.com). A 'Check' button is next to the FEN Name field. To the right of the fields is a QR code. At the bottom, there is a 'Status' section with a message: 'Please wait until the FEN service status is updated. - This work may take up to several minutes.' At the very bottom are 'Apply', 'OK', and 'Cancel' buttons.



If FEN has been configured correctly, the FEN server's help desk information will be displayed in the **Help Desk** field the next time you access the FEN Setup screen.

- **Use FEN:** Check if you wish to use FEN service.
- **FEN Name:** After entering the NVR name you wish to register on the FEN server, check and register the entered name. This is a unique NVR name that will be registered on the FEN server.0



- You will not be able to save FEN settings unless you click on the Check button next to the NVR Name field and check the entered name's availability.
- You will be prompted with an error message if you do not enter NVR name or enter a name already registered to the FEN Server.
- If the device name contains the #, \, and/or % symbol, it might not be able to connect to the NVR from the IDIS Web program.
- When registering NVR with the IDIS mobile application, you can easily enter the IP address using the QR code.

- **FEN Server:** Enter the FEN server's IP address or domain name.



If you have configured the DNS Server setting under **Network - WAN**, you can enter the FEN server's domain name instead of its IP address in the **FEN Server** field.

- **Port:** Specify the FEN server's port number.








If using an IP router (or NAT), port configuration and other network functions will depend on the usage method of the IP router (or NAT).


- **Status:** Used to check the status of the device being registered to the FEN server.

Select **Save** after making changes to register the NVR's name to the FEN server.

NetFS

This allows you to register NetFS sites for the following functions:

- Upload or download files to upgrade, import/export of a setup file, log export or self-diagnosis export on an FTP site. The related settings are as follows:
 - :  (Setup) in the live monitoring mode - System menu - General tab - Upgrade, Import, Export or SystemLog - Self-Diagnosis Export
 - :  (Setup) in the live monitoring mode - System menu - Self-Diagnosis Export
 - Upload clip-copy files to an FTP site. The related settings are as follows:
 - :  (Export) in the search mode - A-B Clip-Copy or Clip-Copy.
 - FTP notification of an event detection (system events excluded). The related settings are as follows:
 - :  (Setup) in the live monitoring mode - Notification menu - FTP tab - FTP setting,
 - :  (Setup) in the live monitoring mode - Event menu - Actions – Notify (FTP) setting)
- ☒ • It is recommended that you use FileZilla and smallFtp servers.
- This feature is supported only in the passive mode (PASV) of the FTP site.

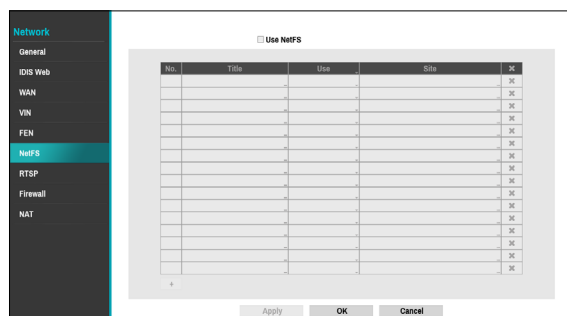


Select Use NetFS to use the **NetFS feature**. Click the + icon at the bottom of the list to add up to 16 FTP sites.

- **Title:** Check if you wish to use FEN service.

- **Use:** Select the usage for the NetFS feature.
 - N/A : Disables the NetFS feature.
 - ALL: Enables the NetFS feature.
 - Upgrade: Allows you to use the upgrade file that was uploaded to the NetFS site.
 - Setup: Allows you to import or export a setup file that was uploaded to the NetFS site.
 - System Log – Allows you to save system logs to the NetFS site.
 - Clip-Copy – Allows you to manually copy video clips or automatically copy event-detected video clips to the NetFS site.
- **Site:** Enter NetFS site information.



- When you delete an FTP site from the NetFS setup screen in the Network menu, the FTP site in the FTP setup screen in notification will be deleted, too.
- When you change the usage to anything other than ALL or Clip-Copy, the FTP notification function will be disabled.
- Select the  icon to delete the existing NetFS site.

Enter information about the NetFS site using the virtual keyboard and then click the **test** button to test the current NetFS site.

- **Title:** Enter the NetFS site name using the virtual keyboard.
- **Address:** Enter the NetFS address using the virtual keyboard.
- **Port:** Configure the port to connect to the NetFS site.
- **Remote path:** Enter a folder path to the NetFS site using the virtual keyboard.
- **User / Password:** Enter the user and password to access the NetFS site using the virtual keyboard.
- **Test:** Test the current NetFS site settings you have entered.

RTSP

RTSP service allows you to monitor real-time using the Real-Time Streaming Protocol.

- **RTSP Port:** Set the port number of the RTSP server obtained from your system administrator.
- **Max Session Count:** Set maximum allowed number of RTSP sessions.
 - ✓ RTSP may malfunction if multiple sessions are connected simultaneously.
 - The maximum number of sessions can be set to a number between 10 and 16.
- **RTP Port:** Set the start/end port number of the RTP server obtained from your system administrator.
 - ✓ You can access a remote NVR and monitor live video images using media players, such as VLC Player, supporting RTSP service. Start the media player on your local PC and enter "rtsp://ID:Password@IP address:RTSP port number/trackID=channel number" (e.g.: rtsp://admin:@10.0.152.35:554/trackID=1)
 - Video display on certain media players may not be smooth depending on the network status.
 - RTSP service might not be supported, depending on the type of media player.

Firewall

Setting up a customized firewall rule set, it allows or denies access such as specific MAC address, IP address and receiving network port of the NVR.


Select **Use Firewall** to activate firewall function. Click the + icon at the bottom of the list to set up a firewall rule.

- **Title:** Edit the name of the rule.
- **Type:** Set the IP address, the MAC address or the network port.
- **Action:** Select which actions to apply this firewall rule to.
 - **Drop:** Discard the packet that matches all the specified conditions.
 - **Reject:** Deny the packet that matches all the specified conditions and send back an ACK packet telling it that the "packet was dropped" to the sender.
 - **Accept:** Allow the packet that matches all the specified conditions.
- **Interface:** Specify the ethernet interface. It refers to a WAN (Network Client) or VIN (Video-In).
- **Mac Address:** If the rule is set to MAC address, enter the sending MAC address
- **IP:** If the type of the rule is set to IPv4 or within the IPv4 scope, enter the sending IP address.
- **Port:** If the type of the rule is set to port or within the port scope, enter the receiving network port number of NVR.


NAT

NAT function is to connect to the camera which is internal VIN network from the physically divided WAN network PC (WebSetup / IDIS Web / IDIS Center program / RTSP).

To connect to the camera WebSetup / IDIS Web / IDIS Center program / RTSP function, you need to configure the NAT rule to forward ports from NVR port number to the camera port number.

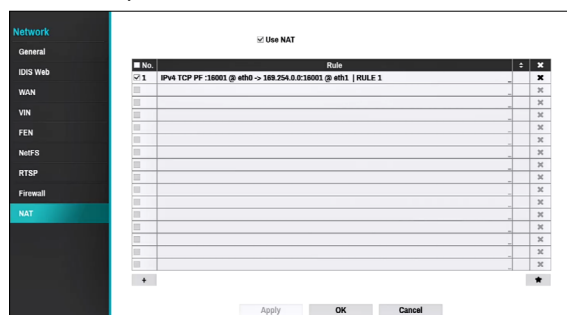

Select **Use NAT** to activate NAT function. Click the + icon at the bottom of the list to set up a NAT rule.

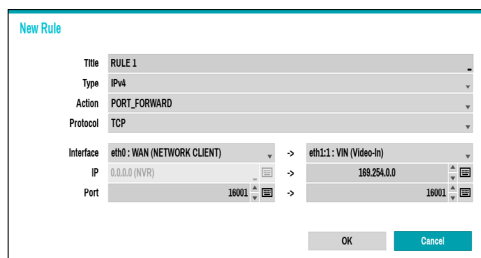

- **Title:** Edit the name of the rule.
- **Type:** Set the IP address, the MAC address or the network port.
- **Action:** Select which actions to apply this NAT rule to.
 - **PORT_FORWARD:** Allow the access by combining an external TCP/UDP port with an internal port.
- **Protocol:** Set the network protocol to apply the rule to.
- **Interface:** Specify the ethernet interface. It refers to a WAN (Network Client) or VIN (Video-In).
- **IP:** If the type of the rule is set to IPv4 or within the IPv4 scope, enter the sending IP address.
- **Port:** If the type of the rule is set to port or within the port scope, enter the receiving network port number of NVR.




It is not possible to set an interface from VIN to WAN direction. For more information on NAT, refer to **NAT Configuration Guide on page 105.**

Notification Setup


Schedule

Select the + icon at the lower left corner of the screen to add a notification schedule.

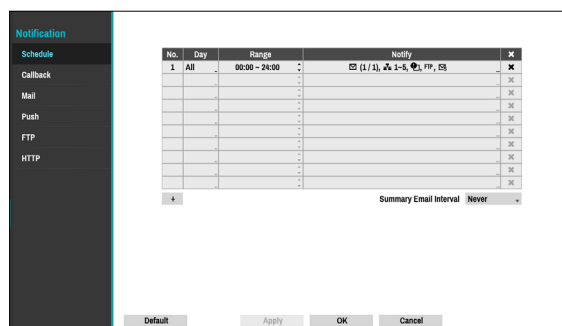

- **Day:** Add different schedules for different days of the week.
- **Range:** Change the event notification time frame.
- **Notify:** Select which notifications to generate when an event occurs. Select **Mail, LAN 1 through 5, Push, HTTP,** and/or **FTP.**



- In order to use the **Notification** (Callback) feature, the NVR must be registered on the remote program.
- Select the  icon to delete the existing schedule.

- **Summary Email Interval:** Device information, camera/device event summary information and device health status summary are sent by e-mail to a remote location at specified intervals.



- SMTP must be set to enable the Summary Email Interval function. For more information, refer to **SMTP Setup on page 82.**
- The recipients can be set on the Notification Setup - Mail tab. For more information, refer to **Mail on page 81.**

1) Example of Device Information Summary Mail

Device Information											
<ul style="list-style-type: none"> Device: 2022-12-29 11:05:00 Model: 2022-12-29 11:05:00 IP Address (Main): 10.0.0.100 IP Address (Sub): 10.0.0.101 											
Summary Information											
<ul style="list-style-type: none"> Since 2022-12-29 AM 11:05:00, the following events have been detected. 											
No.	Model	Topology	Topology	Video Loss	Recording Fail	Audio Detection	Face Detection	Face Error	PIR	Alarm Sensing	Logging
1	75 detected	-	-	-	-	-	-	-	-	-	-
2	75 detected	-	-	-	-	-	-	-	-	-	-
3	75 detected	-	-	-	-	-	-	-	-	-	-
4	75 detected	-	-	-	-	-	-	-	-	-	-

2) Example of Camera/Device Event Summary Mail

Event - Device								
No.	Alarm-In	Network Alarm	Test-In	Exceed Occupancy Limit	Social Distancing Violation	Mask Rule Violation	Queue Congestion	VA Loss
1	-	-	-	-	-	-	-	-
2	-	-	-	-	-	-	-	-
3	-	-	-	-	-	-	-	-
4	-	-	-	-	-	-	-	-
5	-	-	-	-	-	-	-	-
6	-	-	-	-	-	-	-	-
7	-	-	-	-	-	-	-	-
8	-	-	-	-	-	-	-	-

3) Example of Device Health Status Summary Mail

Device Health Status:																
No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Camera Signal	0	0	0	0	0	-	-	-	-	-	-	-	-	-	-	-
Recording Fail(Main)	0	0	0	0	0	-	-	-	-	-	-	-	-	-	-	-
Recording Fail(Sub)	0	0	0	0	0	-	-	-	-	-	-	-	-	-	-	-
No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
VA Box Signal	0	0	0	0	0	-	-	-	-	-	-	-	-	-	-	-
Recording Status	Good															
Recorded Video	2022-12-29 AM 11:05:19 ~ 2022-12-29 AM 11:31:30															
HDD#	Internal 1 : In Use															
Disk Bad	Good (0 %)															
HDD Temperature	Good (37.0°C)															
S.M.A.R.T.	Good															
Fan Status	Good (0)															

Callback

Configure Callback settings.

Notification
Schedule
Callback
Mail
Push
FTP
HTTP

No.	Title	Address	Port
1			8081
2			8081
3			8081
4			8081
5			8081

Setup

Default Apply OK Cancel

Enter the title and IP address of the receiving server and set **Retry** to between 1 and 10 in case of connection failure.

Select the Setup... button at the lower right corner of the screen to configure Callback Retry Policy.

Callback - Setup

Short-Term Retry Policy

Retry	5
Dwell	3 sec.

Long-Term Retry Policy

Use	
Retry	3
Dwell	15 (15 min.)
Check Interval	3 (3 min.)

Max. Queue Size 500

OK Cancel

● **Short-Term Retry Policy:** Configure short-term policy to retry a callback event.

- **Retry:** Number of times to retry a callback event.
- **Dwell:** Wait time (in seconds) between retry attempts




● **Long-Term Retry Policy**

- **Use:** Configure long-term policy to retry a callback event.
- **Retry:** Number of times to retry a callback event.
- **Dwell:** Wait time (in minutes) between retry attempts
- **Check Interval:** Interval time (in minutes) to check failover.



In a general wired network communication environment, not a wireless (mobile) / satellite communication environment where communications failures are frequent, long-term retry policies (LTRPs) are not required, except for particular cases.

- **Max. Queue Size** : Determine the maximum number that can be processing events. You can limit from 300 to 1000 queues. For more information on Callback Retry Policy, refer to the graph below.

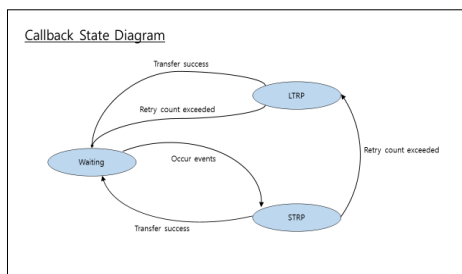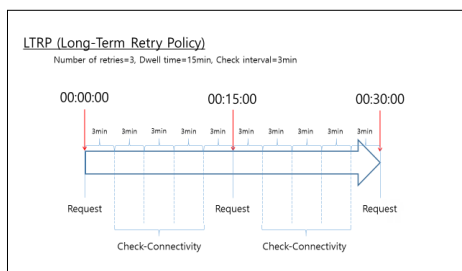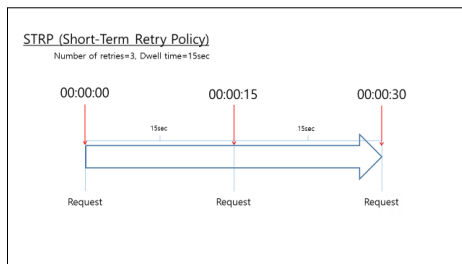

Mail

Configure Mail settings.

The screenshot shows the 'Mail' configuration window. On the left, there is a sidebar with options: Schedule, Callback, Mail (selected), Push, FTP, and HTTP. The main area displays a table with columns for 'Recipient', 'Attach Type', and a checkbox. The table has a 'Default Group' row and several empty rows. Below the table, there are buttons for 'Group', '+ Mail', 'SMTP Setup', and 'Attach Type Setup'. At the bottom, there are 'Default', 'Apply', 'OK', and 'Cancel' buttons.

- **+Group**: Add a recipient group and select the image file format attached to an email.

The screenshot shows the 'New Group' dialog box. It has two input fields: 'Group' with the value 'mail group_1' and 'Attach Type' with the value 'None'. There are 'OK' and 'Cancel' buttons at the bottom.


A virtual keyboard appears allowing you to enter the Group name. You can select between CBF and MP4. When selecting CBF, the NVR will attach an event detected video clip to an email. When selecting MP4, the NVR will attach the event detected image file (MP4 format) to an email.



- Be careful when interconnecting with 3rd-party solutions and systems, since email notification is a Best-effort service, not a Guarantee service.
- Email notification does not guarantee real-time due to SMTP protocol.
- If multiple transmissions occur in a short period of time, email attachments may not be sent correctly.

- **+Mail:** Add a mail recipient

Select the group name and then assign the **Group** to Recipient. Enter the recipient's e-mail address and mail server provider. Select the ★ icon to select the mail server provider from a list of registered SMTP mail server providers.

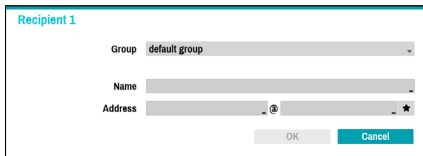

- ☒ The recipient's mail address must be in the correct email format and contain the @ symbol.


Select the **Attach Type** to attach event recordings to outgoing mails to an account that belongs to that group.

Select the ✕ icon to remove the account and added group.

SMTP Setup

Select **SMTP Setup** at the bottom right corner of the screen to configure an SMTP server.


- 1 Select the SMTP server **Type**.
- 2 Enter the **SMTP Server's** IP address or domain name and then configure the **Port** and **Sender** settings.

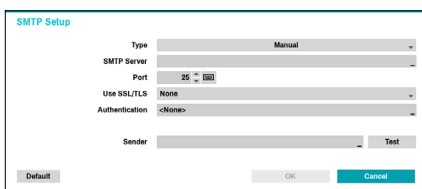

Default SMTP server port number is **25**. Select **Test** to send out a test mail using the current settings. Select SS/TLS or STARTTLS, depending a method of supporting a secure connection.

- ☒ If you have configured the DNS Server setting under **Network - WAN**, you can enter the SMTP server's domain name instead of its IP address in the **SMTP Server** field.
- Address entered under **Sender** must be in the correct email format and include the @ symbol.


If user authentication is required by the SMTP server, select **Use** and then enter the **User** and **Password** information.

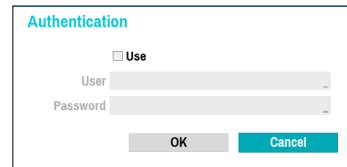

- 3 Select **OK** to apply and exit.

- ☒ This product contains content developed by OpenSSL Project for use in Open SSL Toolkit (<http://www.openssl.org/>).

Attach Type Setup

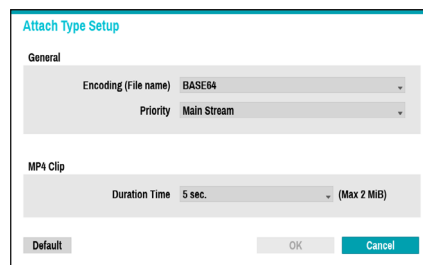

- **Encoding (File name):** Set the encoding for the name of the attached files to BASE64 or PLAIN-TEXT.
- **Priority:** Set the stream video for email and FTP attached files to Main Stream or Sub Stream.
- **MP4 Clip:** When sending an e-mail, event recordings will be attached and you can set the time to record MP4 clips.

- ☒ Event recordings are attached only for the event that the camera generates.

Push

Configure Push settings.

Select **Push** to use Push feature.

The Push feature sends out event-related messages to mobile phone.

- ☒ Enable to receive the event occurred in NVR on the mobile phone(Android, iOS). The NVR must be registered and set in mobile phone.

FTP

The FTP feature uploads event-detected images or video clips to the FTP site when an event occurs. Click the + icon at the bottom of the list to add an FTP site.

- **FTP:** Enter the FTP site information using the virtual keyboard.
- **Upload File:** Select the file format to be uploaded to the FTP site.

- ☒ Up to 5 FTP sites can be registered.


Click the + icon at the bottom of the list to add an FTP site.

- **Site:** Displays the list of the registered FTP sites. Select an FTP site from the list. If the Use settings of the NetFS site are set to anything other than **ALL** or **Clip-Copy**, you cannot select the FTP site. You can change the Use settings or register other FTP sites in the NetFS setup screen in the Network menu.
- **Upload File:** Select between **CBF** and **MP4**. When you select **CBF**, the NVR will upload an event detected video clip to the FTP site. When you select **MP4**, the NVR will attach an event-detected video clip to the FTP site.
- **Site Information:** Displays information for the FTP site.


- ☒ For the FTP notification to work properly, the related settings should be configured as follows:
 - **Network menu - NetFS tab - Use setting**
 - **Event menu - Actions - FTP setting**
- When you delete an FTP site from the NetFS setup screen in the Network menu, the FTP site in the FTP setup screen in the Notification menu will be deleted, too.
- Be careful when interconnecting with 3rd-party solutions and systems, since event uploading is a Best-effort service, not a Guarantee service.
- Event upload does not guarantee real-time due to the characteristic of the feature.
- The FTP notification is not supported for system events.
- If multiple transmissions occur in a short period of time, email attachments may not be sent correctly.
- If upload fails several times, the images or video clips are deleted.
- When the NVR boots, all images and video clips are deleted even if they were not uploaded yet.

HTTP

Notify or forward the events on remote HTTP servers. The event and NVR information are sent to HTTP servers in a JSON format.

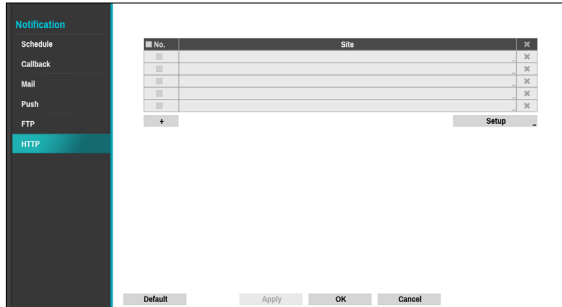


Click the + icon at the bottom of the list to enter the HTTP server information.

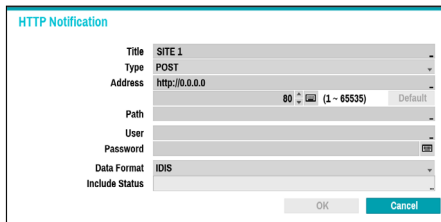

- **Title:** Enter the name of the HTTP site.
- **Type:** Select the request method of an HTTP message.
- **Address:** Enter the address of HTTP notifications.
- **Path:** Enter the path of HTTP server address.
- **User / Password:** Enter the user and password to access the HTTP site.
- **Data Format:** Set the data format of transmitted messages.
- **Include Status:** Select some options for status to include in an HTTP notifications.


HTTP Notification Setup

An attribute and parameters must be included when sending the http requests. Click the **Setup...** icon at a bottom right corner of the window. When the following window appears, click the + button to set the HTTP attributes such as the type, name and value.

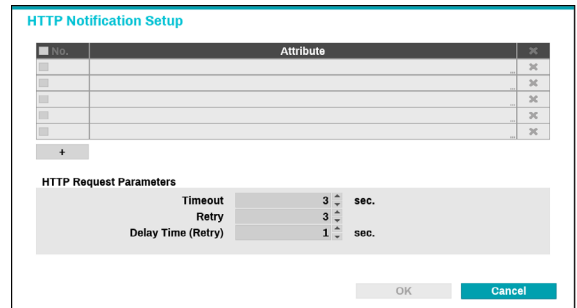

- **HTTP Request Parameters:** Set a specific response to an HTTP request.
 - **Timeout:** Set the maximum time allowed for connection.
 - **Retry:** Set the number of times to reconnect when a connection fails.
 - **Delay Time (Retry):** Configure the time interval between each retry attempt (initial delay between retry attempts)

HTTP Notification Attribute

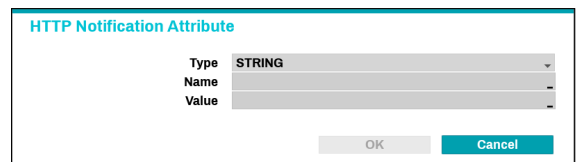


- **Type:** Select the corresponding type such as BOOL, INT32, FLOAT32 and STRING.
- **Name:** Enter the name of HTTP notification attribute.
- **Value:** Enter the value of HTTP notification attribute.

Display Setup


Refer to the **Menu Use on page 32** for basic information on using the Setup menus.

Device

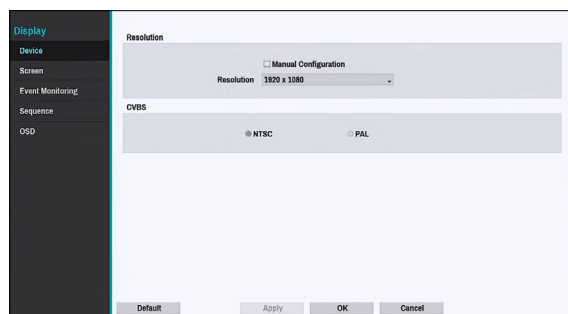


- **Manual Configuration:** Set the resolution manually regardless of the resolution supported by the monitor.
 - **Resolution:** Select from 3840 x 2160, 1920 x 1200, 1920 x 1080, 1680 x 1050 and 1600 x 1200.
 - **CVBS:** Select the type of analog video signal output through CVBS — either NTSC or PAL.
- ☒
 - Supported resolutions may be restricted depending on the monitor.
 - 3840 x 2160 @ 50/60Hz resolution is supported only in HDMI 2.0 monitor.
 - We recommend using 3840 x 2160 or 1920 x 1080 resolution.
 - If you use a VGA monitor as the main display, we recommend that you use a resolution of 1920 x 1080 or below.
 - HDMI deep color feature is not supported.

Screen

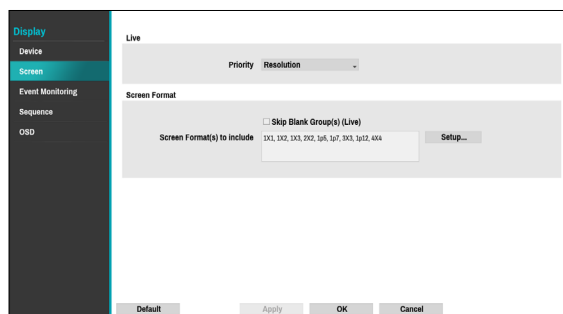

- **Priority** : Select the camera's live stream priority, either resolution or frame rate.
- **Skip Blank Group(s) (Live)** : Skip the unregistered blank channel groups on the live screen.
- **Screen Format(s) to include:** Click the **Settings...** button to select the screen format to be displayed on the live and search mode.

Event Monitoring

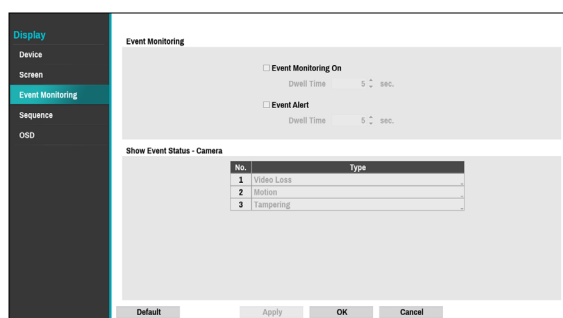

- **Event Monitoring On:** With Event Monitoring enabled, the camera screen linking event monitoring is shown. For more information on Event Monitoring, refer to the **Event Monitoring on page 28**.
- **Event Alert:** With Event Alert selected, the red line appears on the top of the camera screen linking event monitoring when an event occurs.
- **Show Event Status - Camera:** Add camera events displayed on the **Status > Camera** page.

Sequence


Configure monitor-related settings.



- **Mode:** Select **Full Sequence** or **Cameo Sequence**.
- **Interval:** Select between 3 secs and 2 mins. For more information on Sequence, refer to the [8 Sequence on page 25](#).

OSD

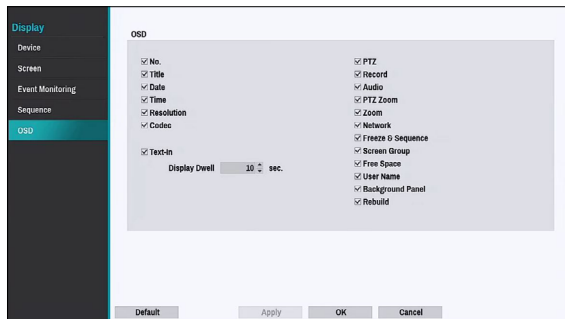

Show OSD (On Screen Display) information on the bottom of the screen.



Status

- **Date and Time:** Displays the date and time.
- **Network:** Displays the icon when the unit is connected to a network via Ethernet.
- **Free Space:** Displays whether or not the NVR is in the recycle mode, and displays the available storage space when not in the recycle mode.
- **User Name:** Displays the current user logged in.
- **Background Panel:** Displays background panel at the bottom of the screen in black.

Camera


- **No.:** Displays the camera number on the upper left corner of the camera screen.
- **Title:** Displays the camera name on the upper left corner of the camera screen.
- **Record:** Displays recording and schedule icons.
- **Audio:** Displays the  icon on channels generating audio.tkfd60
- **PTZ:** Displays the  icon on PTZ cameras.
- **PTZ Zoom:** Displays the zoom magnification (e.g. x2, x3, etc.)
- **Text-In:** Displays data received from text-in device. Select **Display Dwell** and specify how long to display data. Data are shown on the single screen only.
- **Resolution:** Displays the recording resolution in Playback mode.
- **Codec:** Displays the codec information in Playback mode.
- **Zoom:** Displays a zoomed in state.
- **Freeze & Sequence:** Displays freeze and sequence icons.
- **Screen Group:** Displays the current screen's group.

Status Setup




Refer to the **Menu Use on page 32** for basic information on using the Setup menus.

Camera

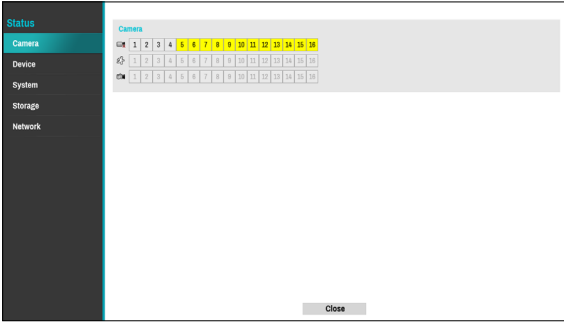This screen displays an overview of camera events. When an event occurs, the corresponding channel flashes for 5 seconds.




Event Types





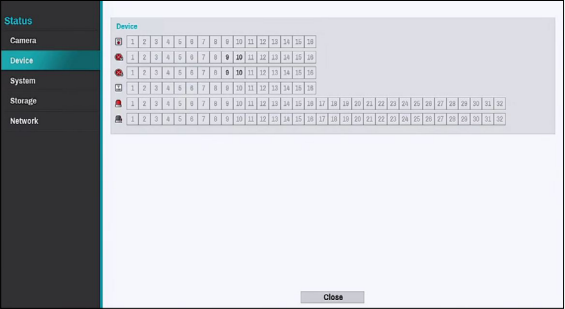

	Motion		Video Loss
	Tampering		

Device

This screen displays an overview of device events. When an event occurs, the corresponding channel flashes for 5 seconds.



Event Types


	**Recording Fail of Main Stream		**Recording Fail of Sub Stream
	Text-In		Alarm-In
	Check Alarm-In		Network Alarm



** Those are supported by some products only.

System


This screen displays an overview of system events. When an event occurs, the corresponding channel flashes for 5 seconds.

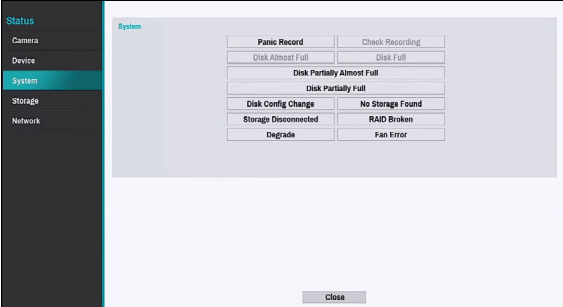

- **Panic Record:** Displays event status based on current Panic Record status.
- **Check Recording:** Displays event status based on **System Monitoring** settings. For more information, refer to the [Video-Analytics Motion on page 62](#).
- **Disk Almost Full/Disk Full:** If the storage device is not in **Recycle** status, event status is displayed when the amount of disk space specified under **System Monitoring** is reached and when the disk becomes 100% full. For more information, refer to the [Video-Analytics Motion on page 62](#).
- **Disk Partially Almost Full / Disk Partially Full:** If the storage device is not in Recycle status, event status is displayed when a disk in one of multiple quota groups reaches a specified capacity or disk usage reaches a specified capacity under System - Monitoring.
- **Storage Disconnected:** Event status is displayed when the storage device is abruptly disconnected.
- **Disk Config Change:** It will be highlighted when the NVR reboots after the hard disk drive has been replaced.
- **No Storage Found:** It will be highlighted when no recordable storage device has been found.
- **RAID Broken:** Event status is displayed when the mirroring configuration is broken. (This function is supported only on models that end with the letter R in their model name.)
- **Degraded:** Event status is displayed when one of the HDDs composing mirroring is in error. (This function is supported only on models that end with the letter R in their model name.)
- **Fan Error:** Event is indicated when the cooling fan cannot reach a certain RPM or fails for longer than 50 seconds.

Storage

Indicates each disk's status.

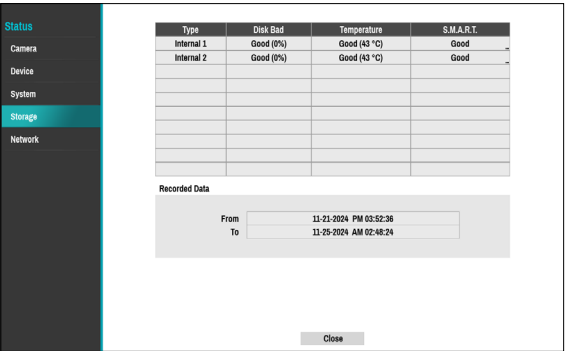

Configure Disk Bad and Disk Temperature settings under **Setup > System > Monitoring** and click on the S.M.A.R.T section to view the S.M.A.R.T information.


Disk Bad	Not Formatted	A disk that has never been used before.
	Good	<ul style="list-style-type: none"> Disk performing normally. If the HDD is partially damaged, indicates the bad sector percentage.
	Error	<ul style="list-style-type: none"> If the HDD's bad sector ratio is higher than as designated by the user. Generates a system event.
Temperature	N/A	Unable to detect the disk's temperature.
	Good	Operating within normal temperature range.
	Bad	<ul style="list-style-type: none"> Disk temperature higher than as designated by the user. Generates a system event.
S.M.A.R.T.	N/A	A disk that does not support S.M.A.R.T.
	Good	A disk with normal S.M.A.R.T. status.
	Bad	A disk with abnormal S.M.A.R.T. status. Possibility of damage within 24 hours.








- Check all data's storage time information under **Recording Data**.
- Clicking the temperature, S.M.A.R.T can check the each HDD information.

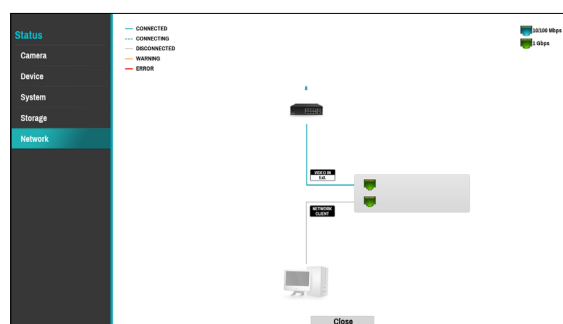

Network

This page provides a complete overview of the network status in real-time.




Information shown include camera connection status, LAN port link status, power consumption, number of connected clients, and network connection info.

Network Switch	 indicates a network switch is connected to the LAN port and shows how many cameras are connected. Clicking the image displays the camera's channel number. Clicking the image displays status information of the device connected to the NVR.
LAN Port Link	 indicates a camera or a network switch is connected.  indicates neither is connected.
LAN Port Speed	 indicates 10/100Mbps and  indicates 1Gbps.

Number of Connected Clients	<p>Indicates whether there are clients connected to the NVR via an external network and how many clients are connected.</p> <p> indicates at least one client is connected.  indicates no client is connected.</p>
Network Connection Info	<p>Indicates network connection statuses (connected, connecting, disconnected, and connection error) using following lines:</p> <div><div>—</div>CONNECTED</div> <div><div>- - -</div>CONNECTING</div> <div><div>—</div>DISCONNECTED</div> <div><div>—</div>WARNING</div> <div><div>—</div>ERROR</div>

Part 3 - Search

Time-Lapse Search

While in Live mode, select the **Search Mode**  icon and select **Time-Lapse Search, Event Log Search**. Select **Menu** while in Search mode to display a menu from which you can select **Control Area**.


Search Menu



- ① **Layout**
Used to change the screen layout to single screen, corridor format, 2x2, 1p5, 1p7, 3x3, 1p12 or 4x4.
- ② **Previous/Next Group**
Loads the previous/next screen group.
- ③ **Display**
 - **Full Screen On:** Display the screen with a 16:9 aspect ratio. When you place the mouse at the bottom of the screen, the interface screen related to playback will appear. Refer to detailed explanations on the next page.
 - **Full Screen Off:** Display Time-Lapse Search screen.
 - **Camera OSD On/Off:** Enables/disables the camera OSD feature.
 - **Status OSD On/Off:** Enables/disables the status OSD feature.
 - **Aspect Ratio On/Off:** Setting On displays video on the camera screen in its original ratio.

- ④ **Alarm**
Pressing this button while the alarm has been activated resets all NVR alarm outputs, including the built-in buzzer.
- ⑤ **Database**
 - **Record:** Search recording data contained in the main recording device.
 - **Record Protection:** Protect the recording data even if overwriting is enabled.
 - **Other:** Search data recorded while disks used in other systems were connected.

☒ Even with recording overwrite enabled, recording may not work if the recording protection function is active. Therefore, if you do not use the function, be sure to deactivate it.
- ⑥ **Panic Record**
Use the Panic Record feature.
- ⑦ **Camera**
Select a camera channel and display it as a single screen.
- ⑧ **Live Mode**
Activates Live mode.
- ⑨ **Search Mode**
Search by changing Time-Lapse Search, Event Log Search.

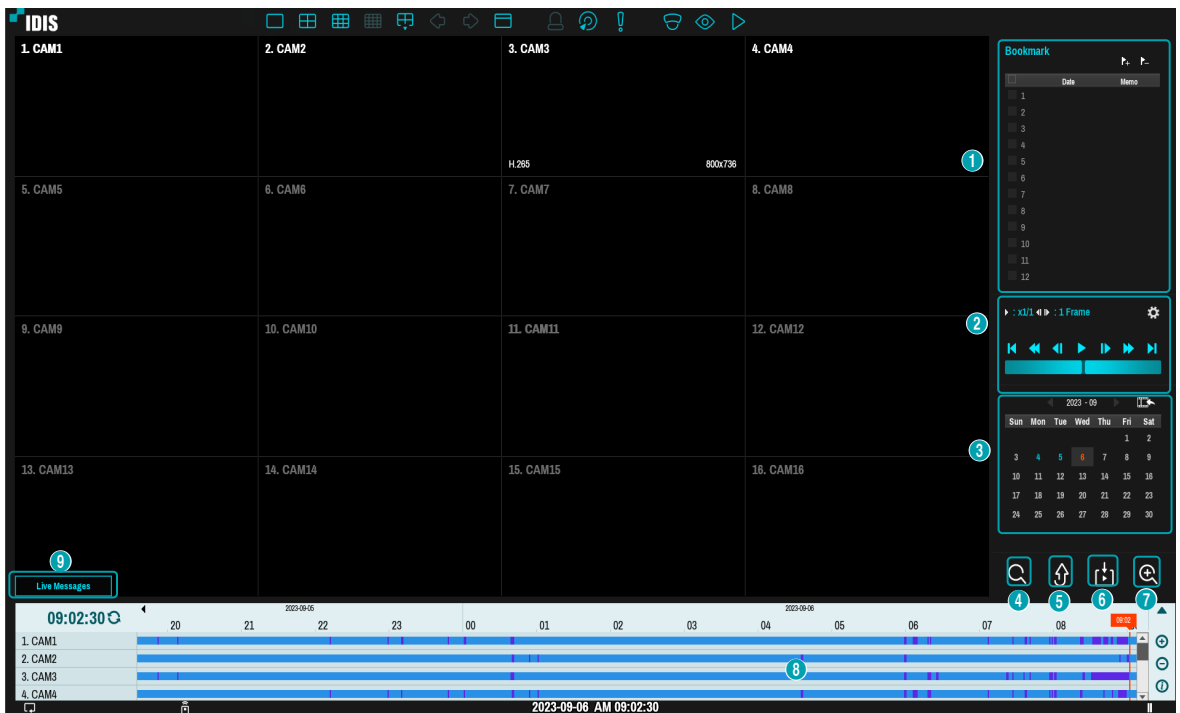

① Bookmark

Select the  icon to add a bookmark to the current playback position.

Select a bookmark from the Bookmark setup window on the right side of the Time-Lapse Search mode screen to move to the registered playback position.

Select Bookmark list and then the  icon to delete the corresponding bookmark.



The maximum number of bookmarks that can be saved is 12.

② Playback Controls


Play and scan through video recordings.


● Jog Shuttle

Adjust the playback method and speed.

Jog shuttle's vertical indicator indicates the current playback direction and speed. Vertical indicator placement to the right of the center means the video is being played back in the forward direction. Placement to the left means the opposite. Farther away the vertical indicator from the center, faster the playback speed. Click and drag the vertical indicator to adjust the playback speed. Releasing the mouse button returns the vertical indicator to the center and stops video playback.

● Option

Clicking  icon to set Slow Play and Previous/Next Unit.

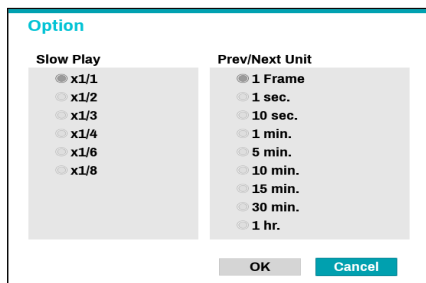

The 'Option' dialog box has two sections. The 'Slow Play' section on the left contains radio buttons for playback speeds: x1/1, x1/2, x1/3, x1/4, x1/6, and x1/8. The 'Prev/Next Unit' section on the right contains radio buttons for time intervals: 1 Frame, 1 sec., 10 sec., 1 min., 5 min., 10 min., 15 min., 30 min., and 1 hr. At the bottom are 'OK' and 'Cancel' buttons.

● Slow Play


Search the playback screen at low speeds. Select the desired playback speed (x1/1, x1/2, x1/3, x1/4, x1/6, x1/8) and then select Play.

● Prev/Next Unit

Set the movement range of the previous and next unit. Select the desired unit (From 1 Frame to 1 hour).

③ Calendar Search

Use the calendar to search for video recordings by specific dates.

Dates containing video recordings are highlighted in light blue. Selecting a date containing video recording data loads the earliest recording from that date (paused state). Selected date is highlighted in orange. Clicking  icon on the right side of the calendar changes the calendar to the date of the current playback screen.


④ Event Search

Selecting Event Search provides Text-In Search options.


- **Text-In Search:** Perform Text-In Search.

⑤ Move

Search video recordings based on date and time. Specify the date and time and then select Go to jump to the corresponding video recording.

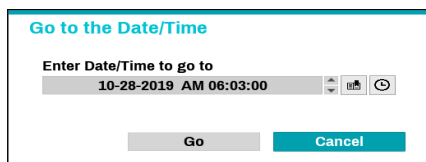

The 'Go to the Date/Time' dialog box has a text input field labeled 'Enter Date/Time to go to' with the value '10-28-2019 AM 06:03:00'. To the right of the input field are icons for date selection (calendar), time selection (clock), and a search icon. At the bottom are 'Go' and 'Cancel' buttons.

Select a  (bookmark) button on the right side to move to the saved bookmark position.

⑥ Clip-Copy


- **A-B Clip Copy:** Designate a start point and an end point and copy the data in between.
- **Clip Copy:** Opens up the Clip Copy Setup window for designating points A and B.

⑦ Zoom

Zoom in.

⑧ Record Table

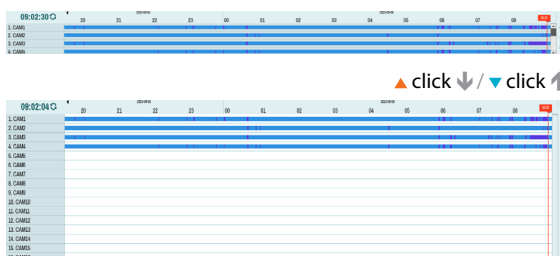

Display the current channel's recording information.





Recording date and time are shown on the top of the search window. The gray indicator line on Record Table indicates the current playback position. Use the mouse to jump to the desired playback position.



- Farther back the data is on the record table, the more recent it is.
- If the system's clock is changed to a previous date and time, it is possible for multiple recordings with the identical time stamp to exist. Overlapped segments are highlighted in yellow.


Selecting  or  on the upper right portion of the Time-Lapse search window changes the size of search window and displays all or minimum channels.

Using the scroll, the information of other channels which is not shown can be checked in the minimum size of Time-Lapse search window.

Select  (zoom-in) to compose recording data in 1-minute segments and select  (zoom-out) to compose recording data in 3-minute segments. Selecting zoom-out displays more time in one screen than zoom-in screen.






If recording from points in time prior or after the time frame displayed on the screen is available, scrolls appear on both ends of the date and time information line.

Scroll dragging with the mouse to check recording data.

Display the latest update recording information when selecting  (Refresh).



Recording Data Bar Colors

Blue		Time Lapse Recording
Purple		Event Recording
Yellow		Pre-Event Recording
Red		Panic Recording
Green		- Faulty recording due to a temporary disruption in device connection - Smart Failover Recording

⑨ **Live Messages**

Display a message to make it easier for users to recognize critical events and system information that happen in real time.


Context Menu

Select the Menu button or right-click on the Camera screen to access the context menu.

- **Zoom:** Zoom in.
- **Audio:** Select the audio source and enable/disable audio. All the context menu is enabled, and audio output is only possible if the audio source is saved.
- **Show/Hide Text-In:** Show/hide text-in information contained in the recording.
- **Edit Group:** Rearrange the split screen layout.
- **Live Messages:** Receive the message in real time

Text-In Search


Select **Text-In Search** from the Search menu to bring up the Text-In Search window.

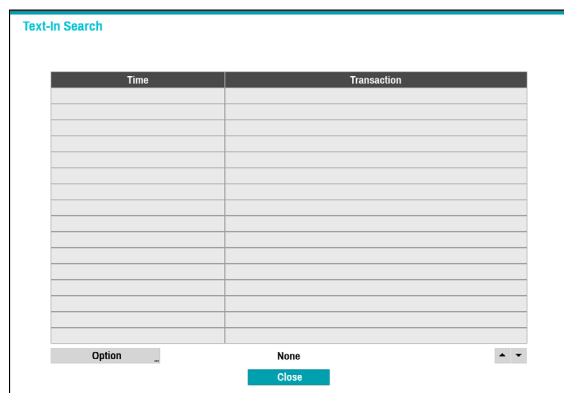

Select a **Transaction** to display the video recording that corresponds to the selected time and date (paused state).

- ☒ Text-in information is superimposed on the screen at normal playback speed. The information is not shown under any other playback speed.

Select **Option...** to configure Text-In Search options.

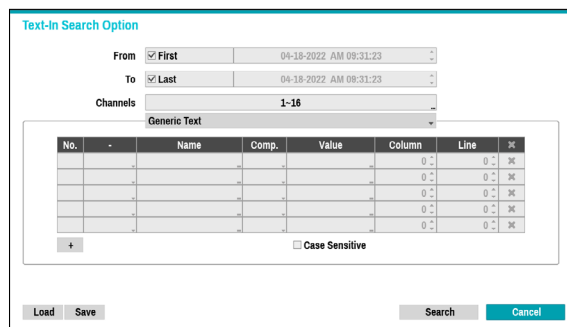

- Select **First** under **From** and **Last** under **To** to search the recording from start to finish. Alternatively, you can uncheck the **First** and **Last** options and specify the search time frame manually.
- **Channels:** Select a channel.
- Select **Text-In Device** to select a device type.
- **+ Button:** Add a search variable.
- **Case Sensitive:** Configure case sensitivity.
- **Load:** Retrieve stored search option settings.
- **Save:** Save the current search option settings.


Once all the options have been configured, select **Search** to begin the search and return to the **Text-In Search** setup window.


Clip Copy

Clip Copy

Select **Clip-Copy – Clip Copy** from the Search menu while in Live or Playback mode to open up the **Clip Copy** setup window. Specify the **From** and **To** settings.

A-B Clip Copy

Designate a start point and an end point and copy the data in between. Select **Clip-Copy – A-B Clip Copy** from the Search menu to set point A. The  icon will appear on the status indicator area on the upper right corner of the screen. Select **Clip-Copy – A-B Clip Copy** once again to set point B. The Clip Copy Setup window will appear. Select A and B points are automatically applied as **From** and **To** values.

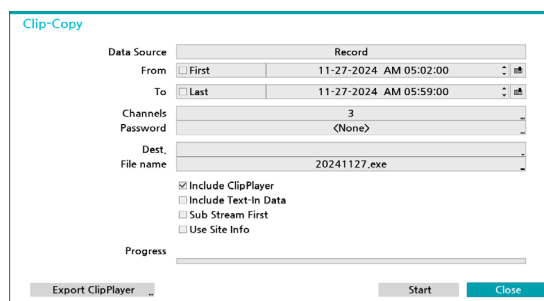

- **Channels:** Specify which channel to save the recording to.
 - **Password:** Enable password protection for the saved video clip and assign a password.
 - **Dest.:** Select which storage media to use. If NetFS feature is in use, you can upload video clips to the registered FTP site.
- ☒
 - When you clip-copy to the NetFS site, the capacity of NetFS site and Disk cannot be found.
 - The maximum size limit for clip-copy files is 30 GB.
 - If the video clip is uploaded after you clip-copy, the video clips will be deleted.
 - If the files are the same files, the video clips cannot be copied.

- **File name:** Designate a name for the file. The name may be up to 63 characters in length.
 - ☒ Special characters such as \, /, :, ;, *, ?, !, ", <, >, and | are not permitted.
- **Include ClipPlayer:** Enabling this option will save the video clip as an .exe file with clipplayer.
- **Include Text-In Data:** Enabling this option will save the video clip along with any available text-in data.
- **Sub Stream First:** If the video clip has dual recording information, the sub stream is saved first.
- **Use Site Info:** Adds **Site** info to the Clip Copy file's name.

☒ Special characters contained in the location info (such as \, /, :, ;, *, ?, !, ", <, >, and |) will be replaced with _ when the information is added to the file name.

- **Export Clipplayer:** Enabling this option will save the copied clip(.cbf) as a clipplayer to be played.

Selecting **Start** displays a calculation on the size of the data to be copied. Check the calculation and then select **Continue** to proceed. While Clip Copy is in progress, you can select **Cancel** to cancel the process or select **Close** to allow the window to run in the background. Selecting **Close** does not cancel Clip Copy. Once the process is complete, you will be prompted with a confirmation window.


- ☒ • **One-Touch Clip Copy** configures the storage range automatically based on the storage drive's capacity. If there is insufficient space available on the selected storage device, you will only be able to Clip Copy an amount of data equaling the remaining space available on the storage device.
- The NVR displays the volume as 30GB regardless of the actual disk volume and the maximum size limit on Clip Copy files is 30GB. Clip Copying a segment that is more than 2GB in size produces multiple files that are up to 2GB in size, each.
- Clip Copy files can be played back on Windows systems. For more information, refer to the IDIS Center operation manual.
- For USB flash memory devices, the NVR supports the FAT32 file format only.




Do not disconnect the USB cable or power off the USB device while USB Clip Copy is in progress. Doing so can cause the NVR to malfunction or critically damage the external USB device's file system. You may be prompted with an error message when trying to back up on the device. If so, you will need to restart the NVR. If the USB hard disk's file system has been damaged, restarting the NVR will not solve the problem and the aforementioned error message will continue to be displayed each time you attempt a backup. If this is the case, you will need to format the HDD or use a recovery program to repair the damage to the drive's file system.

Event Log Search

Select **Search Mode > Event Log Search** to bring up the Event Log Search window.

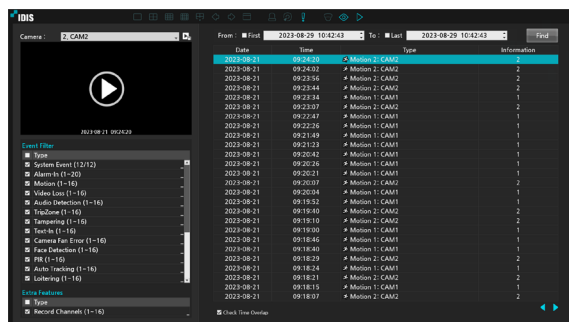

Select an event to display the recording made on the selected time and date (paused state). Select the Play button in the middle of the screen to start playing back the recording. Use the drop-down menu above to load recordings from other cameras.

- Selecting the specific event displays the screen to be stationary. By clicking the  button on the camera right, you can copy the event.
- You can uncheck the **First** and **Last** options at the top of the Event Log Search window and specify the search time frame manually.



Select First for From and Last for To to select the entire recording from start to end.

- If designating **From** or **To** settings manually, you will be able to enable/disable the **Check Time Overlap** option.



If the system's clock has been changed and the designated **From** or **To** point exists at more than one location, you will have to choose one. Only the events that took place between the selected **From** and **To** points will be searched. If **Check Time Overlap** has not been selected, events from the entire **From** and **To** range will be searched.

- Use event filters to include/exclude specific system events such as **Panic Record**, **Check Recording**, **Check Alarm-In**, **Disk Almost Full**, **Disk Bad**, **Disk Temperature**, **Disk S.M.A.R.T.**, **Fan Error**, **Storage Disconnected** and **Disk Config Change** from the search.

Event Filter

- **System Event:** Select which channels to search system events in.
- **Alarm-In:** Select which channels to search alarm-in events in.
- **Motion:** Select which channels to search motion detection events in.
- **Video Loss:** Select which channels to search video loss events in.
- **Tampering:** Select which channels to search tampering events in.
- **Text-In:** Select which channels to search text-in events in.
- **Network Alarm:** Select which network alarm to search events in.



Selected record channels are searched for events with at least one linked recording. If no camera is selected, only the events with no linked recording camera are searched.

Event Features

- **Recording Fail:** Select which channels to search recording fail events in.

Part 4 - IDIS Web

IDIS Web is a program that allows you to view and search video from remote locations over the Internet and can be accessed on the various web browser.

System requirements for running IDIS Web are as follows:

- OS: Microsoft® Windows® 10 (Pro, Home), Microsoft® Windows® 11
- CPU: Intel Pentium IV 2.4GHz or above (Core 2 Duo E4600 recommended)
- RAM: 1GB or more
- VGA: 128MB or more (1280x1024, 24bpp or above)
- Chrome: Google Chrome 22.0.1229.0 or above (59.xxx or above recommended)
- Edge: 98.0.1108.43 or above

- 1 Launch the web browser and then enter the following information in the address bar.
 - http://IP Address:Port Number (NVR system's IP address and IDIS Web port number configured under Network > General (Default Value: 12088))
 - http://fen.idisglobal.com/FEN Name (FEN Name: NVR name configured on the FEN server)
 - http://web.idisglobal.com (will be prompted to enter NVR's IP address or FEN name registered to the FEN server upon login)



Contact your network administrator for the IP address of the NVR you wish to connect to and the IDIS Web port number.


- 2 When prompted with the IDIS Web login window, select **LIVE-PORT** or **PLAY-PORT** as the desired mode. Enter the ID and password and click **LOGIN** to sign in using the selected mode.

If connecting by entering <http://web.idisglobal.com>, enter the NVR's IP address in the Device Address field. Selecting the Use FEN Service option on the login window allows you to enter the NVR name registered to the FEN server instead of its IP address. You will be prompted to enter the FEN server's address and port number under Setup.












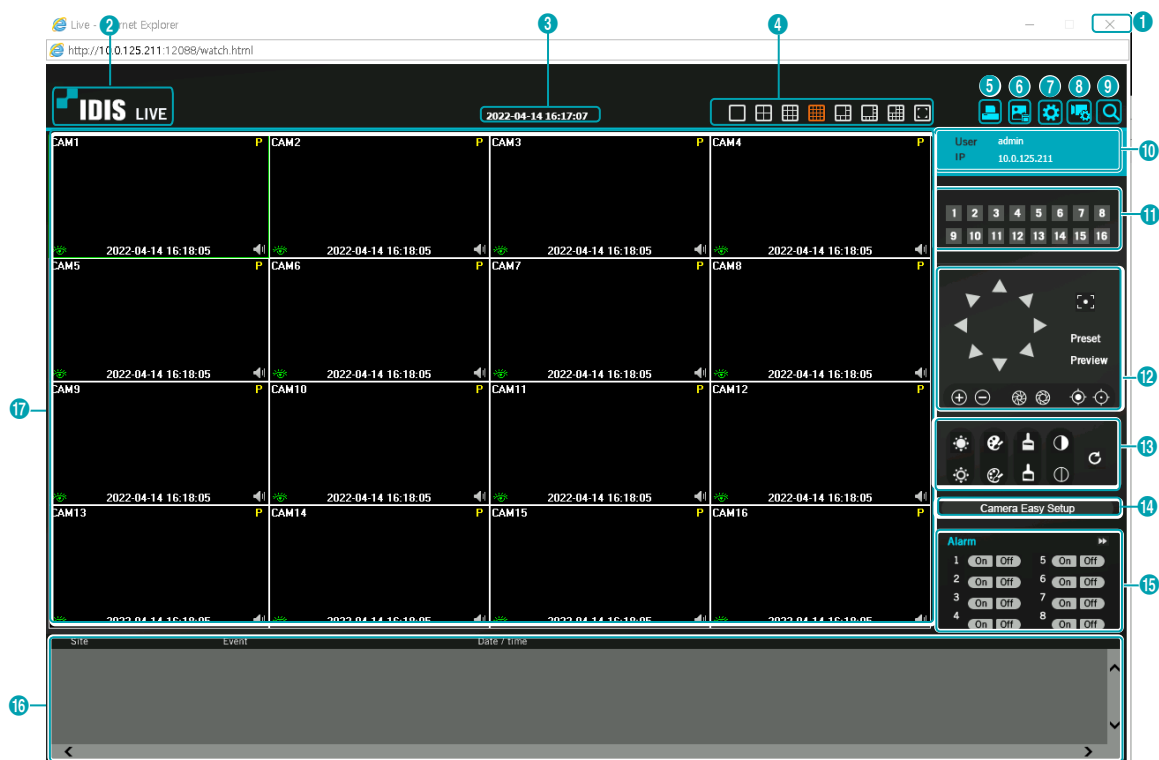


- ☒ • Do not close the login window while IDIS Web is running. Switching over to Web Live or Web Search mode can cause a script error, requiring you to restart the IDIS Web program.
- If running IDIS Web, the bottom section of the screen may get cut off if the address bar or the status bar is shown. In this case, change Internet Options so that the address bar or the status bar is hidden. (**Tools** → **Internet Options** → **Security** → **Custom level...** → **Allow websites to open windows without address or status bars (Enable)**)
- To use IDIS Web on Microsoft Windows Vista or above, launch Internet Explorer by right-clicking on the icon and selecting the **Run as administrator** option. Otherwise, certain IDIS Web functions might not be available.
- Launching a new version of IDIS Web for the first time can cause Internet Explorer to load information from the previous version. In this case, navigate to **Tools** → **Internet Options** → **General**, delete temporary Internet files, and then restart IDIS Web.
- On Microsoft Windows Vista or above, lowered image transmission rate can prevent the screen from being displayed or updated. In this case, we recommend that you disable the computer's auto tuning function. Open the command prompt as an administrator. (**Start** → **Accessories** → **Command Prompt** → **Right-Click** and then select **Run as administrator**) Type in "**netsh int tcp set global autotuninglevel=disable**" and then press Enter. Restart the computer to apply the change. To enable auto tuning again, launch the command prompt as an administrator and then type in "**netsh int tcp set global autotuninglevel=normal**". Restart the computer to apply the change.

Web Live Mode

A remote web monitoring program that allows you to monitor images from remote locales in real-time.




1	Press to terminate IDIS Web.
2	Place the mouse pointer on the to check IDIS Web's version.
3	Displays the current time.
4	Select the desired mode. Changing the mode places the selected camera in the first cell of the layout that will be changed.
5	Click to print the current video screen using a printer connected to the computer.
6	Click to save the current video screen as an image file.
7	Click to configure rendering mode, OSD settings and AlarmOut beep. Select rendering mode to adjust the video output rate or select which OSD elements to display on the screen from the OSD list. Select between Beep On and Beep Off to turn on/off the AlarmOut beep.
8	Click to configure event, camera, stream settings, etc of NVR at remote locales.
9	Click to switch over to Web Search mode.
10	Shows login information.






11	Select the camera you wish to monitor. Use the arrow buttons to navigate to the previous/next camera group.																
12	Used to control a PTZ camera at a remote location.																
13	Used to adjust live video quality.																
14	<p>Used to configure camera easy setup. Select from presets or custom setup for the video mode according to daytime/nighttime.</p> <ul style="list-style-type: none"> • Preset: Select from Natural, Vivid or De Noise. • User Custom: Manually configure the values of each setting (Sharpness, Contrast, Colors and Brightness). 																
15	Controls remote alarm out devices. Use the arrow buttons to navigate to the previous/next alarm group.																
16	Event status window at the bottom of the screen displays a list of events detected at remote locales.																
17	<p>Select a camera from the screen and right-click to bring up the pop-up menu.</p> <ul style="list-style-type: none"> • Change Camera Title: Used to change the camera's name. <div data-bbox="1063 672 1275 807" data-label="Table"> <table> <tr> <td>Change Camera Title</td><td></td></tr> <tr> <td>Enable Audio</td><td></td></tr> <tr> <td>Aspect Ratio</td><td>▶</td></tr> <tr> <td>Anti-Aliasing Screen</td><td></td></tr> </table> </div> <div data-bbox="257 734 308 782" data-label="Image"><input checked="" type="checkbox"/></div> <p>Renaming the camera in Web Live mode does not affect the camera's name on the remote system. If no name is entered for the camera, the name used at the remote locale is shown on the screen.</p> • Enable Audio: Enables audio transmission with remote locales. Select to display  buttons. <table border="1" data-bbox="257 884 1275 1047"> <tr> <td></td><td>Enables transmission of audio to the remote locale via microphone.</td></tr> <tr> <td></td><td>Enables playback of audio from the remote locale on speakers.</td></tr> <tr> <td></td><td>Enables two-way audio communication with the remote locale.</td></tr> <tr> <td></td><td>Disables audio transmission.</td></tr> </table> <div data-bbox="257 1081 308 1130" data-label="Image"><input checked="" type="checkbox"/></div> <p>If the remote locale connected to supports audio transmission,  icon appears on the corresponding camera screen.</p> • Aspect Ratio: Changes the aspect ratio of the video displayed on the screen. <ul style="list-style-type: none"> – Fit to Screen: Fit the video to the size of the camera screen. – Fit to Aspect Ratio: Resizes camera screen to original aspect ratio of the video. – Half Size (x0.5) - 4 Times Bigger (x4): Displays the camera videos in the selected size based on the original size of the video. For example, original size (x1) displays the video in its original size. Half size (x0.5) through 4 times larger (x4) options are only available if there is enough space on the camera screen to accommodate the selected size. • Anti-Aliasing Screen: Removes stair step effect (blocks) that is caused when zooming a video to improve overall quality of video output. 	Change Camera Title		Enable Audio		Aspect Ratio	▶	Anti-Aliasing Screen			Enables transmission of audio to the remote locale via microphone.		Enables playback of audio from the remote locale on speakers.		Enables two-way audio communication with the remote locale.		Disables audio transmission.
Change Camera Title																	
Enable Audio																	
Aspect Ratio	▶																
Anti-Aliasing Screen																	
	Enables transmission of audio to the remote locale via microphone.																
	Enables playback of audio from the remote locale on speakers.																
	Enables two-way audio communication with the remote locale.																
	Disables audio transmission.																



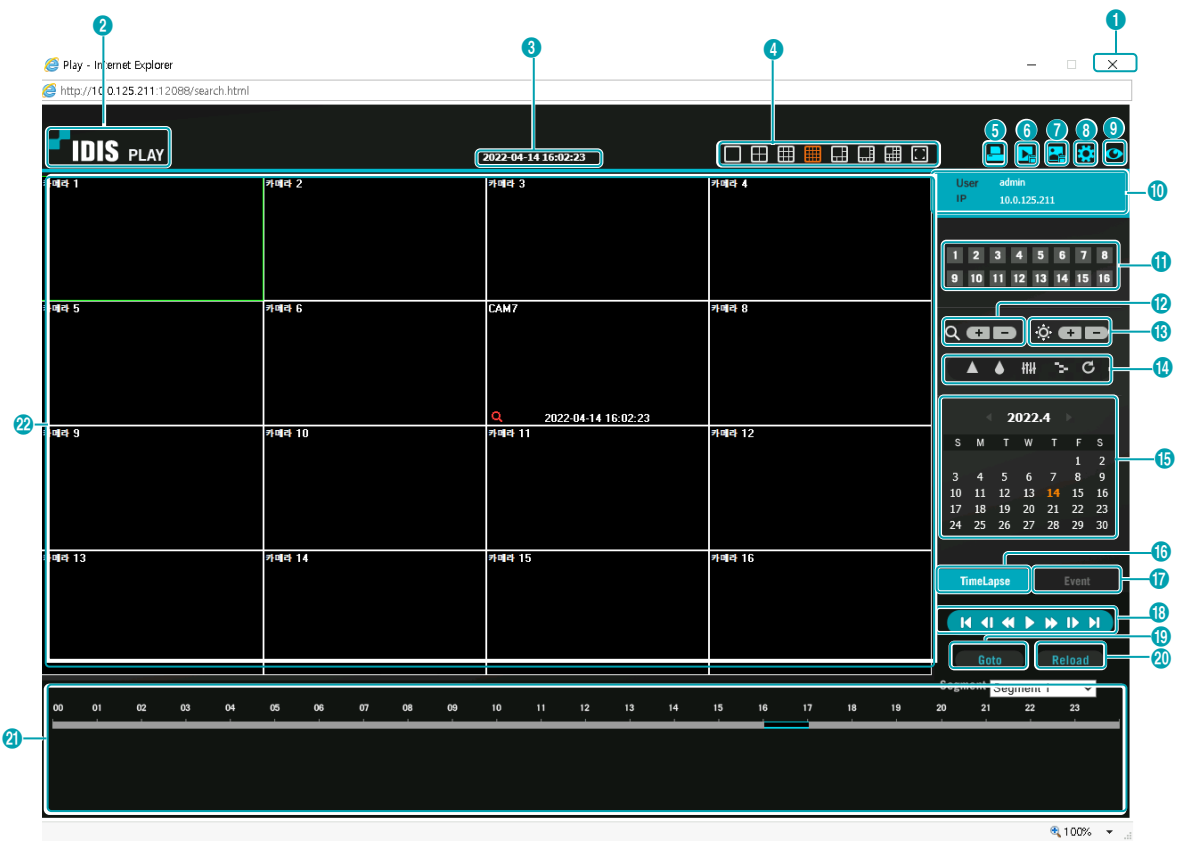
























Web Search Mode

A remote web search program that allows you to search for recordings from remote locales in real-time.

- ☒
- While in Web Search mode, connection to remote locales will terminate automatically after 30 minutes of inactivity.



1	Press  to terminate IDIS Web.
2	Place the mouse pointer on the  IDIS logo to check IDIS Web's version.
3	Displays time information of the video recording from the remote NVR.
4	Select the desired mode.
5	Click  to print the current video screen using a printer connected to the computer.
6	Click  to save the video recording as an executable file.
7	Click  to save the current video screen as an image file.

8	Click  to configure rendering mode, OSD settings, responsiveness preference to time-precision setting and dual-stream playback priority. Select rendering mode to adjust the video output rate or select which OSD elements to display on the screen from the OSD list. Select Other Setup to prefer responsiveness to time-precision when performing the GoTo function on a Long-GOP image. Select from Dynamic Control, Main Stream Priority or Sub Stream Priority to set the dual-stream playback priority.																
9	Click  to switch over to Web Live mode.																
10	Shows login information.																
11	Select the camera you wish to search. Use the arrow buttons to navigate to the previous/next camera group.																
12	Zoom in or out on the video.																
13	Adjust image brightness.																
14	<p>Apply image filters (Sharpen, Blur, Equalizer, Interpolation, and Revert) to the images.</p> <div><input checked="" type="checkbox"/> Image calibration is applied only during the paused state.</div>																
15	<p>Use the calendar to search for video recordings by specific dates.</p> <p>Dates containing video recordings are highlighted in light blue. Selecting a date containing video recording data loads the earliest recording from that date(paused state). Selected date is highlighted in orange.</p>																
16	Select  to enable time lapse search mode and search/play back video recordings in chronological order. In Time Lapse Search mode, search is conducted by selecting days on the calendar. The time table at the bottom displays recording data information for the selected date. Select a point in time to display video from that moment. If multiple recordings are available for the selected point in time, you can select the desired segment.																
17	Select  to enable event search mode and search for events matching user-designated parameters.																
18	<p>Use the playback controls to play back video.</p> <table><tr><td></td><td>Go to First</td><td></td><td>Play by Frame (forwards)</td></tr><tr><td></td><td>Rewind</td><td></td><td>Fast Forward</td></tr><tr><td></td><td>Play by Frame (backwards)</td><td></td><td>Go to Last</td></tr><tr><td></td><td>Play/Pause</td><td></td><td></td></tr></table>		Go to First		Play by Frame (forwards)		Rewind		Fast Forward		Play by Frame (backwards)		Go to Last		Play/Pause		
	Go to First		Play by Frame (forwards)														
	Rewind		Fast Forward														
	Play by Frame (backwards)		Go to Last														
	Play/Pause																
19	Click  to designate recent recordings you wish to search and then jump to a specific point in the recording.																
20	Click  to reload recent video recordings from remote locales.																
21	Indicates the selected camera's recording data on a time bar. If the camera's system clock has been changed to a point in the past and more than one recording exists at the same point in time as a result, you will be able to choose which segment to search from the segment menu on the upper right portion of the time table.																

22

Select a camera from the screen and right-click to bring up the pop-up menu.

- **Change Camera Title:** Used to change the camera's name.

☒ Renaming the camera in Web Search mode does not affect the camera's name on the remote system. If no name is entered for the camera, the name used at the remote locale is shown on the screen.

- **Enable Audio:** If audio was recorded with the video, enabling this option plays audio upon playback (limited to single-screen playback).
- **Aspect Ratio:** Changes the aspect ratio of the video displayed on the screen.
- **Anti-Aliasing Screen:** Removes stair step effect (blocks) that is caused when zooming a video to improve overall quality of video output.

Change Camera Title

Enable Audio

Aspect Ratio ▶

Anti-Aliasing Screen

Part 5 - Appendix


NAT Function Example

NAT function is to connect to the camera which is internal VIN network from the physically divided WAN network PC (WebSetup / IDIS Web / IDIS Center program / RTSP).

To connect to the camera WebSetup / IDIS Web / IDIS Center program / RTSP function, you need to configure the NAT rule to forward ports from NVR port number to the camera port number.

NAT Configuration Guide

Images shown are for illustration purposes only and may not match the product.

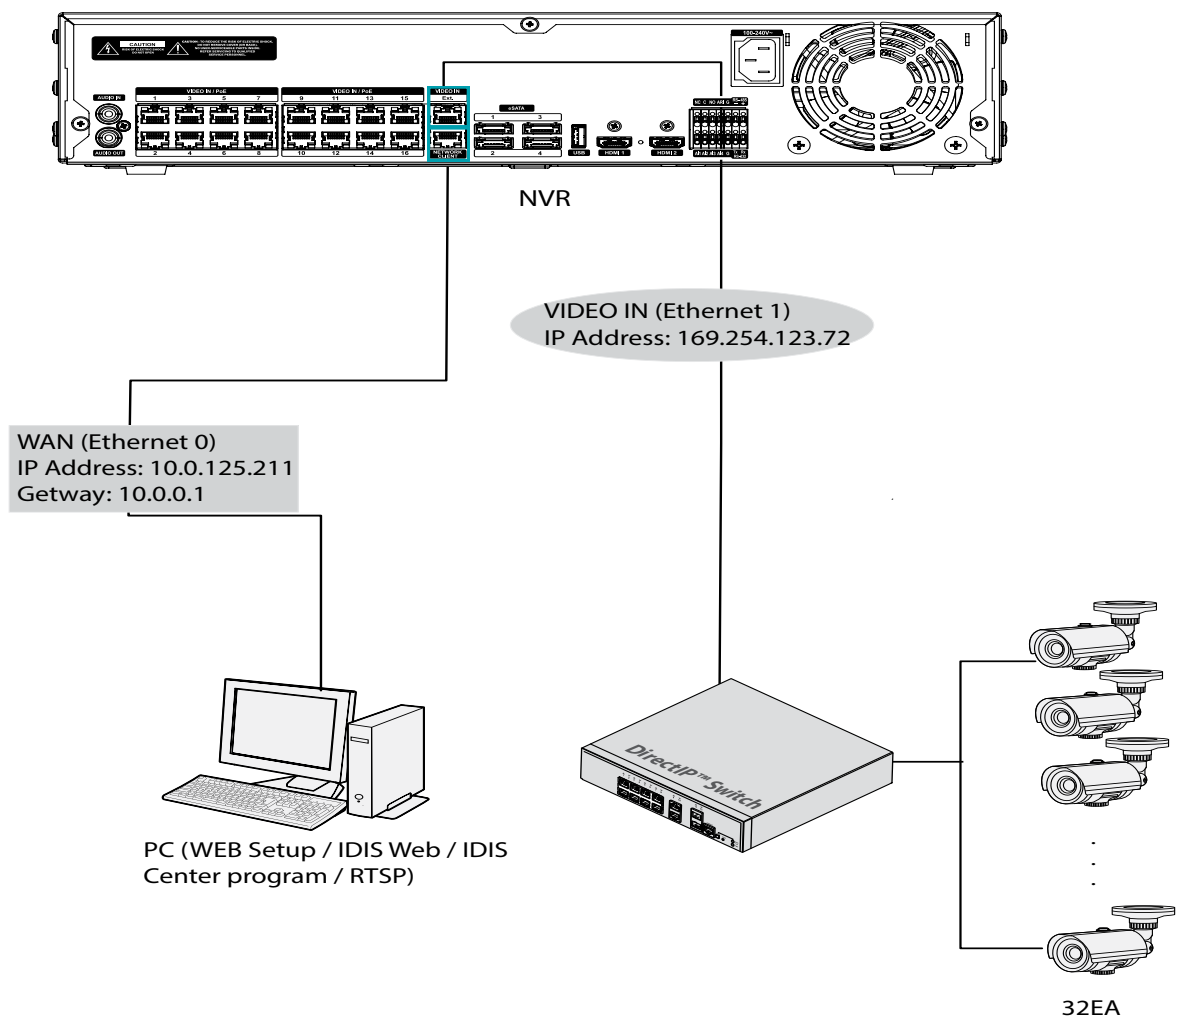

- To use NAT function, the camera gateway address must be set to the VIN network IP address of the NVR.
- For more information on the IP address of the camera and port number, refer to the WebSetup page of the camera manual. Also, check the IP address of the camera in the NVR or default port number on the camera manual.

Camera WebSetup Connection

Access the WebSetup of the camera which is internal VIN network from the PC.

Port Forward through 2 routers "NVR Port Number and HTTP Port Number of the Camera"

Title	CAM2_HTTP	
Type	IPv4	
Action	PORT_FORWARD	
Protocol	TCP	
Interface	eth0 : WAN (NETWORK CLIENT)	eth1 : VIN (Video-In)
IP	0.0.0.0 (NVR)	169.254.66.51
Port	16001	80

Eth 0: WAN Port : 16001


Eth 1: VIN IP : IP address of the camera

Eth 1: VIN Port : HTTP port number of the camera

Approach

You can access the WebSetup page through the following address.: **http://NVR IP address: HTTP Port Number of the Camera/setup/setup.html**

Enter the HTTP port number of the camera **16001** to have port forwarded.

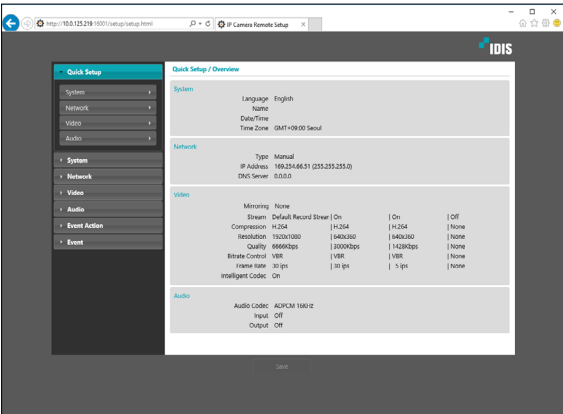

IDIS Web Connection through IDIS Camera

Access the IDIS Web of the camera which is internal VIN network from the PC.

Port Forward through 2 routers "NVR Port Number and HTTP Port Number of the Camera"

Title	CAM2_HTTP	
Type	IPv4	
Action	PORT_FORWARD	
Protocol	TCP	
Interface	eth0 : WAN (NETWORK CLIENT)	eth1 : VIN (Video-In)
IP	0.0.0.0 (NVR)	169.254.66.51
Port	16001	80

Eth 0: WAN Port : 16001

Eth 1: VIN IP : IP address of the camera

Eth 1: VIN Port : HTTP port number of the camera

Port Forward through 2 routers "NVR Port Number and Remote Port Number of the Camera"

Title	CAM2_REMOTE	
Type	IPv4	
Action	PORT_FORWARD	
Protocol	TCP	
Interface	eth0 : WAN (NETWORK CLIENT)	eth1 : VIN (Video-In)
IP	0.0.0.0 (NVR)	169.254.66.51
Port	11002	11002

Eth 0: WAN Port : 11002

Eth 1: VIN IP : The IP address of the camera


Eth 1: VIN Port : Remote port number of the camera

☒ Eth0 port number and the remote port number of the camera must be same.

Approach

You can monitor live videos through the following address.: **http://NVR IP Address: HTTP Port Number of the Camera**

Enter the HTTP port number of the camera **16001** to have port forwarded.

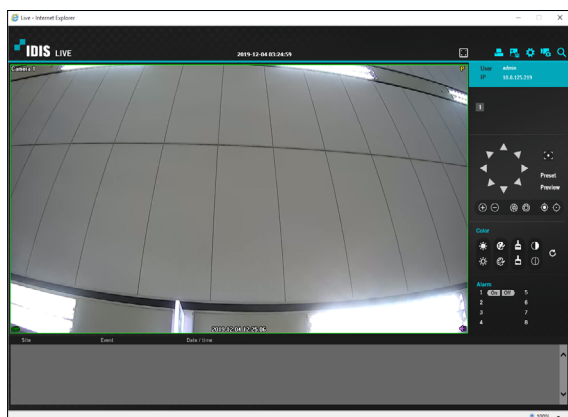

IDIS Center Program Connection through IDIS Camera

Connect to view the video of the camera which is internal VIN network from the clients such as the IDIS Center program.

Port Forward through 2 routers "NVR Port Number and Remote Port Number of the Camera"

Rule - "CAM2_REMOTE"

Title	CAM2_REMOTE		
Type	IPv4		
Action	PORT_FORWARD		
Protocol	TCP		
Interface	eth0 : WAN (NETWORK CLIENT)	->	eth1 : VIN (Video-In)
IP	0.0.0.0 (NVR)	->	188.254.66.51
Port	11002	->	11002

OK Cancel

Eth 0: WAN Port : 11002

Eth 1: VIN IP : IP address of the camera

Eth 1: VIN Port : Remote port number of the camera




Eth0 port number and the remote port number of the camera must be same.

Approach

You can monitoring live videos by using the IDIS Center program.

Enter the remote port number of the camera **11002** to have port forwarded.

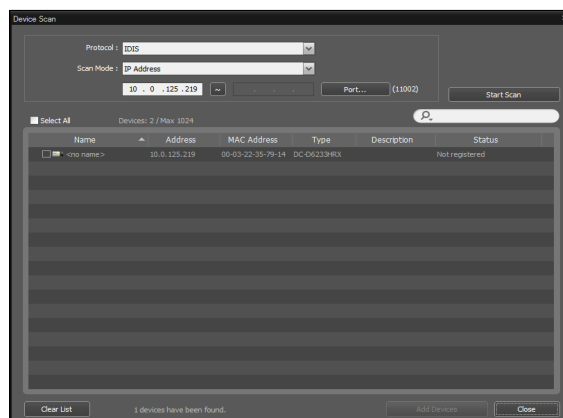

RTSP Connection through IDIS Camera

Connect the video of the camera which is internal VIN network by using the RTSP player from the PC.

Port Forward through 2 routers "NVR Port Number and RTSP Port Number of the Camera

Rule - "CAM2_RTSP"

Title	CAM2_RTSP		
Type	IPv4		
Action	PORT_FORWARD		
Protocol	TCP		
Interface	eth0 : WAN (NETWORK CLIENT)	->	eth1 : VIN (Video-In)
IP	0.0.0.0 (NVR)	->	169.254.66.51
Port	16003	->	554


OKCancel

- Eth 0: WAN Port : 16003
- Eth 1: VIN IP : IP address of the camera
- Eth 1: VIN Port : Remote port number of the camera

Approach

Access RTSP function using media players, such as VLC Player. You can monitor live video images through the following address.: **rtsp://NVR IP Address: RTSP Port Number of the Camera/trackID=channel number**

Enter the RTSP port number of the camera **16003** to have port forwarded.

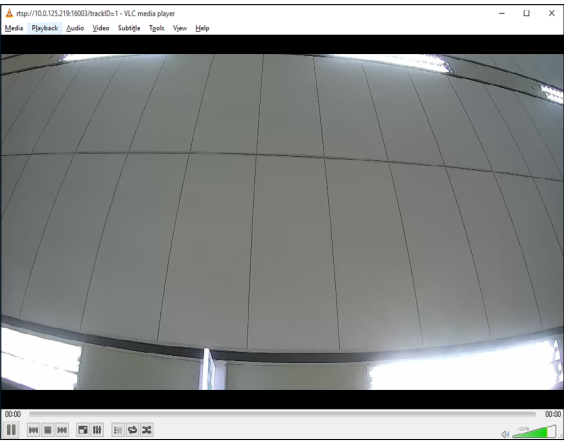

✓ For more information on RTSP function, refer to **RTSP on page 78** and camera manual.



IDIS Co., Ltd.

For more information, please visit at
www.idisglobal.com