



# Digital Video Recorder

Operation Manual



**TR-2208**

# Before reading this manual

This operation manual contains basic instructions on installing and using Digital Video Recorder, an IDIS product. Users who are using this product for the first time, as well as users with experience using comparable products, must read this operation manual carefully before use and heed to the warnings and precautions contained herein while using the product. Safety warnings and precautions contained in this operation manual are intended to promote proper use of the product and thereby prevent accidents and property damage and must be followed at all times. Once you have read this operation manual, keep it at an easily accessible location for future reference.

- ✓ The manufacturer will not be held responsible for any product damage resulting from the use of unauthorized parts and accessories or from the user's failure to comply with the instructions contained in this operation manual.
- It is recommended that first-time users of Digital Video Recorder and individuals who are not familiar with its use seek technical assistance from their retailer regarding product installation and use.
- If you need to disassemble the product for functionality expansion or repair purposes, you must contact your retailer and seek professional assistance.
- Both retailers and users should be aware that this product has been certified as being electromagnetically compatible for commercial use. If you have sold or purchased this product unintentionally, please replace with a consumer version.

## Safety Precautions

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## Important Safeguards

### 1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

### 2. Retain Instructions

The safety and operating instructions should be retained for future reference.

### 3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

### 4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

### 5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

### 6. Ventilation

Place this equipment only in an upright position. This equipment has an open-frame Switching Mode Power Supply (SMPS), which can cause a fire or electric shock if anything is inserted through the ventilation holes on the side of the equipment.

### 7. Accessories

Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

### 8. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company.

You may want to install a UPS (Uninterruptible Power Supply) system for safe operation in order to prevent damage caused by an unexpected power stoppage. Any questions concerning UPS, consult your UPS retailer.

### 9. Power Cords

Operator or installer must remove power and TNT connections before handling the equipment.

### 10. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

### 11. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

### 12. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

### 13. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

### 14. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or the plug has been damaged.
- B. If liquid is spilled, or objects have fallen into the equipment.
- C. If the equipment has been exposed to rain or water.
- D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- E. If the equipment has been dropped, or the cabinet damaged.
- F. When the equipment exhibits a distinct change in performance this indicates a need for service.

### 15. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

### 16. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

### 17. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

### 18. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

### 19. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

### 20. Elevated Operating Ambient Temperature

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).

### 21. Reduced Air Flow

Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

### 22. Mechanical Loading

Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.



### 23. Circuit Overloading

Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

### 24. Reliable Earthing (Grounding)

Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

## In-Text

Symbol	Type	Description
	<b>Caution</b>	Important information concerning a specific function.
	<b>Note</b>	Useful information concerning a specific function.

## User's Caution Statement

Caution: Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

## FCC Compliance Statement

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

**WARNING:** CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.

## WEEE (Waste Electrical & Electronic Equipment)

### **Correct Disposal of This Product**

**(Applicable in the European Union and other European countries with separate collection systems)**



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



## Copyright

© 2018 IDIS Co., Ltd.

IDIS Co., Ltd. reserves all rights concerning this operation manual.

Use or duplication of this operation manual in part or whole without the prior consent of IDIS Co., Ltd. is strictly prohibited.

Contents of this operation manual are subject to change without prior notice.

## Registered Trademarks

IDIS is a registered trademark of IDIS Co., Ltd.

Other company and product names are registered trademarks of their respective owners.

The information in this manual is believed to be accurate as of the date of publication even though explanations of some functions may not be included. We are not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

The software included in this product contains some Open Sources. You may obtain the complete corresponding source code depending on whether or not the source is publicly available under a license policy. Go to System Setup - About page for more information. This product includes software developed by the University of California, Berkeley and its contributors, and software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>). Also, this product includes cryptographic software written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)), and software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).

# Table of Contents

---

## 1

<b>Part 1 - Getting Started .....</b>	<b>9</b>
Login .....	9
Live Mode.....	10
Live Menu .....	10
Video Display Area .....	11
Edit Group .....	13
Zoom.....	13
PTZ Control .....	14
Event Monitoring .....	16
Covert Camera .....	16
Status.....	16
Context Menu Access .....	18
Video Recording.....	18
Panic Recording.....	18
Audio Recording .....	19
Video Recording Playback .....	19
All Channel Playback .....	19
Triplex Playback.....	19
Remote Control Buttons during Playback .....	19
Context Menu.....	19

## 2

<b>Part 2 - Configuration .....</b>	<b>20</b>
Menu Use .....	20
Text Input via Virtual Keyboard .....	20
Batch Assignment .....	21
Mouse .....	21
System Setup .....	21
General .....	21
Date/Time .....	27
User .....	28
System Event .....	30
About.....	31

General .....	32
Schedule.....	33
Pre-Event .....	35
Event Setup .....	35
Motion.....	35
Tripzone .....	37
Alarm-In .....	38
Video Loss .....	38
Video Blind .....	39
Text-In.....	39
Camera Setup .....	40
General .....	40
PTZ.....	41
Clip Privacy .....	41
Privacy Masking.....	42
Device Setup.....	42
Audio.....	42
Alarm-Out .....	43
Remote Control .....	43
Network Setup .....	44
General .....	44
LAN.....	45
FEN.....	46
RTSP.....	47
IDIS Web.....	48
VNC .....	48
NetFS.....	49
Notification Setup .....	51
Callback .....	51
Mail.....	51
FTP .....	52
Schedule.....	53
Display Setup .....	54
OSD .....	54
Main Monitor .....	55

# 3

## **Part 3 - Search.....56**

Searching Video.....	56
Search Menu.....	56
Context Menu.....	57
Event Log Search.....	58
Record Table Search.....	59
Motion Search.....	60
Text-In Search.....	61
Thumbnail Search.....	62
Bookmarks.....	62
Clip Copy.....	63
Print.....	64
Overlapped Recording Search.....	65

# 4

## **Part 4 - IDIS Web.....66**

Web Live Mode.....	68
Web Search Mode.....	70

# 5


## **Part 5 - Appendix.....73**


Index.....	73
------------	----

# Part 1 - Getting Started


## Login

Configuring the DVR's settings and accessing its searching and other functions require an authorized user login.


- 1 Bring up the Live menu and either press the **SETUP** button on the remote control or click on  (Login) using the mouse.

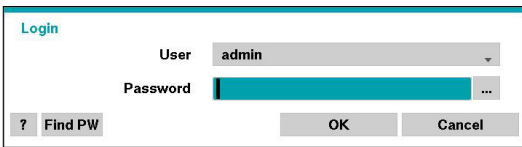


- 2 Select a user, enter the password, and then select **OK**.
- 3 Select **Find PW** from the login screen if you do not remember the password. Select a user and enter the E-mail address, and click **Get Verification Code**.

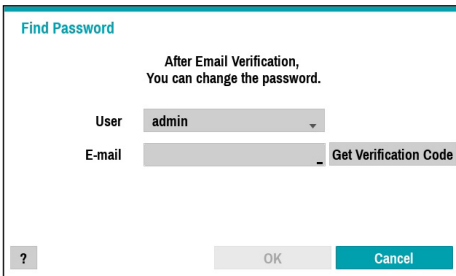


- 4 Enter the verification code you receive by e-mail and click **OK**.

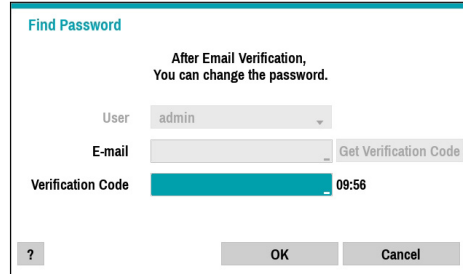

- ✓ There is no default password for the admin account. Select **admin** and then **OK** without entering a password to log in.
- Leaving the admin account unassigned with a password poses a security risk. Please assign a password at your earliest convenience. A warning message will continue to be displayed until a password is assigned.
- Click on the **...** button next to the password field using the mouse. This will bring up a virtual keyboard you can use to assign a password. For more information on using the virtual keyboard, refer to the **[Text Input via Virtual Keyboard on page 20](#)**.


- 5 To log out, bring up the Live menu and click on  (Log out) using the mouse.

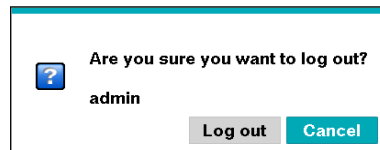

# Live Mode


## Live Menu

Press the **Setup** button while in Live mode to bring up the Live menu on the right edge of the screen. Press **Setup** once more to hide the menu. Use the Arrow buttons on the front panel of the DVR or the remote control to select the menu options.

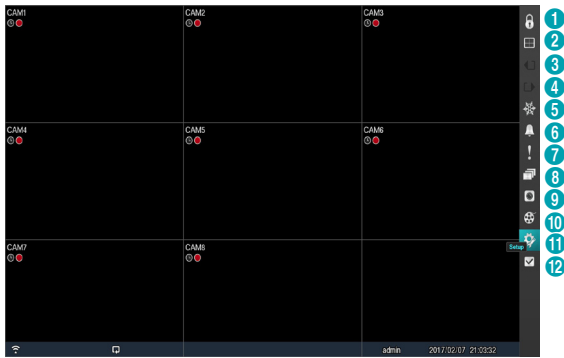

1	Login/Logout
2	Display
3	Previous Group
4	Next Group
5	Freeze
6	Alarm
7	Panic Recording
8	Sequence
9	Camera Menu
10	Search
11	Setup
12	Status

Placing the mouse pointer near the right edge of the screen also displays the Live menu.

- **Login/Logout**  
Log into and out from accounts. If in the logged in state, the account ID is shown. If in the logged out state, the login icon is shown.
- **Display**  
Used to change the screen layout to single screen, PIP, 2x2, 1x5, 1x7, 3x3.
  - **Camera OSD, Status OSD:** Camera OSD or Status OSD On and Off.
- **Previous/Next Group**  
Loads the previous/next screen group.
- **Freeze**  
Freezes the screen. Select **Freeze** again to unfreeze.
- **Alarm**  
Pressing this button while the alarm has been activated resets all DVR outputs, including the built-in buzzer.
- **Panic Recording**  
Activates/deactivates Panic Recording.
- **Sequence**  
Initiates **Sequence** in the same manner as pressing the **SEQUENCE** button while in Live mode. To exit, select **Sequence** once more or press the **SEQUENCE** button on the remote control. The  icon is displayed at the bottom of the screen while Sequence is in progress.

### Full Sequence

Displays all channels in sequence while in Live mode (single and PIP split screen settings).

**e.g.) Full Sequence in single screen mode**



## Cameo Sequence

In **Cameo Sequence** mode, only the bottom right screen in a split screen-setup changes sequence. In order to use the **Cameo Sequence** feature, **Cameo Sequence** (Display Setup - Main Monitor > Sequence) must first be enabled.



- While in the Sequence mode, the sequence icon displays in bottom-left corner if Sequence is selected in the Display setup screen.
- Pages are skipped under the following circumstances:
  - If all cameras included in the page are deactivated.
  - If there are no video signals.
  - If the page contains "covert" cameras.
  - If the user does not have permission to view feeds from the cameras.

### • Camera Menu

- **PTZ:** Allows you to control the selected camera as long as it has Pan, Tilt and Zoom capabilities. It is the same as pressing the PTZ button.
- **Zoom:** Zooms the current image of the selected camera on the screen. It is the same as pressing the ZOOM button. Selecting Zoom again in the Camera Menu again exits the Zoom mode. Right-click on the mouse and drag to change the orientation, and use the wheel with the left-click on the mouse to zoom in/out more precisely.
- **Audio:** Enable/disable audio.
- **Color Control:** Allows you to control brightness, contrast, hue and saturation for each camera for the selected camera if a user who has Color Control authority logs into the system.
- **Menu Control:** Adjusts the camera's self-settings.



- **Menu Control** is supported only for the cameras that use Pelco-C/H-C Protocol and support UTC (Up The Coax) function.
  - **Menu Control** is not supported if the port is set to RS232 or RS485 in the PTZ setting.
- **Edit Group:** Enter to the Edit Group mode in the split screen layout.
- **Information:** Displays currently connected camera information and recording status.

### • Search

- **All Channels:** Exits the live monitoring mode and enters the search mode.
- **Triplex:** Enters the Triplex mode. Selecting the camera number plays back video of the selected camera.

### • Setup

Used to access the Setup menu.


### • Status

Allows you to check the status of the DVR's system, event and storage.


## Video Display Area

Left-click on the video display area to toggle between split screen and single screen modes.



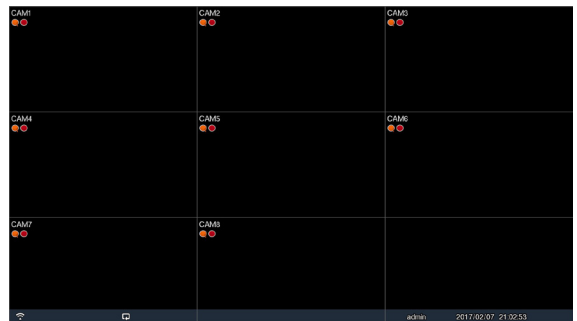



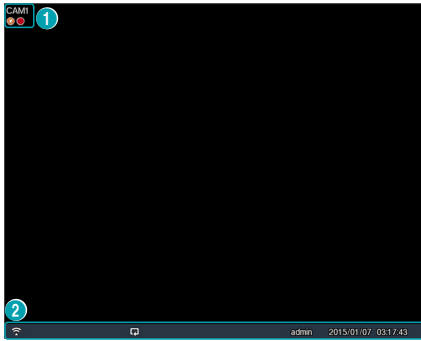


Drag the camera screens around to rearrange them.



## Camera Screen




- ① **Camera Title:** Indicates the camera's title.
- ② **Status Indication:** Displays system status icons.

	Indicates remote control receptivity.
	Indicates connection to the DVR from a remote program.
	Indicates two-way audio connection.
	Indicates connection to the DVR using the VNC service.
	Indicates a zoomed in state.
	Indicates Freeze is in use.
	Indicates Sequence is in use.
<b>1/2</b>	Indicates the current screen's group.
	Indicates an event monitoring.
	Indicates HDD use. The icon to the left is shown if using the overwrite setting. Otherwise, remaining HDD space is shown as a percentage value.

## Camera Menu

Right-click on the video display area to bring up the camera menu.

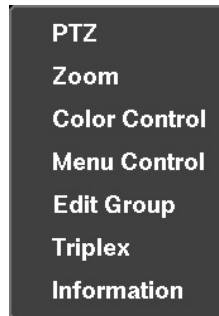



- **PTZ:** Allows you to control the selected camera as long as it has Pan, Tilt and Zoom capabilities. It is the same as pressing the PTZ button.
- **Zoom:** Zooms the current image of the selected camera on the screen. It is the same as pressing the ZOOM button. Selecting Zoom again in the Camera Menu again exits the Zoom mode.
- **Color Control:** Adjusts the camera's color settings.
- **Menu Control:** Adjusts the camera's self-settings.
  - **Menu Control** is supported only for the cameras that use Pelco-C/H-C Protocol and support UTC (Up The Coax) function.
  - **Menu Control** is not supported if the port is set to RS232 or RS485 in the PTZ setting.
- **Edit Group:** Enter to the Edit Group mode in the split screen layout.
- **Triplex:** The DVR supports the Triplex function: monitoring, recording and playing back at the same time.
- **Information:** Displays currently connected camera information and recording status.




## Edit Group


Edit Group lets you customize split screen pages in both Live and Search modes.

- 1 While displaying a split screen page, select the **Edit Group** option from the context menu. A yellow border is drawn around the page. Use the arrow buttons on the front panel or the mouse to select a different page.
- 2 Press a **Camera** button or select a camera after pressing the **Menu** button. Selected camera is then loaded on to the selected page. Repeat to assign other channels to the page.
- 3 Press the remote control's  button to exit Edit Group. Alternatively, press the **Menu** button and then select **Exit Group Edit** to exit.

-  Edit Group will terminate automatically after 15 seconds of inactivity.


## Zoom


Press the **ZOOM** button on the remote control and select a channel you wish to zoom in on. A zoom frame will appear on the selected channel. Use the arrow buttons to position the frame. Press the **Play/Pause** button to cycle through various zoom factors. When Zoom is activated,  icon is on the status bar located on the bottom of the system.

-  • In Full Screen mode, activating Zoom automatically selects the current channel.
- To restore the channel to normal size, press the Zoom button again.
- The available enlargement ratio is different from camera mode.



## PTZ Control

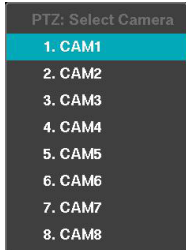

While in Live mode, right-click and select PTZ from the context menu or press the **PTZ** button on the DVR's front panel or remote control to display the PTZ camera selection window.




Select the camera you wish to control. The  icon will begin to flash on the selected camera's OSD window.

Use the **Arrow** buttons to pan and tilt the camera up, down, left, and right.

Use the  and  buttons to zoom in/out.


Use the  and  buttons to shift focus from nearby to far and vice versa. You can also change the direction by dragging on the mouse.

Also, it's possible to use the mouse wheel to zoom in/out.


-  • Logging in with an account that has **PTZ Control Authority** is necessary in order to control PTZ cameras.
- A message will prompt if there is no PTZ camera displayed on the Live screen.
- Zoom in/out and shift focus using the **PTZ Control (ZOOM, FOCUS)** buttons on the remote control.
- To exit PTZ mode, press the **PTZ** button again.

## Setting Up a PTZ Preset

While in PTZ mode, select the **PRESET SET** button on the remote control to display the **Set Preset** window and assign the current position as a preset.

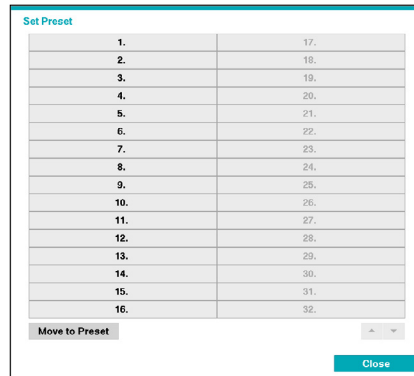


While in PTZ mode, select the **PRESET SELECT** button on the remote control to display the **Move to Preset** window. Select a preset to move the current PTZ camera to the selected preset's position.

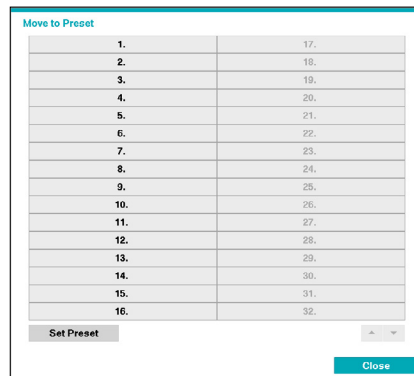


### Advanced Settings

In PTZ mode, select a camera. Clicking **Menu** button and selecting **Advanced PTZ** loads the Advanced PTZ screen as shown below. You can load the Advanced PTZ screen also by pressing the **MENU** button and then **Play/Pause** button on the front panel. This menu lists **Speed, Auto Pan,** and other advanced PTZ camera control options available for the camera. Options that are not available for the selected PTZ camera remain inactive.

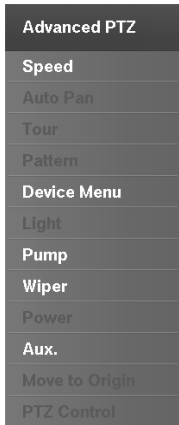

- You can use the mouse to control PTZ cameras. Left-click on the mouse and drag to move the camera in the desired direction and use the mouse wheel to zoom in/out.


While in PTZ mode, place the mouse pointer close to the bottom edge of the screen to display the PTZ Tools window.

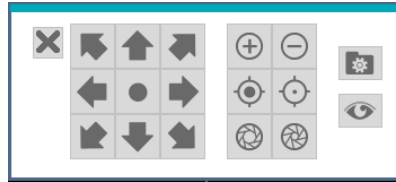

	PTZ Camera Pan and Tilt
	Zoom In/Out
	Focus Near / Far
	IRIS Open / Close
	Set / Move to Preset
	Device Menu supported by the camera

- The exact PTZ protocol supported by the camera must be specified in order to use the DVR's PTZ controls.
- Drag and drop to reposition the PTZ Tools window.
- Select the icon to hide the PTZ Tools window.

## Event Monitoring

When an event occurs, the DVR automatically displays the channel linked to the event and shows the  icon on the system status area on the bottom of the screen. To use the Event Monitoring feature, navigate to **Menu > Display > Main Monitor** and enable **Event Monitoring**. Event Monitoring remains in effect throughout the entire **Linked Recording Time**. After that, the DVR will return to the previous screen if a new event does not take place. Pressing the **Layout** or a **Camera** button before the end of the **Linked Recording Time** reverts the system to Live mode.

## Covert Camera

Use this feature to assign **Covert Camera View** permissions.

Navigate to **Menu > Camera** and designate cameras as **Covert 1** or **Covert 2**.

- **Covert 1:** Hides images from the camera in Live mode but does indicate the camera's title and status via icons.
- **Covert 2:** The camera is indicated as being inactive. Images from the camera are not shown. Camera title and status icons are not shown.


Users that have a cover **Covert Camera View** are able to view both images from and status icons for all **Covert 1** and **Covert 2** cameras.








## Status

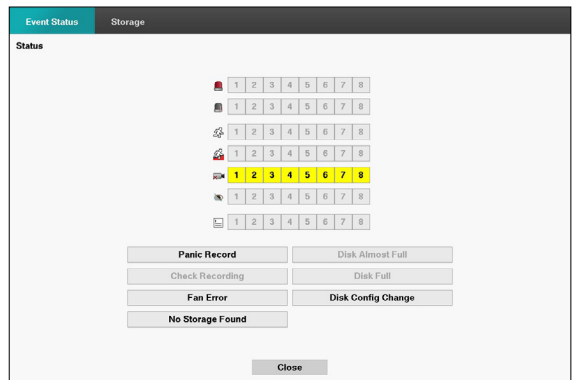Refer to the **Menu Use on page 20** for basic information on using the Setup menus.

### Event Status

This screen displays an overview of all events. When an event occurs, the corresponding channel flashes for 5 seconds.



	Alarm-In
	Check Alarm-In
	Motion
	Tripzone
	Video Loss
	Video Blind
	Text-In

- **Panic Record:** Displays event status based on current Panic Record status.
- **Check Recording:** Displays event status based on **System Monitoring** settings. For more information, refer to the **System Event on page 30**.

- **Fan Error:** Event is indicated when the cooling fan cannot reach a certain RPM or fails for longer than 50 seconds.
- **No Storage Found:** It will be highlighted when no recordable storage device has been found.
- **Disk Almost Full/Disk Full:** If the storage device is not in **Recycle** status, event status is displayed when the amount of disk space specified under **System Monitoring** is reached and when the disk becomes 100% full. For more information, refer to the **System Event on page 30**.
- **Disk Config Change:** It will be highlighted when the DVR reboots after the hard disk drive has been replaced.

## Storage

Indicates each disk's status.

Event Status		Storage	
Status			
Type	Disk Bad	Temperature	S.M.A.R.T.
Internal 1	Good (0%)	Good (46°C)	Good
Internal 2	Good (0%)	Good (43°C)	Good

Close

Configure Disk Bad and Disk Temperature settings under **Setup > System > System Event**.

<b>Disk Bad</b>	Not Formatted	A disk that has never been used before.
	Good	<ul style="list-style-type: none"> <li>• Disk performing normally.</li> <li>• If the HDD is partially damaged, indicates the bad sector percentage.</li> </ul>
	Error	<ul style="list-style-type: none"> <li>• If the HDD's bad sector ratio is higher than as designated by the user.</li> <li>• Generates a system event.</li> </ul>
<b>Temperature</b>	N/A	Unable to detect the disk's temperature.
	Good	Operating within normal temperature range.
	Bad	<ul style="list-style-type: none"> <li>• Disk temperature higher than as designated by the user.</li> <li>• Generates a system event.</li> </ul>
<b>S.M.A.R.T.</b>	N/A	A disk that does not support S.M.A.R.T.
	Good	A disk with normal S.M.A.R.T. status.
	Bad	A disk with abnormal S.M.A.R.T. status. Possibility of damage within 24 hours.

## Context Menu Access

You can display the ContextMenu window by pressing the **MENU** button and then **PLAY/PAUSE** button on the front panel. Alternatively, right-click on the mouse to access the Context menu.


- **PTZ:** Access PTZ controls.
- **Zoom:** Zoom in.
- **Color Control:** Select a channel to display its Color Control window. Adjust the selected camera's brightness, contrast, saturation, and hue settings.
- **Menu Control:** Adjusts the camera's self-settings.
- **Edit Group:** Enter to the Edit Group mode in the split screen layout.
- **PIP:** Adjust the PIP screen's size and location in the PIP screen layout.
- **Triplex:** The DVR supports the Triplex function: monitoring, recording and playing back at the same time.
- **Information:** Displays currently connected camera information and recording status.


## Video Recording

Video recording will only take place if all the connections are made correctly as per information contained in Part 2 of this operation manual.

For more information on video recording settings, refer to the **Record Setup on page 32.**

## Panic Recording

Select **Live** or **Search** menu's Panic Recording  icon or press the **Panic Recording** button on the front panel or the remote control to commence panic recording on all registered cameras.

To stop Panic Recording, select the Panic Recording  icon or press the **Panic Recording** button again. If the **Panic Recording Duration** option under **Record Setup > General** has been configured, Panic Recording will automatically terminate after the specified duration of time has elapsed. For more information, refer to the **Record Setup on page 32.**



- Panic Recording takes place irrespective of any recording schedule set up by the user.
- Panic Recording ips, Quality, Resolution from **Record Setup – General** applies to all Panic Recording videos.



Panic Recording will not take place if recording mode is not set to **Recycle** and the HDD has reached 100% of its capacity.

## Audio Recording

If the Record Audio option under **Record Setup > General** has been enabled the camera will record audio along with video. For more information, refer to the **Record Setup on page 32**.



Check your local laws and regulations on making audio recordings.


## Video Recording Playback

You can play back video recordings by using mouse or remote control.




- Login with an account that has search permission is needed to playback video recordings.
- The initial video playback point in Search mode is the recording's last playback point or the end of the recording data.
- Audio playback of the selected recording is available in full screen mode only.
- Covert protection on cameras also applies to video recording playback.

## All Channel Playback

- 1 Press the **Menu** button while in Live mode.
- 2 Select the Search Mode  icon and then select **All Channels**.
- 3 The selected search mode will be initiated.

For more information on data search, refer to the **Part 3 - Search on page 56**.

## Triplex Playback

- 1 Press the **Menu** button while in Live mode.
- 2 Select the Search Mode  icon and then select **Triplex**.
- 3 The DVR supports the Triplex function: monitoring, recording and playing back at the same time.

For more information on data search, refer to the **Part 3 - Search on page 56**.

## Remote Control Buttons during Playback

- 1 **Camera Button:** Displays the selected recording in full screen.
- 2 **Zoom Button:** Allows you to zoom in on a specific area of the recording.
- 3 **Layout Button:** Cycle between PIP, 2x2, 1x5, 1x7, 3x3 modes.

## Context Menu

While in Search mode, right-click on the mouse to access the Context Menu.

- **Zoom:** Zoom in.
- **Edit Group:** Enter to the Edit Group mode in the split screen layout.


# Part 2 - Configuration

## Menu Use

Information contained in this section (Menu Use) applies to all other instructions found throughout Part 3 - Configuration.

Login with an ID that has permission to access the setup menu is needed to access and make changes to the Setup menu.

- 1 While in Live mode, press the remote control's **MENU** button or select Live menu > Setup using the mouse.

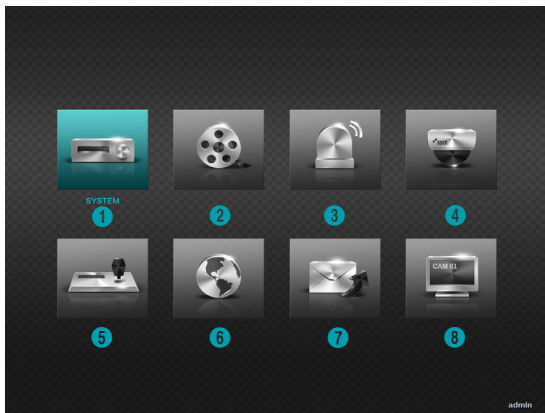


1	System Setup
2	Record Setup
3	Event Setup
4	Camera Setup
5	Device Setup
6	Network Setup
7	Notification Setup
8	Display Setup

- 2 Use the remote control's arrow buttons to select an option and then press the remote control's button or left-click on the option using the mouse.
- 3 Change the setting and then select **Save** to save the change.

To apply default settings, select the Default button located on the left bottom corner of the setup window.

## Text Input via Virtual Keyboard

Use the remote control's arrow buttons to select a virtual keyboard key and then press the remote control's button or click on the key using the mouse.

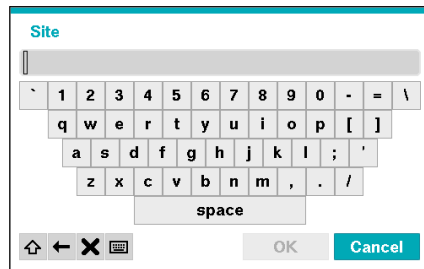

	Toggle case.
	Deletes the character to the left of the cursor.
	Deletes the character to the right of the cursor.
	Converts keyboard.



## Batch Assignment

Certain table-format menus such as the shown in the **Camera Setup on page 40** allow you to change the title value. In this case, changing the title value simultaneously changes all other entry values on the same row.

## Mouse

Using a mouse makes it easier to configure the settings. A mouse lets you make selections faster and use its wheel to scroll through long menus. You can also use the mouse wheel to increase/decrease numerical values.

## System Setup

Refer to the **Menu Use on page 20** for basic information on using the Setup menus.

## General

This Setup menu contains general system options.

The screenshot shows the 'General' tab of the 'SYSTEM' setup menu. It includes the following elements:

- Site:** A text input field.
- System ID:** A numeric input field with the value '0' and a small '+' and '-' icon.
- Language:** A dropdown menu currently set to 'English'.
- Version:** A text input field with '1.8.0' and an 'Upgrade...' button.
- Setup:** 'Import...' and 'Export...' buttons, and a 'Show System Log...' button.
- Recorded Data:** 'From' and 'To' date/time fields (2018/11/23 14:03:13 and 2018/11/23 14:27:42) and a 'Clear All Data...' button.
- Wizard:** A button.
- Troubleshooting Reporting:** A button.
- System Shutdown:** A button.
- Save/Cancel:** Buttons at the bottom.

- **Site:** Used to enter a description about the system's installation site (no description by default). You can edit the information using the virtual keyboard.
- **System ID:** Used to identify the DVR apart from other DVRs. System ID is also used to control the DVR with the remote control and identify the unit when it is connected with other DVRs through the RS485 port.




The default System ID is 0 and can be changed to a value between 0 and 99. The System ID can also be entered using the virtual keyboard.

- **Language:** Choose a language.
- **Version:** Indicates the software version.

- **Upgrade:** Upgrade the system. If NetFS feature is in use, click Upgrade. You can select the USB Port or NetFS. If NetFS feature is not in use, you can select the USB port only. Selecting the USB port displays the USB search window. You will then be able to select an upgrade package and upgrade the system. Selecting the NetFS displays the registered FTP site lists. Once the upgrade is complete, the DVR will reboot automatically.



- The “.rui” indicates that the file is for software upgrades.
- If an upgrade attempt fails, an upgrade failure message will be displayed. Refer to **Error Code Types in the installation manual** for more details.

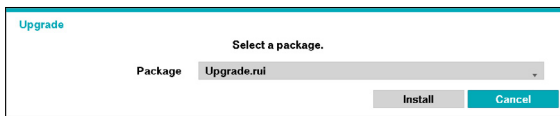

- **Setup:** Exports current DVR settings or imports existing settings. If NetFS feature is in use, you can export or import DVR settings in the registered FTP site.
  - **Import:** Decide whether to import network settings as well. If you do not wish to change the current network settings, do not select **Include Network Setup**.




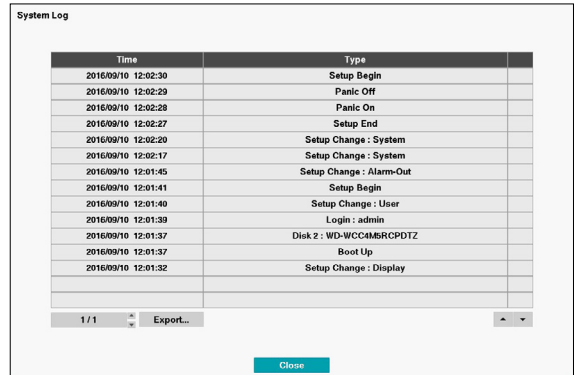
- Selecting **Setup Import** does not change the settings below.
  - Time-related settings (Date/Time, Time Zone, and Use Daylight Saving Time)

- **Export:** Exports the current system settings to a storage device connected to the system’s USB port or the registered FTP site in NetFS. You can designate a **File Name** for the export file.



For USB flash memory devices, the DVR supports the FAT16 and FAT32 files format.

- **Show System Log:** Displays a searchable list of 5,000 most recent system log entries. For more information on types of system log entries, refer to the **System Log Types in the installation manual**. The  icon appears next to log entries originating from a remote source. To export the system log, select the **Export** at the bottom of the screen and then designate a file name.



- To export the system log information, connect the USB device to the DVR. If you enabled the NetFS function (Network menu > NetFS tab), you can upload the log information on the registered NetFS site. Click **Export**. Select **USB Storage** or **NetFS**. If you select **NetFS**, select a NetFS site from the registered NetFS site list. A virtual keyboard allows you to enter the file name. Selecting **Export** will save the log information in .txt file format on the USB device or the NetFS site.



- In order to display the system\_log.txt file, you must use the correct character encoding settings and use a fixed-width font.


- **Clear All Data:** Erases all recording data. Selecting **Clear All Data** displays a confirmation window. Select **Clear** to proceed.



- Before you perform **Clear All Data**, make sure you are not accidentally deleting important data. Erased data cannot be recovered.
- **Clear All Data** does not affect the system log. Instead, the **Clear All Data** event will be added to the log.

- **Wizard:** Lets you configure basic settings required for operating the system.


## 1 Select the desired Setup Wizard option and click **Next**.

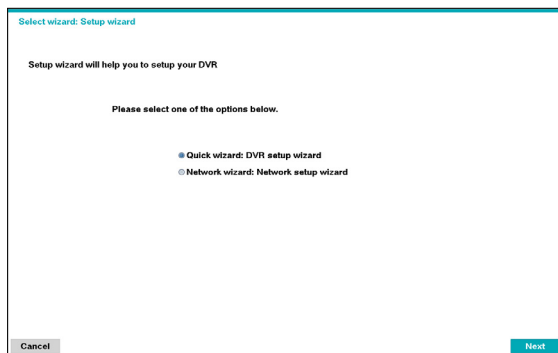


- Select **Cancel** from any of the Wizard screen to cancel the setup process and return to the main setup menu.

## Quick Wizard

### 1 Select Quick Wizard.

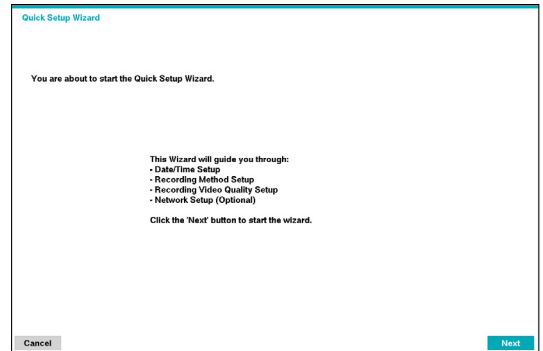


### 2 Specify the current date and time and then click **Next**.

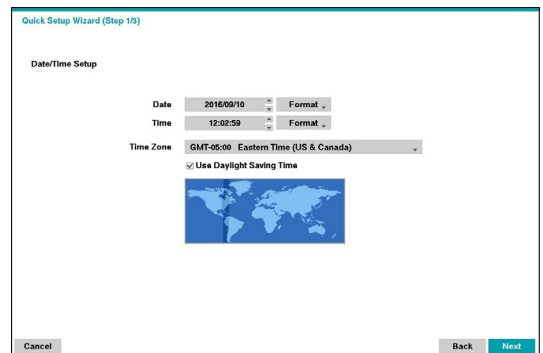

- The new date and time settings will only be applied after clicking **Next**.
- For more information on date and time settings, refer to the **Date/Time** section under **System Setup on page 21**.


**3** Choose the desired **Recording Method** and click **Next**.

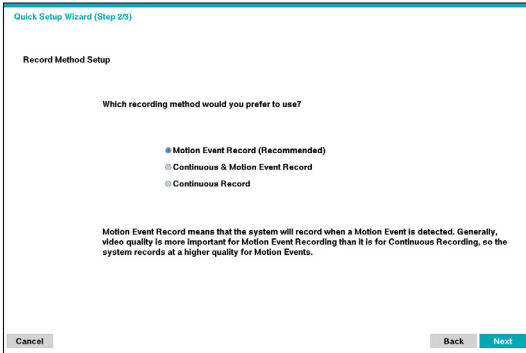


– Recording ips, quality, resolutions used under each recording method and record video quality setting are as follows:

	High Video Quality Priority Profile	Standard Recording Profile	Longer Recording Time Priority Profile
<b>Motion Event Record</b>	Very high, Very high, 30 ips	High, Very High, 15 ips	Standard, High, 5 ips
<b>Continuous &amp; Motion Event Record</b>	Very high, Very high, 30 ips (Time/Event)	Time: High, Very High, 15 ips Event: Very High, Very High, 30 ips	Time: Standard, High, 5 ips Event: High, Very High, 15 ips
<b>Continuous</b>	Very high, Very high, 30 ips	High, Very High, 15 ips	Standard, High, 5 ips

**4** Choose the desired **Recording Quality** and click **Next**.

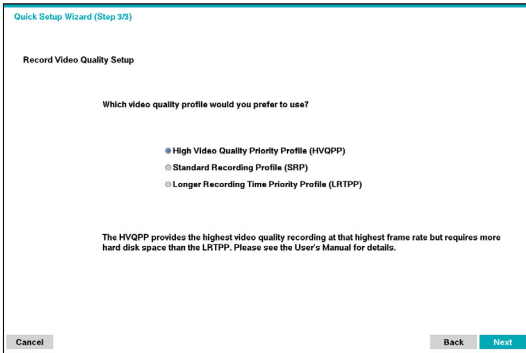

**5** Click **Finish** to exit Quick Wizard.

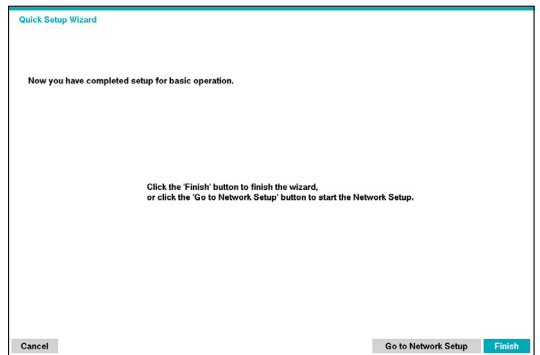


Higher recording quality uses up more disk space.


## Network Wizard

- After exiting from Quick Wizard, you can click **Go to Network Setup** and set up the network with Network Wizard.

### 1 Select Network Wizard.

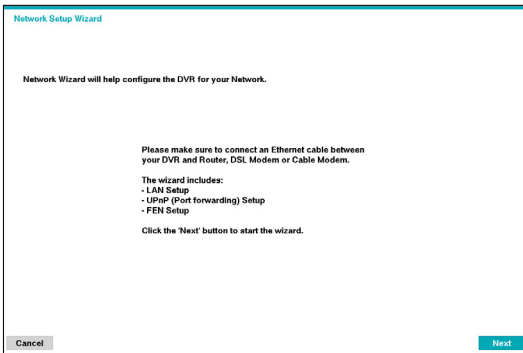


### 2 Specify whether the system is connected to the Internet and click **Next**.

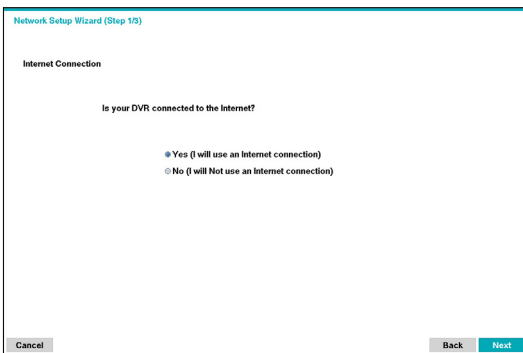


- If you have chosen **No**, wait for the test to finish and then click **Finish** to exit Network Wizard.

### 3 Select Network Configuration and then click **Next**. Select either Auto Configuration or Manual Configuration and then click **Test** to test the system's current network configuration.

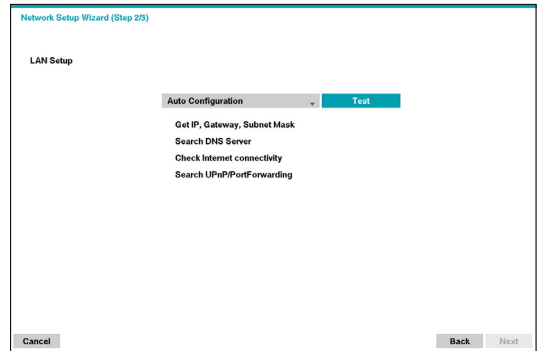


- This test must be performed before proceeding to the next step.
- If the DVR is on a network connected to a network that has a DHCP server, selecting **Auto Configuration** retrieves LAN settings such as IP and DNS addresses automatically. Selecting **Manual Configuration**, on the other hand, lets you specify the settings manually.
- UPnP support device not found.** If this error message is displayed, check to see if the IP router (or NAT) supports UPnP and if UPnP has been enabled. For more information about the router's UPnP function, refer to the router's operation manual.

4 Enter in the **FEN Name** field the DVR name to be registered on the FEN server and then click **Check** to check its availability.

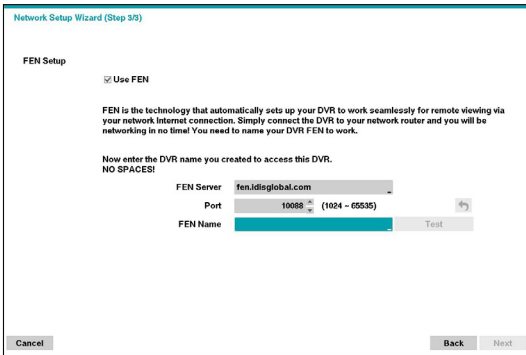


- The FEN name you register on the FEN server will be a unique name used to identify the DVR. Once registered, the name can be used to access the DVR directly from clients such as the IDIS Center. Check the name's availability to complete the registration process. The Finish button will then become activated.
- You will be prompted with an error message if you do not enter a name for the DVR or enter a name already registered on the FEN server.
- Depending on the network environment, FEN services may not be active and therefore prevent the DVR from connecting to the network. In this case, you will need to manually configure the ports. For more information on port configuration, refer to **Network Setup on page 44**.

5 Click **Finish** to exit Network Wizard.

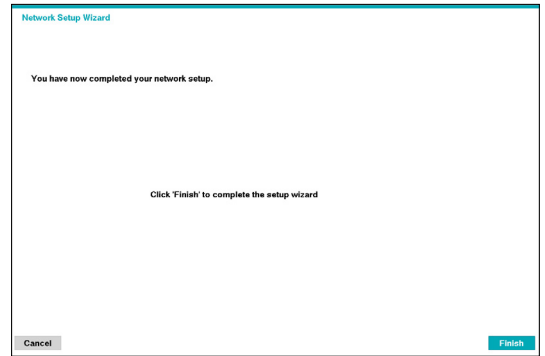


•**Troubleshooting Reporting:** Generates a report to troubleshoot any issues, and exports the report.

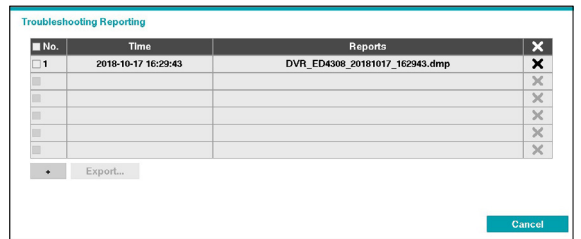

•**System Shutdown:** Shuts down the system. When prompted, select **System Shutdown**.


## Date/Time

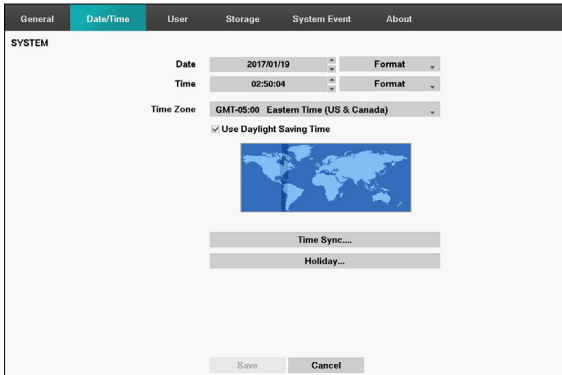

- **Date:** Used to change the system's date setting.
- **Time:** Used to change the system's time setting.
- **Date Format/Time Format:** Used to change the system's date and time formats.
- **Time Zone:** Used to designate the system's time zone.

Refer to the map displayed on the screen and change the time zone using the mouse or the arrow buttons.

- **Use Daylight Saving Time:** Enables DST correction.
- **Time Sync.:** Select a time server for the system to synchronize with.

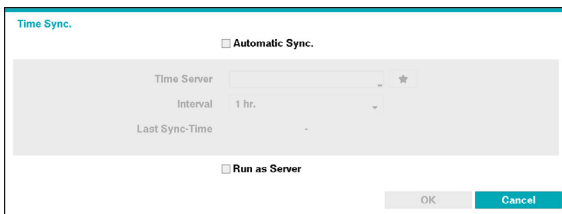

- 1 Select **Automatic Sync.**
- 2 Enter the **Time Server's** IP address or domain name or select  and then choose a server from the list of registered time servers.

- 3 Specify the server synchronization **Interval.**

- 4 Select **OK** to apply and exit.




- If you have configured the DNS Server setting under **Network - IP Address**, you can enter the time server's domain name instead of its IP address.
- Selecting **Run as Server** sets the current DVR as a time server for other DVRs within the system.

- **Holiday:** Designate holidays. On specified holidays, recording takes place according to the holiday recording schedule specified under Record Schedule.

- 1 Select the + button at the bottom of the window.

- 2 Select a date.


- 3 Select **OK** to apply and exit.

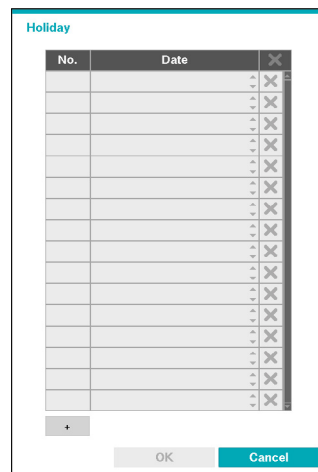


- Select the  icon to delete the existing holiday date.

## User


Use this option to register users and assign permissions.

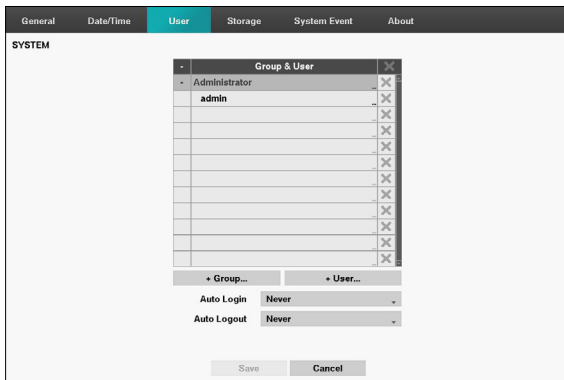

- 1 Select **+ Group** and enter a group name. A group name can be up to 15 characters in length.
- 2 Specify the group's permission settings. For more information on permission settings, refer to the **Group Permissions on page 29**.

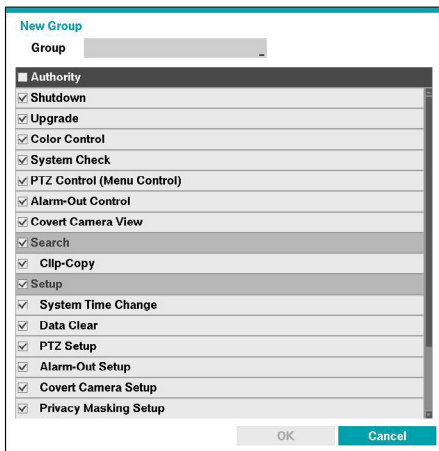

- 3 Select **+ User** and then enter a user name.

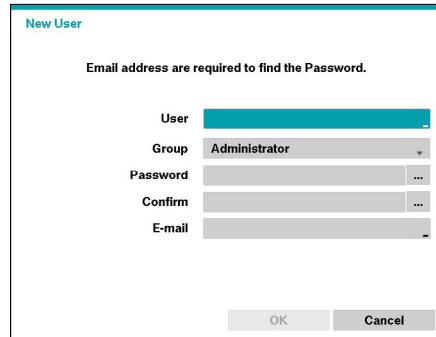

- 4 Select a group for the user and then enter a password. The password can be 8~16 characters in length and may include numbers.
- 5 Select **OK**.
- 6 Configure **Auto Login** and **Auto Logout** settings.
- 7 Select **Save** to exit.

- Group names, user names, and passwords can be entered using the virtual keyboard. For more information on using the virtual keyboard, refer to the **Text Input via Virtual Keyboard on page 20**
- To delete a registered user or group, select the  icon on the right of the corresponding user/group. **Group Administrator** and **User admin** cannot be deleted.
- Select the  icon next to **Group & User** on the top of the screen to delete all groups and users except **Group Administrator** and **User admin** simultaneously.
- A password entry is required to edit existing groups and users.
- **Group Administrator's** permissions cannot be changed.
- With the **User admin** account, only the password can be changed.
- When the system starts up, it will automatically log into the account designated under **Auto Login**.
- The system will automatically log out of the account if the duration of inactivity specified under **Auto Logout**.




## Group Permissions

<b>System Shutdown</b>		May shutdown the system from the system menu.
<b>Upgrade</b>		May upgrade the system from the system menu (System Setup).
<b>Color Control</b>		May adjust each camera's brightness, contrast, saturation, and hue settings.
<b>System Check</b>		May view System Check results.
<b>PTZ Control (Menu Control)</b>		May control PTZ cameras.
<b>Alarm-Out Control</b>		May reset in the event of an alarm-out. Alarm-outs can be reset by pressing the <b>Alarm</b> button on the device or selecting the <b>Alarm-Out Control</b> button on the remote program.
<b>Covert Camera View</b>		May access covert cameras in Live and Search modes.
<b>Search</b>	<b>Clip Copy</b>	The user who has permission for Clip Copy can perform Clip Copy. If the user does not have permission, Clip Copy is not allowed but only search is allowed.

<b>Setup</b>	<b>System Time Change</b>	May change the system's date and time settings.
	<b>Data Clear</b>	May clear data stored in the system.
	<b>PTZ Setup</b>	May configure PTZ settings.
	<b>Alarm-Out Setup</b>	May configure alarm-out settings.
	<b>Covert Camera Setup</b>	May configure covert camera settings.
	<b>Privacy Masking Setup</b>	May configure privacy masking settings.
	<b>Record Setup</b>	May configure recording settings.
	<b>Setup Import</b>	May import previously saved DVR settings.
	<b>Setup Export</b>	May export current DVR settings.
	<b>VNC Setup</b>	May access the DVR and control it remotely via network.

## Storage

Use this option to configure storage settings.

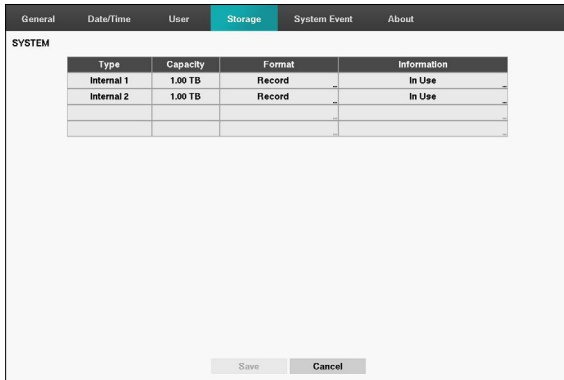


- **Type:** Indicates the type of the installed disk.
- **Capacity:** Indicates the disk’s capacity.
- **Format:** If the disk has been formatted, indicates either **Record** or **Not Using**. If you have connected an unformatted storage device, the Use As value will be indicated as **Not Formatted**.
- **Information:** Indicates if the disk is being used for recording purposes. Disks that were used in different systems will show up as **Other**. Select **Information** to check the saved data’s time information or select **Delete** to erase the data.

- Select **Format** to prepare the disk as a storage for data recording.
  - Disks formatted with Use As set to **Not Using** will not be used for data recording.
  - This DVR supports SATA2 HDDs.


## System Event

Use this option to configure Monitoring settings.

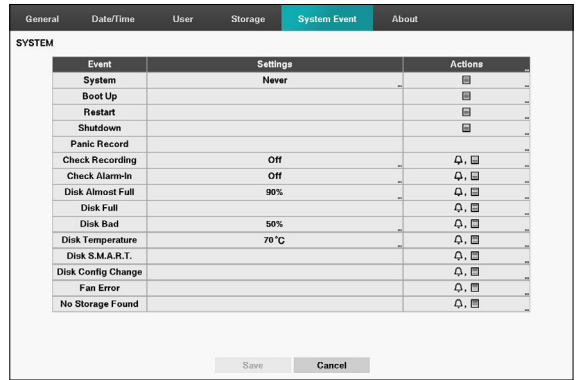

- **Settings:** Configure when and what the system should monitor for.
- **Actions:** Configure alarm-out (DVR alarm-out channel, DVR beep) and notification (email, LAN1 through 5, push, alert window) settings.


Monitoring Options
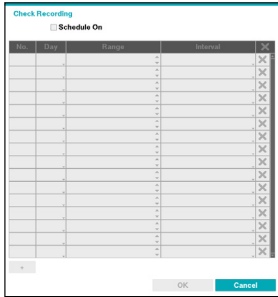
<b>System</b>	Define monitoring times. If self-diagnosis is not performed on a regular basis, the system will assume an error.
<b>Bootup, Restart, Shutdown</b>	Define bootup, restart and shutdown actions.
<b>Panic Record</b>	Define panic recording actions.
<b>Check Recording</b>	<p>The system will assume an error if the system has been scheduled to record normally but recording does not take place during scheduled intervals.</p> <p><input checked="" type="checkbox"/> Select <b>Schedule On</b> and then configure the days of the week, times, and monitoring interval. Select the <b>+</b> button on the bottom left of the screen to add a schedule. Select <b>X</b> icon to delete the schedule.</p> 
<b>Check Alarm-In</b>	The system will assume an error if the alarm-in status does not change during the specified monitoring interval while alarm-in is active.
<b>Disk Almost Full</b>	Generates an event if the disk reaches the specified capacity (80% to 99%).
<b>Disk Full</b>	Generates an event when all disks reach their maximum capacity.

<b>Disk Bad</b>	Generates an event when the specified percentage of the disk becomes damaged. Set to between 10% and 90% in 10% intervals.
<b>Disk Temperature</b>	Specify the threshold temperature. Once any disk reaches this threshold, the system will issue an alert.
<b>Disk S.M.A.R.T.</b>	Monitors disks that support S.M.A.R.T. and notifies the user if a disk error is detected.
<b>Disk Config Change</b>	It will be highlighted when the DVR reboots after the hard disk drive has been replaced.
<b>Fan Error</b>	Notifies the user when the fan inside the system malfunctions.
<b>No Storage Found</b>	It will be highlighted when no hard disk drive has been connected.

- For system events, only an e-mail notification of actions can be selected.
- In order to use the Notify(Callback) feature, the DVR must be registered to the remote program on the receiving PC's end.

About

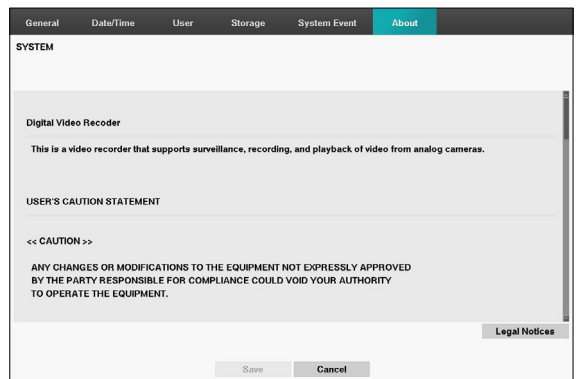


## Record Setup

Refer to the **Menu Use on page 20** for basic information on using the Setup menus.

### General

Configure general recording settings.

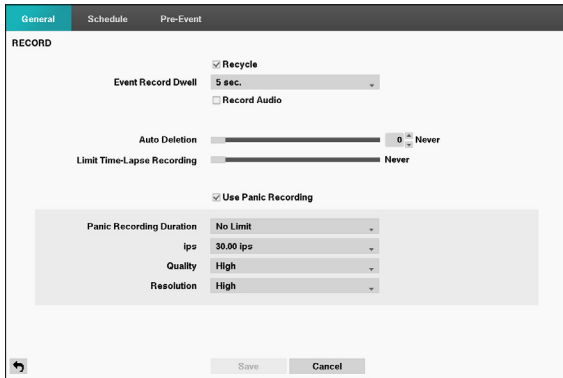

- **Recycle:** When the recording disks become full, the system overwrites existing data with new data, starting with the oldest first. If **Recycle** is disabled, recording will simply stop when the recording disks reach their maximum capacity.
- **Event Record Dwell:** If linked recording is designated as an event-triggered action, recording takes place for the duration specified under this setting.
- **Record Audio:** The camera will record audio along with video.
- **Auto Deletion:** Configure this option to delete recording data automatically after the specified number of days has elapsed. Select between 1 day and 999 days.



To disable Auto Deletion, select **Never**. If enabled, recording data will be stored on the DVR for the specified number of days and then deleted automatically. Expired recording data are deleted automatically at midnight and will be deleted even if the system reboots or the **Auto Deletion** setting has been changed.


- **Limit Time-Lapse Recording:** You can store event recording data for longer. If you do not wish to use **Limit Time-Lapse Recording**, select **Never**. This function is activated when data has been stored for longer than as configured because the recording disk has sufficient capacity and saves new data by overwriting **Time Lapse Recording** data that are older than as specified under Recycle mode.




- If the recording stored on the disk is shorter than the duration specified under **Limit Time-Lapse Recording**, the older of **Event Recording** or **Time Recording** data is deleted first.
- The system's recording time may change depending on recording quality, resolution, motion, and other configurations made by the user. The duration specified under **Limit Time-Lapse Recording** may not be guaranteed in certain situations.

- **Use Panic Recording:** Enable/disable Panic Recording.
- **Panic Recording Duration:** Disable Panic Recording automatically. Select between 5 mins and 1 hr. If you do not wish to disable the feature automatically, select **No Limit**.
- **ips:** Allow you to set the images per second for Panic recording.
- **Quality:** Allow you to set the recorded image quality for Panic recording. You can select from: Very High, High, Standard and Basic.
- **Resolution:** Allow you to set the recorded image resolution for Panic recording. You can select from: Very High, High, and Standard.

# Schedule

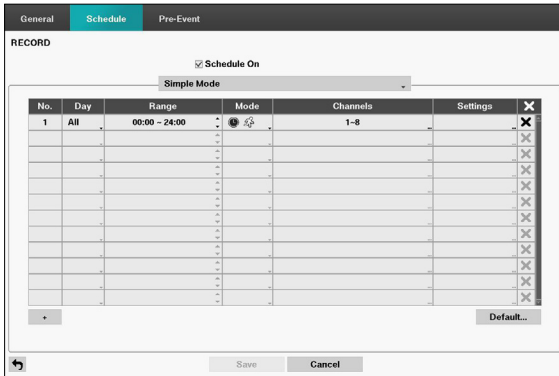

<Simple Mode>

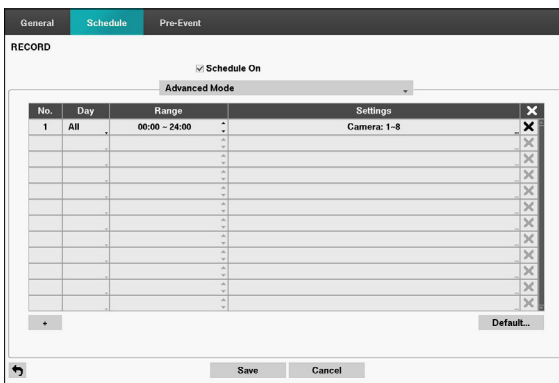

<Advanced Mode>

Disabling **Schedule On** suspends schedule recording regardless of the schedule and displays the on the upper left corner of each camera screen. Pressing the **Panic Record** button displays the and commences panic recording.

Set Record Schedule mode as **Simple Mode** or **Advanced Mode**. **Advanced Mode** allows you to configure a unique recording schedule for each event. Select the to delete a schedule.




- Changing the recording schedule mode suspends all active event-linked actions.
- Select the + button on the bottom left of the screen to add a schedule. Select **Day** to specify the **Day** setting or select **All**. Select **Scope** to specify the time frame.

## Simple Mode Options

- **Mode:** Select **No Record**, **Time**, **Event**, or **Time & Event**.

<b>No Record</b>	Unless the <b>Panic Record</b> button is pressed, no recording will take place during the scheduled time frames on the scheduled days.
<b>Time</b>	The  icon appears on the upper left corner of the screen. The  icon appears at scheduled times to indicate recording is in progress.
<b>Event</b>	The  icon appears on the upper left corner of the screen. The  icon appears when the specified event occurs to indicate recording is in progress.  <input checked="" type="checkbox"/> If Pre-Event is enabled, the  and  icons appear when recording is not in progress, or the  and  icons appear when an event occurs and recording is in progress.
<b>Time &amp; Event</b>	The  icon appears on the upper left corner of the screen and recording commences as per the ips, Quality, Resolution selected for time under <b>Setup</b> . When an event occurs, the icon changes into  icon and recording commences as per the ips, Quality, Resolution selected for events under <b>Setup</b> .



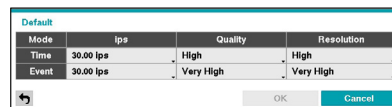




- **Channel:** Select which cameras to apply the schedule to.
- **Settings:** Select to configure default values for Time Lapse and Event Recording modes.



### Advanced Mode Options

Select to configure event types.

- **Type:** Event-specific and time recording icons are as follows:

	Time Lapse (Time)		Video Loss
	Alarm-In		Video Blind
	Motion Detection		Text-In
	Tripzone		

- **ips:** Allow you to set the images per second for Time and Event recording.
- **Quality:** Allow you to set the recorded image quality for Time and Event recording. You can select from: Very High, High, Standard and Basic.
- **Resolution:** Allow you to set the recorded image resolution for Time and Event recording. You can select from: Very High, High, and Standard.
- **Dwell:** Specify how long to record for after a corresponding event occurs.



- Upper-tier schedule's settings apply to unconfigured channels.
- If multiple events take place on a specific channel and different **ips, Quality, Resolution, and Dwell Time** settings apply, highest settings apply to all event-linked recordings.
- The resolution can be set up at a time for each event or separately for each channel of an event. When setting up at a time for each event, the following options are available: **Very High, High** and **Standard**. Selecting **Very High**, the highest resolution will be applied. Selecting **Standard**, the lowest resolution, and selecting **High**, the other resolution will be applied. When setting up separately for each channel of an event, you can select any resolution supported by the camera mode (720, 960, HD or Full HD).

<div style="background-color: #0070c0; color: white; padding: 2px;">✓ (Standard)</div> <div style="background-color: #333; color: white; padding: 5px;">                 Very High                  High                  Standard             </div> <p style="text-align: center;">Event</p>	<div style="background-color: #0070c0; color: white; padding: 2px;">✓ (360X240)</div> <div style="background-color: #333; color: white; padding: 5px;">                 720X480                  720X240                  360X240             </div> <p style="text-align: center;">720 Mode</p>
<div style="background-color: #0070c0; color: white; padding: 2px;">✓ (480X240)</div> <div style="background-color: #333; color: white; padding: 5px;">                 960X480                  960X240                  480X240             </div> <p style="text-align: center;">960 Mode</p>	<div style="background-color: #0070c0; color: white; padding: 2px;">✓ (720X480)</div> <div style="background-color: #333; color: white; padding: 5px;">                 1280X720                  720X480                  360X240             </div> <p style="text-align: center;">HD Mode</p>
<div style="background-color: #0070c0; color: white; padding: 2px;">✓ (720X480)</div> <div style="background-color: #333; color: white; padding: 5px;">                 1920X1080                  1280X720                  720X480             </div> <p style="text-align: center;">Full HD Mode</p>	

## Pre-Event

When an event occurs, enabling this option includes the specified duration prior to the event in the event-triggered recording.

RECORD					
No.	Ips	Quality	Resolution	Dwell	
1	30.00 lps	Standard	720x480	00 min, 05 sec.	
2	30.00 lps	Standard	720x480	00 min, 05 sec.	
3	30.00 lps	Standard	720x480	00 min, 05 sec.	
4	30.00 lps	Standard	720x480	00 min, 05 sec.	
5	30.00 lps	Standard	720x480	00 min, 05 sec.	
6	30.00 lps	Standard	720x480	00 min, 05 sec.	
7	30.00 lps	Standard	720x480	00 min, 05 sec.	
8	30.00 lps	Standard	720x480	00 min, 05 sec.	

Save Cancel

- **No.:** Select which cameras to apply Pre-Event to.
- **Ips, Quality, Resolution:** The image quality can be selectable from Very High, High, Standard and Basic, and image resolution can be selectable from Very High, High, and Standard.
- **Dwell:** Specify the duration of pre-event recording data.

- If no event mode schedule exists in the schedule, a warning message prompting you to add an event mode schedule will be displayed.
- The warning message will appear even in **Time & Event** mode.

## Event Setup

Refer to the **Menu Use on page 20** for basic information on using the Setup menus.

## Motion

EVENT							
No.	Sensitivity	Zone	Min. Blocks	Zone View	Ignoring Interval	Actions	
1	3/3	192	1/1		2 sec.		
2	3/3	192	1/1		2 sec.		
3	3/3	192	1/1		2 sec.		
4	3/3	192	1/1		2 sec.		
5	3/3	192	1/1		2 sec.		
6	3/3	192	1/1		2 sec.		
7	3/3	192	1/1		2 sec.		
8	3/3	192	1/1		2 sec.		

Daytime Setup... Save Cancel

- **No.:** Select which cameras to apply Motion Detection to.
- **Sensitivity:** Set daytime and nighttime sensitivity settings between 1 (Low) and 5 (High).


Motion Detection 1 - Sensitivity

Daytime


Nighttime

OK Cancel

- **Zone:** Define the motion detection block.

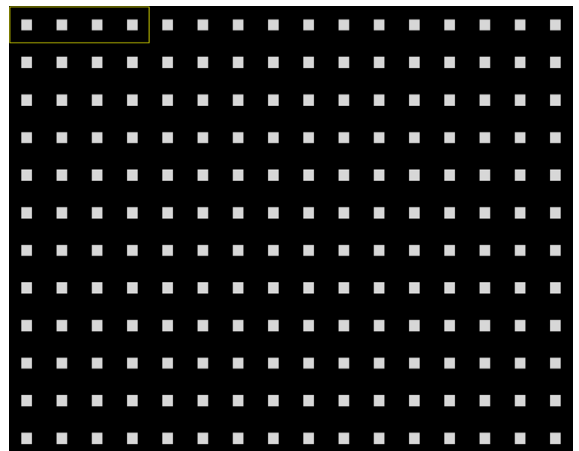


Use the remote control's arrow buttons to move the block selection window up, down, left, and right. The selection window consists of 4 blocks per row. Select/deselect individual blocks using the **Camera** buttons. You can use the mouse to drag the zone and then select, clear, or reverse the selection.

From the zone selection screen, press the  button on the remote control or right-click on the mouse to open up the Zone Setup menu.



- **Select:** Confirm the block selection in the selection window.
  - **Clear:** Clear the block selection in the selection window.
  - **Reverse:** Clear the blocks selected within the selection window and select all unselected blocks within the selection window.
  - **Select All:** Select all blocks.
  - **Clear All:** Clear all block selections.
  - **Reverse All:** Clear all selected blocks within the screen and select all unselected blocks within the screen.
  - **Zone View:** Display any detected motion within the zone.
  - **OK:** Save the changes and exit the menu.
  - **Cancel:** Exit the menu without saving the changes.
- **Min. Blocks:** Motion needs to be detected in more than the specified number of blocks in order to trigger a Motion Detection event. You may select a value between 1 and the number of blocks selected under **Zone** for daytime and nighttime, each.

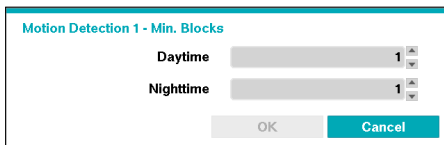

- **Motion Ignoring Time:** The system does not produce event log entries or issues remote notifications regarding motion detected during the specified time following the initial motion detection. Set a value between 1 sec and 10 secs or choose Never.




Motion Ignoring Time does not affect motion detection recording.

- **Actions:** Specify which actions to take when motion is detected.
  - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to Event or Time & Event mode, the selected cameras will begin linked recording when an event occurs.
  - **Alarm-Out:** Designate event-triggered alarm-out channels and beeps.
  - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, FTP, Push, and/or Alert Window.
  - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.



In order to use the Callback feature, the DVR must be registered on the remote program.

- **Daytime Setup:** Specify when daytime starts and ends. Adjust the time frame in 15-minute increments. Times outside the specified range will be assumed as nighttime by the system.

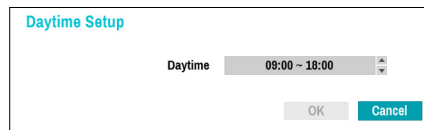



## Tripzone

EVENT						
No.	Sensitivity	Zone	Zone View	Ignoring Interval	Actions	
<input type="checkbox"/> 1	3/3	0	<input type="checkbox"/>	2 sec.	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> 2	3/3	0	<input type="checkbox"/>	2 sec.	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> 3	3/3	0	<input type="checkbox"/>	2 sec.	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> 4	3/3	0	<input type="checkbox"/>	2 sec.	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> 5	3/3	0	<input type="checkbox"/>	2 sec.	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> 6	3/3	0	<input type="checkbox"/>	2 sec.	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> 7	3/3	0	<input type="checkbox"/>	2 sec.	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> 8	3/3	0	<input type="checkbox"/>	2 sec.	<input type="checkbox"/>	<input type="checkbox"/>

Daytime Setup...

Save    Cancel

- **No.:** Select which cameras to apply Motion Detection to.
- **Sensitivity:** Set daytime and nighttime sensitivity settings between 1 (Low) and 5 (High).


Motion Detection 1 - Sensitivity

Daytime


Nighttime


OK    Cancel

- **Zone:** Define the motion detection block.

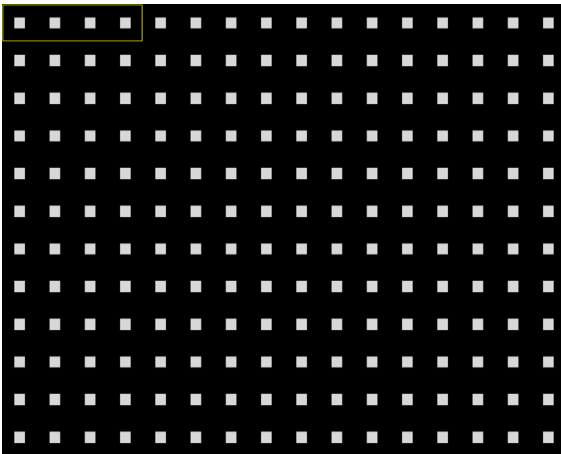

Use the remote control's arrow buttons to move the block selection window up, down, left, and right. The selection window consists of 4 blocks per row. Select/deselect individual blocks using the **Camera** buttons. You can use the mouse to drag the zone and then select, clear, or reverse the selection.

From the zone selection screen, press the  button on the remote control or right-click on the mouse to open up the Zone Setup menu.

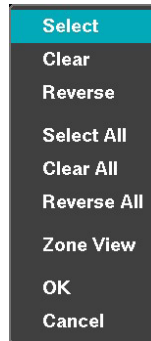

- **Select:** Confirm the block selection in the selection window.
- **Clear:** Clear the block selection in the selection window.
- **Reverse:** Clear the blocks selected within the selection window and select all unselected blocks within the selection window.
- **Select All:** Select all blocks.
- **Clear All:** Clear all block selections.
- **Reverse All:** Clear all selected blocks within the screen and select all unselected blocks within the screen.
- **Zone View:** Display any detected motion within the zone.
- **OK:** Save the changes and exit the menu.
- **Cancel:** Exit the menu without saving the changes.
- **Tripzone Ignoring Time:** The system does not produce event log entries or issues remote notifications regarding Tripzone detected during the specified time following the initial Tripzone detection. Set a value between 1 sec and 10 secs or choose Never.



Tripzone Ignoring Time does not affect motion detection recording.

- **Actions:** Specify which actions to take when motion is detected.
  - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to Event or Time & Event mode, the selected cameras will begin linked recording when an event occurs.
  - **Alarm-Out:** Designate event-triggered alarm-out channels and beeps.
  - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, FTP, Push, and/or Alert Window.

- **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.

In order to use the Callback feature, the DVR must be registered on the remote program.

- **Daytime Setup:** Specify when daytime starts and ends. Adjust the time frame in 15-minute increments. Times outside the specified range will be assumed as nighttime by the system.

**Daytime Setup**

Daytime

## Alarm-In

Motion Tripzone **Alarm-In** Video Loss Video Blind Text-In

EVENT

No.	Title	Type	Actions
<input type="checkbox"/> 1	Alarm-In 1	NC	<input type="checkbox"/> <input type="checkbox"/>
<input type="checkbox"/> 2	Alarm-In 2	NC	<input type="checkbox"/> <input type="checkbox"/>
<input type="checkbox"/> 3	Alarm-In 3	NC	<input type="checkbox"/> <input type="checkbox"/>
<input type="checkbox"/> 4	Alarm-In 4	NC	<input type="checkbox"/> <input type="checkbox"/>
<input type="checkbox"/> 5	Alarm-In 5	NC	<input type="checkbox"/> <input type="checkbox"/>
<input type="checkbox"/> 6	Alarm-In 6	NC	<input type="checkbox"/> <input type="checkbox"/>
<input type="checkbox"/> 7	Alarm-In 7	NC	<input type="checkbox"/> <input type="checkbox"/>
<input type="checkbox"/> 8	Alarm-In 8	NC	<input type="checkbox"/> <input type="checkbox"/>

- **No.:** Enable / disable alarm-ins.
- **Title:** Use the virtual keyboard to enter titles.
- **Type:** Change the alarm-in type.
- **Actions:** Specify which actions to take when Alarm-In is detected.
  - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to Event or Time & Event mode, the selected cameras will begin linked recording when an event occurs.
  - **Alarm-Out:** Designate event-triggered alarm-out channels and beeps.
  - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, FTP, Push, and/or Alert Window.
  - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.

In order to use the Callback feature, the DVR must be registered on the remote program.

## Video Loss

Motion Tripzone Alarm-In **Video Loss** Video Blind Text-In

EVENT

No.	Video Loss Interval	Actions
1	0.1 sec.	<input type="checkbox"/>
2	0.1 sec.	<input type="checkbox"/>
3	0.1 sec.	<input type="checkbox"/>
4	0.1 sec.	<input type="checkbox"/>
5	0.1 sec.	<input type="checkbox"/>
6	0.1 sec.	<input type="checkbox"/>
7	0.1 sec.	<input type="checkbox"/>
8	0.1 sec.	<input type="checkbox"/>

Use Ignoring Time

- **Video Loss Interval:** The system does not produce event log entries or issues remote notifications regarding video loss detected during the specified time following the initial video loss detection. Set a value between 0.1 sec and 15 secs or choose Never.
- **Actions:** Specify which actions to take when a Video Loss event occurs.
  - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to **Event** or **Time & Event** mode, the selected cameras will begin linked recording when an event occurs.
  - **Alarm-Out:** Designate event-triggered alarm-out channels and beeps.
  - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, FTP, Push, and/or Alert Window.
  - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.

In order to use the Callback feature, the DVR must be registered on the remote program.

- **Use Ignoring Time:** Select **Time Setup** to specify the video loss detection ignore time. Video loss detection will be disabled during the specified time frame.

## Video Blind

No.	Sensibility	Activation Time	Actions
<input type="checkbox"/> 1	1/1	5 sec.	⏏
<input type="checkbox"/> 2	1/1	5 sec.	⏏
<input type="checkbox"/> 3	1/1	5 sec.	⏏
<input type="checkbox"/> 4	1/1	5 sec.	⏏
<input type="checkbox"/> 5	1/1	5 sec.	⏏
<input type="checkbox"/> 6	1/1	5 sec.	⏏
<input type="checkbox"/> 7	1/1	5 sec.	⏏
<input type="checkbox"/> 8	1/1	5 sec.	⏏

Use Ignoring Time    Time Setup...

Save    Cancel

- **Sensitivity:** Allow you to adjust the DVR's sensitivity to video blind for Black and White independently from 0 (Never) and 1 (least sensitive) to 15 (most sensitive).

Video blind might NOT be detected for a camera with a very noisy image especially when set for low sensitivity values.

- **Activation Time:** Allow you to set the duration before the DVR will report a Video Blind. The DVR will not consider any blinded camera to be a Video Blind if the detected blindness is less than the Activation Time set on this screen.
- **Actions:** Specify which actions to take when video blind events occur.
  - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to **Event** or **Time & Event** mode, the selected cameras will begin linked recording when an event occurs.
  - **Alarm-Out:** Designate event-triggered alarm-out channels and beeps.
  - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, FTP, Push, and/or Alert Window.
  - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.

In order to use the Callback feature, the DVR must be registered on the remote program.

- **Use Ignoring Time:** Select **Time Setup** to specify the video blind detection ignore time. Video blind detection will be disabled during the specified time frame.

## Text-In

No.	Setup	Title	Actions
1	⚙	Text-In 1	⏏
2	⚙	Text-In 2	⏏
3	⚙	Text-In 3	⏏
4	⚙	Text-In 4	⏏
5	⚙	Text-In 5	⏏
6	⚙	Text-In 6	⏏
7	⚙	Text-In 7	⏏
8	⚙	Text-In 8	⏏

Save    Cancel

- **Setup:** Configure text-in devices.

Text-In 1

Port: None    Setup...

Text-In Product: Generic Text

Transaction Start: [ ] Any Character

Transaction End: [ ] 0 more line(s)

Line Delimiter: [ ]

Ignore String: [ ]

Case Sensitive


Time Out: 10 min. 00 sec.


OK    Cancel

It's possible to batch configure all text-in devices with the exception for port settings.

- An influx of large amounts of text-in data from multiple channels can hinder system performance.


- **Text-In Product:** The setup window is updated so that the portion below the port setting matches the corresponding text-in device. Displayed screenshot illustrates Generic Text settings.
- **Transaction Start:** Once **Transaction Start** has been designated, the system will recognize the specified string as the beginning of a transaction. You can choose the Any Character setting. Under this setting, any character will trigger the system into recognizing the start of a new transaction.
- **Transaction End:** Once **Transaction End** has been designated, the system will recognize the specified string as the end of a transaction. Select **0 more line(s)** next to Transaction End and specify a value between 1 and 10. The system will recognize the specified Transaction End string plus the number of lines as being the end of a transaction.


- **Line Delimiter:** Designate a string to mark the end of a line. You can enter control strings by selecting  and then entering ^, followed by a letter. For example, Carriage Return is ^M and Line Feed (new line) is ^J.
- **Ignore String:** Specify a string to ignore from transaction records.
- **Case Sensitive:** Ignores case in strings designated under **Transaction Start**, **Transaction End**, **Line Delimiter**, and **Ignore String**.

 **Case Sensitive** does not apply to control strings.

- **Time Out:** Once **Time Out** has been enabled, the system will assume the end of a transaction if no new string is entered within the specified duration of time. Select between 5 secs and 15 mins.

Selecting RS-232, RS-485, USB-Serial 1 through 8, or LAN 1 through 4 as the port activates the Port Setup button. Select **Setup** and configure the **Baud Rate**, **Data Bit**, **Stop Bit**, and **Parity** settings.

-  If any one of LAN1 through 4 has been selected as the port, select the Port Setup button and configure the network port setting.
- If using a USB-serial port, the Text-In feature may malfunction if the USB cable is removed while the system is in operation.
- **Title:** Designate a name for the text-in device.
- **Actions:** Specify which actions to take when text-in is detected.
  - **Record:** Specify which cameras to begin linked recording on when an event occurs. If the schedule is set to Event or Time & Event mode, the selected cameras will begin linked recording when an event occurs.
  - **Alarm-Out:** Designate event-triggered alarm-out channels and beeps.
  - **Notify:** Configure to be notified of events by Mail, LAN1 through 5, FTP, Push, and/or Alert Window.
  - **PTZ:** Moves the PTZ camera to a specific preset position when an event occurs.


 In order to use the Callback feature, the DVR must be registered on the remote program.


## Camera Setup

Refer to the **Menu Use on page 20** for basic information on using the Setup menus.

### General

Enable/disable the covert view and rename cameras.

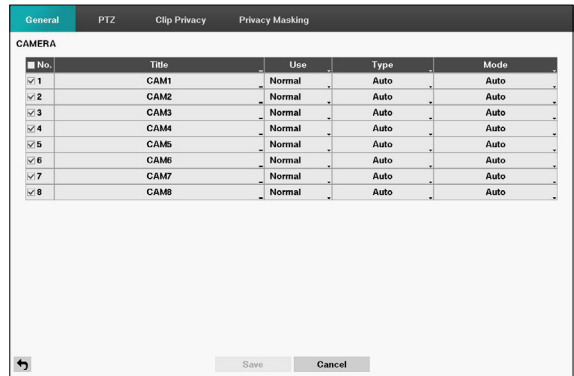


- **No.:** Turn the camera number On or Off.
- **Title:** Edit the camera's name.
- **Use:** Set the camera as **Normal**, **Covert 1**, or **Covert 2**.  
Live images and video recordings from cameras that have been set as **Covert 1** or **Covert 2** will not be available to users who do not have covert camera access. Setting a camera as **Covert 1** hides its images but does display OSD information about the camera. Setting a camera as **Covert 2** hides its images as well as OSD information about the camera as if it has been deactivated completely.
- **Type:** Select the type supported by the camera among Auto, SD, HD-TVI and AHD. Selecting **Auto** allows the DVR to automatically detect the type supported by the camera.
- **Mode:** Select the width resolution supported by the camera among Auto, 720, 960, HD and Full HD. Selecting **Auto** allows the DVR to automatically detect the width resolution supported by the camera.
-  When selecting **Auto**, the 720, HD and Full HD mode are supported. The input resolution is applied without rebooting the system. If the camera's width resolution is 960 and **Mode** is set to **Auto**, **720** mode will be applied.
- When you change mode, the system restarts automatically.

## PTZ




You will only be able to set up PTZ devices if the PTZ port is set to RS232 or RS485.

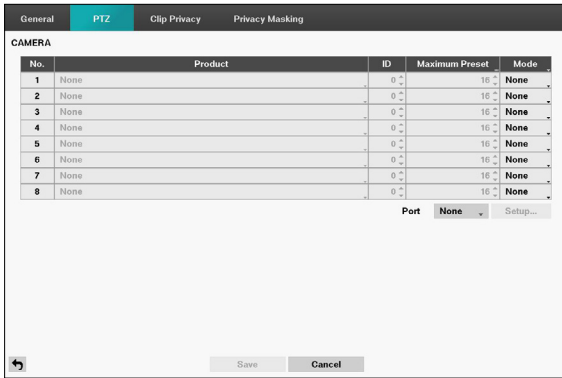

- **Product:** You can select the PTZ camera you wish to configure.
- **ID:** You can assign IDs to each camera by highlighting the box under the ID heading. Change the number by highlighting it and using the Up and Down arrow buttons to increase and decrease the number. The PTZ ID number can be set from 0 to 256.



<RS232/RS485>

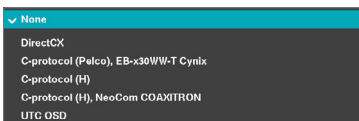


<UTC>

- **Mode:** Select **None**, **UTC**, **RS232**, or **RS485**. UTC is only used for HD and Full HD cameras.



UTC may not work properly depending on the type of camera.


- You will need to connect the camera to the RS232 or RS485 connector on the back of the DVR following the camera manufacturer's instructions.

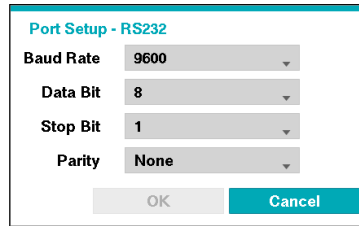


Configure the port's setting based on the PTZ camera manufacturer's instructions.

## Clip Privacy

Configure privacy masking zone for CLIP COPY.

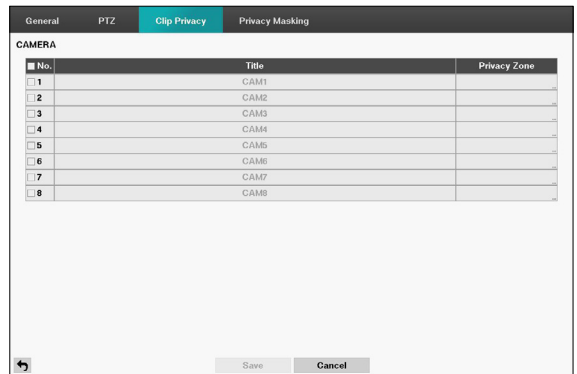

- **No.:** Turn on/off the camera number.
- **Privacy Zone:** Display the full screen live mode of the channel, and you can configure the privacy zone area by dragging on the area with the mouse (The privacy masking zone can be configured up to 16 areas).




- **Delete:** Delete the selected privacy masking area.
- **Delete All:** Delete the all privacy masking area.
- **Save:** Save the changes and exit the privacy masking area options screen.
- **Cancel:** Exit the privacy masking area options without saving the changes.




SD images can have restrictions when configuring the masking area.

## Privacy Masking

Configure privacy masking zone for Live and Recording screen.

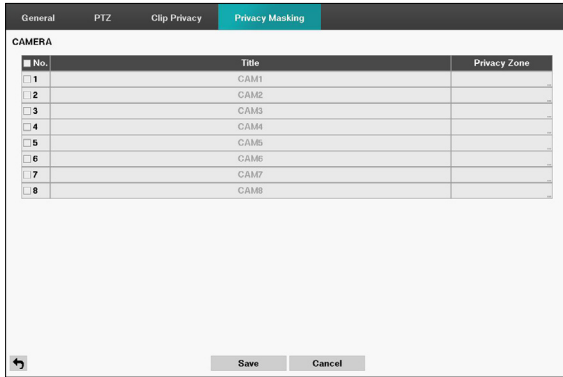

- **No.:** Turn on/off the camera number.
- **Privacy Zone:** Display the full screen live mode of the channel, and you can configure the privacy zone area by dragging on the area with the mouse (The privacy masking zone can be configured up to 4 areas).

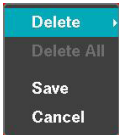

- **Delete:** Delete the selected privacy masking area.
- **Delete All:** Delete the all privacy masking area.
- **Save:** Save the changes and exit the privacy masking area options screen.
- **Cancel:** Exit the privacy masking area options without saving the changes.

SD images can have restrictions when configuring the masking area.

## Device Setup

Refer to the **Menu Use on page 20** for basic information on using the Setup menus.

## Audio




The DVR can record up to four audio inputs. A list of cameras appears, and you can select which camera you want associated with that audio input.



# Network Setup

Refer to the **Menu Use on page 20** for basic information on using the Setup menus.

## General

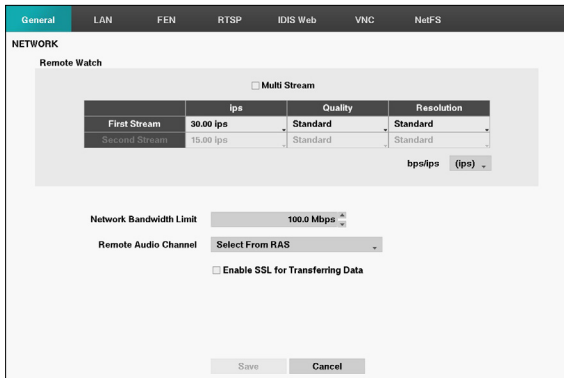

- **Remote Audio Channel:** Transmits the selected channel’s audio to the remote program. Select **Select From Client** to stream audio of the channel selected on the remote program.

✓ Audio skipping and sync issues can occur under poor network conditions.

- **Enable SSL for Transferring Data:** Applies SSL (Secure Sockets Layer) protection on remote viewing and recording data transmissions.

- ✓ If using the SSL feature, it will not be possible to connect to the DVR from a remote program or a network keyboard that does not support SSL.
- Changing the SSL setting temporarily severs all remote connections to the DVR in order to apply the change.
- This product contains content developed by OpenSSL Project for use in Open SSL Toolkit (<http://www.openssl.org/>).

- **Multi Stream:** Supports more than one stream. Configure to use different streams in layout mode or channels in IDIS Center Client.

✓ During playing, the transfer speed can be low.

- **bps/ips:** Select the Transfer Speed from 1Mbps to 100Mbps and the unit of measure for the transfer speed between: bps and ips. The available value differs depending on the quality and resolution settings.
- **Quality:** Select the Quality from: Very High, High, Standard and Basic.
- **Resolution:** Select the Resolution from: Very High, High and Standard.

✓ The higher Quality and Resolution settings require higher Transfer Speed settings. The transfer speed you set is the maximum speed. Depending on the network environment, this speed may not be achieved.

- **Network Bandwidth Limit:** Configure the bandwidth to limit.

✓ If you configured the **Network Bandwidth Limit**, the live video may not be displayed smoothly in a remote program.



## LAN

Designate the IP address type as **Manual** or **DHCP**.

### Manual

- Set **Type** to Manual.

**Manual** lets you configure related settings manually. Configure **IP Address**, **Gateway**, and **Subnet Mask** settings manually using the remote control's arrow buttons or the mouse wheel.

- **DNS Server**: Enter the DNS server's IP address. The IP address can also be entered using the mouse wheel.
- **Port Number Setup**: Change the numbers by highlighting them and using the Up and Down arrow buttons to increase or decrease the number. The factory default Port settings are: 8200(Remote Admin), 8201(Remote Callback), 8016(Remote Watch), and 10019(Remote Search).

You will need to get the appropriate Port Numbers for each IDIS Center and IDIS Web related program (Admin, Callback, Watch and Search) from your network administrator.

To use the **UPnP** (Universal Plug and Play) feature, select **Use UPnP**. If using an IP router (or NAT), UPnP service allows the device to automatically forward the port to the DVR.

- This port is used to access a port that has a private IP address.
- In order to use the UPnP service, the IP router (or NAT) must support UPnP port forwarding and have the relevant options enabled.
- Port number cannot be changed with **Use UPnP** selected.


- **Status**: Indicates the number of the port forwarded by the IP router (or NAT) to the DVR via UPnP service.
- **Test**: Select to test the current LAN settings you made.

- 1 Enter the address of the DVR to test.
- 2 Adjust the frequency of the ping test.
- 3 Select **Run** to do the test. The test result is displayed.
- 4 Select **Close** to exit.

- If using a firewall, select Change Port to change the port number to one that is permitted by the firewall.
- Changing the port temporarily severs the DVR's remote connection.


Remote point IP and port settings on the remote program must also be changed in order for it to connect to the DVR.

## DHCP

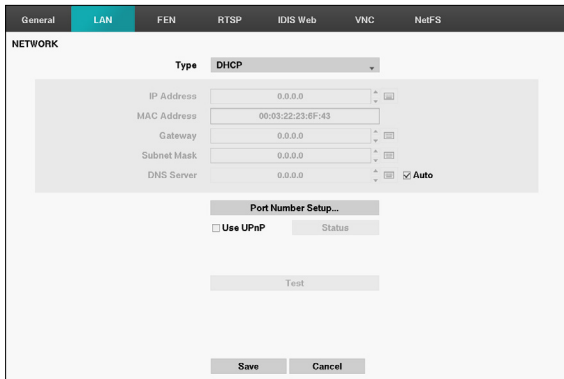


Select **DHCP** and then **Save** to retrieve IP address and other network settings automatically from the DHCP server. Once the network settings have been retrieved, the DVR's current IP address is displayed in the IP Address field.

- It may not be possible to retrieve the IP address if there is no DHCP server. If this is the case, contact your network administrator.
- With DHCP, the DVR's IP address might change with each startup.

 There is a limit to the number of users allowed to connect remotely at the same time. Contact the service center for more information.

## FEN

If using a dynamic IP address, FEN service makes it easy to connect to the DVR from a remote program without having to configure dynamic IP or router settings.

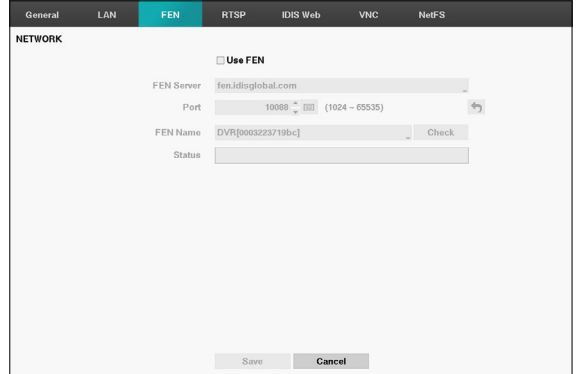

- **Use FEN:** Check if you wish to use FEN service.
- **FEN Server:** Enter the FEN server's IP address or domain name.
- If you have configured the DNS Server setting under **Network - IP Address**, you can enter the FEN server's domain name instead of its IP address in the **FEN Server** field.
- **Port:** Specify the FEN server's port number.
- If using an IP router (or NAT), port configuration and other network functions will depend on the usage method of the IP router (or NAT).

- **FEN Name:** After entering the DVR name you wish to register on the FEN server, check and register the entered name. This is a unique DVR name that will be registered on the FEN server.



- You will not be able to save FEN settings unless you click on the Check button next to the DVR Name field and check the entered name's availability.
  - You will be prompted with an error message if you do not enter DVR name or enter a name already registered to the FEN Server.
  - If the FEN name contains the #, \, and/or % symbol, it might not be able to connect to the DVR from the IDIS Web program.
- **Status:** Used to check the status of the device being registered to the FEN server.

Select **Save** after making changes to register the DVR's name to the FEN server.



If FEN has been configured correctly, the FEN server's help desk information will be displayed in the **Help Desk** field the next time you access the FEN Setup screen.

## RTSP

RTSP service allows you to monitor real-time using the Real-Time Streaming Protocol.

The screenshot shows the RTSP configuration page. At the top, there are tabs for General, LAN, FEN, RTSP (selected), IDIS Web, VNC, and NetFS. Below the tabs, the 'NETWORK' section is visible. It includes a checkbox for 'Enable RTSP'. Underneath, there are three input fields: 'RTP Port' with the value 954 and a range indicator (1 - 65535), 'RTP Start Port' with the value 16001 and a range indicator (1024 - 65535), and 'RTP End Port' with the value 17000 and a range indicator (1024 - 65535). There is also a checkbox for 'Use Mobile'. At the bottom of the form, there are 'Save' and 'Cancel' buttons.


- **RTSP Port:** Set the port number of the RTSP server obtained from your system administrator.
- **RTP Port:** Set the start/end port number of the RTP server obtained from your system administrator.
- **Use Mobile:** Access a remote DVR using a Blackberry or other mobile devices.



- Selecting Use Mobile sets the IDIS Web service to be enabled automatically regardless of your IDIS Web settings.
- When using NAT (Network Address Translation) or firewall services, opening all UDP ports allows you to access a DVR using Blackberry and Android devices.
- You can access a remote DVR and monitor live video images using media players, such as VLC Player, supporting RTSP service. Start the media player on your local PC and enter "rtsp://ID:Password@IP address:RTSP port number/trackID=channel number", or start Internet Explorer on your Blackberry or other mobile devices and enter "http://IP address:IDIS Web port number/".
- Some media players might not play video properly depending on network conditions.
- RTSP service might not be supported, depending on the type of media player.

## IDIS Web


IDIS Web service allows you to monitor and search video remotely without setting specific on-line programs.

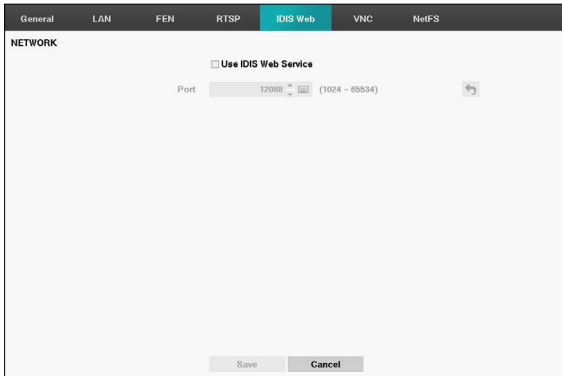

- **Use IDIS Web Service:** Enable/disable IDIS Web.
- **Port:** Set the port number used when accessing IDIS Web by using the Up and Down arrow buttons to increase or decrease the numbers.

## VNC

VNC service allows you to access the DVR and control it remotely using a PC or mobile devices via Ethernet.

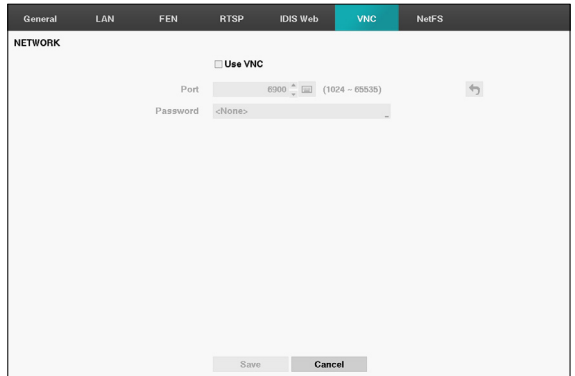






- **Use VNC:** Enable/disable VNC. You will be able to change the settings if Use VNC is enabled.
- **Port:** Configure the port number of the VNC server.
- **Password:** Configure the **Password** to use when connecting to the DVR from a remote locale.

Up to three users at a time can access a DVR remotely via VNC service.

Key	Function
← or h	Pressing the ← or h key moves to the left in the menu. It is the same as pressing the Left arrow button on the front panel.
→ or l	Pressing the → or l key moves to the right in the menu. It is the same as pressing the Right arrow buttons on the front panel.
↑ or k	Pressing the ↑ or k key moves up in the menu. It is the same as pressing the Up arrow button on the front panel.
↓ or j	Pressing the ↓ or j key moves down in the menu. It is the same as pressing the Down arrow button on the front panel.
m or Windows	Pressing the m or Windows key displays the Live Monitoring menu or Search menu on the screen. It is the same as pressing the MENU button on the front panel.
Enter or Return	Pressing the Enter or Return key selects the highlighted item or completes an entry that you have made during system setup. It is the same as pressing the Play/Pause button on the front panel.
d or PageUP/ PageDown	Pressing the d or PageUp or PageDown key toggles between different display formats. It is the same as pressing the LAYOUT button on the front panel.
c or Home	Pressing the c or Home key allows you to copy video clips.
F5	Pressing the F5 key refreshes the current VNC screen.

## NetFS


It allows you to register NetFS sites for the following functions:

- Upload or download of files for upgrade, import/export of a setup file, log export, or file print on a FTP site. Related settings are as follows:
  - :  (Setup) in the live monitoring mode - System menu - General tab - Upgrade, Import, Export
  - :  (Export) in the search mode - Print
- Upload of clip-copy files on a FTP site. Related settings are as follows:
  - :  (Export) in the search mode - A-B Clip-Copy or Clip-Copy.
- FTP notification of an event detection (system event excluded). Related settings are as follows:
  - :  (Setup) in the live monitoring mode - Notification menu - FTP tab - FTP setting,
  - :  (Setup) in the live monitoring mode - Event menu - Actions – Notify (FTP) setting)



It is recommended that you use FileZilla and smallFtp servers

This feature is supported only in the PASV(passive mode) of the FTP site.

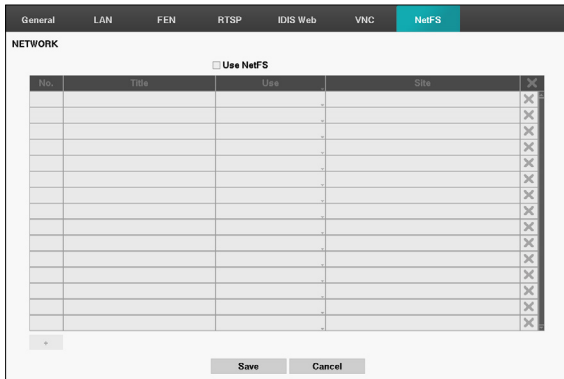


Select the **Use NetFS** to use the NETFS feature. Select the + icon at the bottom of the list to add a FTP site up to 16.

- **Title:** Display the NetFS site name. Use the virtual keyboard to enter the name.
- **Use:** Select the usage of the NetFS feature.
  - N/A: disables the NetFS feature.
  - ALL: enables the NetFS feature.
  - Upgrade: It allows you to use the upgrade file uploaded on the NetFS site.
  - Setup: It allows you to import or export a setup file uploaded on the NetFS site.
  - System Log – It allows you to save system log on the NetFS site.
  - Clip-Copy – It allows you to manually copy video clips to the NetFS site or to automatically copy event-detected video clips to the NetFS site.
  - Print – It allows you to save images as a PDF file on the NetFS site.

• **Site:** Enter NetFS site information.

- ✓
  - When you delete a FTP site in the NetFS setup screen on the Network menu, the FTP site in the FTP setup screen on the Eventupload will be deleted, too.
  - When you change the usage to other than ALL or Clip-Copy, a FTP notification function will be disabled.
  - Select the  icon to delete the existing NetFS site.

Entering the NetFS site information using the virtual. Click the **test** buton to test the current NetFS site settings you made.

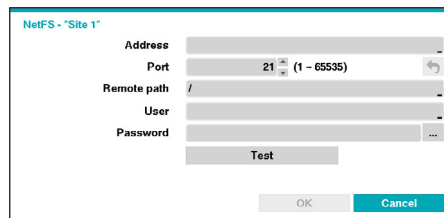

- **Address:** Enter the NetFS address using the virtual keyboard.
- **Port:** Configure the port for connecting NetFS site.
- **Remote path:** Enter a folder path in the NetFS site using the virtual keyboard.
- **User / Password:** Enter the user and password when accessing the NetFS site using the virtual keyboard.
- **Test:** Test the current NetFS site settings you made.

## Notification Setup

### Callback

Configure Callback settings.

No.	IP Address
1	0.0.0.0
2	0.0.0.0
3	0.0.0.0
4	0.0.0.0
5	0.0.0.0

Retry: 5

Push

Push Server: push.lidigital.com

Ignoring Time: 30 sec.

- **LAN:** Enter the IP address of the receiving server and set **Retry** to between 1 and 10 in case of connection failure.
- **Push:** Send out event-related messages to mobile phone.

Enable to receive the event occurred in DVR on the mobile phone(Android, iOS). The DVR must be registered and set in mobile phone.

### Mail

Configure Mail settings.

Group & Recipient	Attach Type
default group	None

+ Group + Mail

SMTP Setup

Save Cancel

- **+Group:** Add a recipient group and select the image file format attached to an email.

New Group - mail\_group\_1

Group: mail\_group\_1

Attach Type: None

OK Cancel

A virtual keyboard appears allowing you to enter the Group name. You can select among CBF, JPG, and MP4. When selecting CBF, the DVR will attach an event detected video clip to an email. When selecting JPG, the DVR will attach the event detected image file (JPEG format) to an email. When selecting MP4, the DVR will attach the event detected video clip (MP4 format) to an email.

- **+Mail:** Add a mail recipient.

Recipient

Use

Group: default group

Display Name: \_\_\_\_\_

Address: \_\_\_\_\_ @ \_\_\_\_\_ \*

OK Cancel

Assign the Recipient to a Group and enter the Recipient's Display Name. Enter the recipient's e-mail address and mail server provider. Select the icon to select the mail server provider from a list of registered SMTP mail server providers.

The recipient's mail address must be in the correct email format and contain the @ symbol.


Select the **Attach Type** icon to attach event recordings to outgoing mails.

Select the icon to remove the account.

## SMTP Setup

Select **SMTP Setup** at the bottom right corner of the screen to configure an SMTP server.


- 1 Enter the **SMTP Server's** IP address or domain name and then configure the **Port** and **Sender** settings.

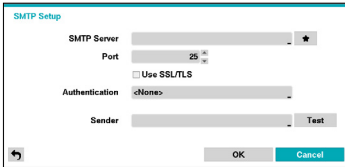

Default SMTP server port number is **25**. Select **Test** to send out a test mail using the current settings. Select **Use SSL/TLS** to use an SMTP server that requires SSL connections.

- If you have configured the DNS Server setting under **Network - IP Address**, you can enter the SMTP server's domain name instead of its IP address in the **SMTP Server** field.
- Select the  icon to select the mail server provider from a list of registered SMTP mail server providers.
- Address entered under **Sender** must be in the correct email format and include the @ symbol.


If user authentication is required by the SMTP server, select **Use** and then enter the **User** and **Password** information.



- 2 Select **OK** to apply and exit.

- This product contains content developed by OpenSSL Project for use in Open SSL Toolkit (<http://www.openssl.org/>).

## FTP

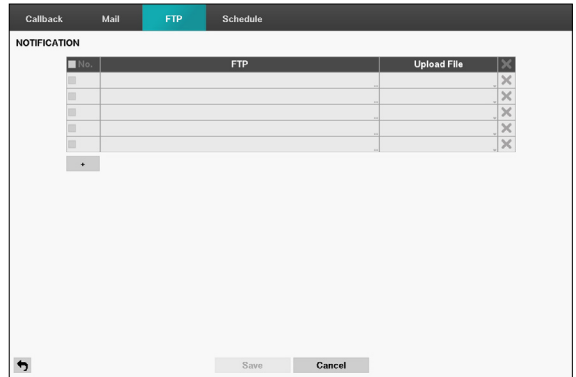


The FTP feature uploads event detected image or video clip on the FTP site when an event occurs. Select the + icon at the bottom of the list to add a FTP site.

- FTP:** Enter the FTP site information using the virtual keyboard.
- Upload File:** Select the file format to be uploaded on the FTP site, the time frame to schedule.

- The FTP site can be registered up to 5.

Select the + icon at the bottom of the list to add a FTP site.

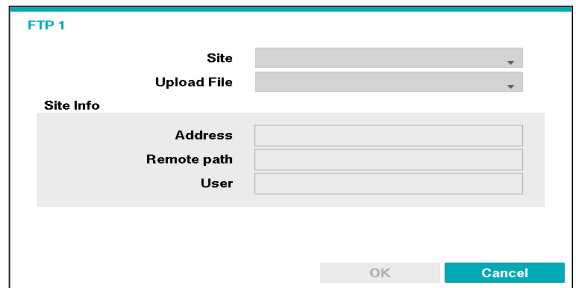

- Site:** Display a list of the registered FTP sites. Select an FTP site from the list. If the Use setting of the NetFS site is set to other than **ALL** or **Clip-Copy**, you cannot select the FTP site. You can change the Use setting or register other FTP sites in the NetFS setup screen on the Network menu.






# Display Setup

Refer to the **Menu Use on page 20** for basic information on using the Setup menus.

## OSD

Show OSD (On Screen Display) information on the bottom of the screen.

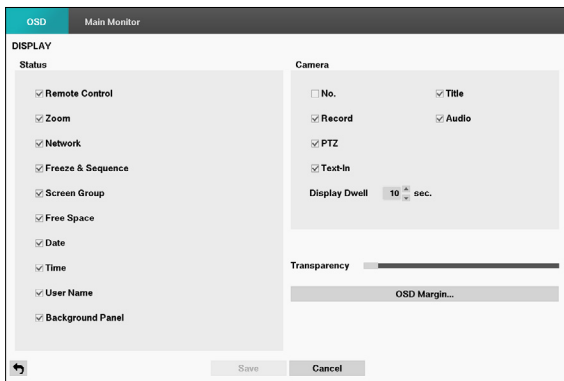

### Status

- **Remote Control:** The icon displays when the DVR can be controlled by the infrared remote control.
- **Zoom:** The icon displays on the enlarged video.
- **Network:** The icon displays when the unit is connected to a network via Ethernet. The icon displays on each camera when audio communication is available between the DVR and a PC running IDIS Center via Ethernet. The icon displays when VNC service is running.
- **Freeze & Sequence:** The icon displays while in the Freeze mode, and the icon displays while in the Sequence mode.
- **Screen Group:** Displays the number of screen group.
- **Free Space:** The icon displays when the DVR is in the Recycle mode, and the percentage of available storage space displays when the DVR is not in the Recycle mode.
- **Date and Time:** Displays the date and time.
- **User Name:** Displays the name of the current user logged in.
- **Background Panel:** Displays the background panel at the bottom of the screen in translucent black.

### Camera

- **No.:** Displays the camera number on the upper left corner of the camera screen.
- **Title:** Displays the camera name on the upper left corner of the camera screen.
- **Record:** Displays recording and schedule icons.
- **Audio:** Displays the icon on channels generating audio.
- **PTZ:** Displays the icon on PTZ cameras.
- **Text-In:** Displays strings received from text-in devices. Select **Display Dwell** and specify how long to display the text-in string. Text-in strings are shown on the single screen only.
- **Transparency:** Adjusts the transparency of the setup screens using the left and right arrow buttons.
- **OSD Margin:** Displays how OSD text will be displayed on the monitor. You can adjust the horizontal and vertical margins so that text and icons will not be hidden beyond the edges of the monitor.

## Main Monitor

Configure monitor-related settings.

OSD Main Monitor

DISPLAY

Sequence

Mode: Full Sequence

Interval: 3 sec.

Event Monitoring On

Resolution: 1920 X 1080

Set Resolution to Manual Mode

FR To Screen

Monitor Resolution	HDMI	VGA
	1280 X 1024	1280 X 1024
	1440 X 900	1440 X 900
	1920 X 1080	1920 X 1080

Save Cancel


- **Mode:** Select between **Full Sequence** and **Cameo Sequence**. In the full sequence mode, the DVR sequences through the cameras and displays them full screen. In the cameo sequence mode, the bottom right window in a multi-screen format sequences through the cameras.
  - **Interval:** Select between 1 secs and 1 mins. For more information on Sequence, refer to the **Sequence on page 10.**
  - **Event Monitoring On:** With Event Monitoring enabled, video feed from the camera configured to start recording when an event occurs is shown on the screen. For more information on Event Monitoring, refer to the **Event Monitoring on page 16.**
  - **Resolution:** Select 1920 x 1080, 1440 x 900, 1280 x 1024.
  - **Set Resolution to Manual Mode:** Set the resolution manually regardless of the resolution supported by the monitor.
- Supported resolutions may be restricted depending on the monitor.
- We recommend that you use 1920 x 1080 resolution.
- **Monitor Resolution:** Displays the resolution information of monitors currently connected to the DVR.

# Part 3 - Search

## Searching Video

While in the search mode, pressing the **MENU** button displays the following Search menu on the right edge of the screen. Pressing the **MENU** button again hides the menu. You can navigate through menus and items by pressing the arrow buttons.

### Search Menu

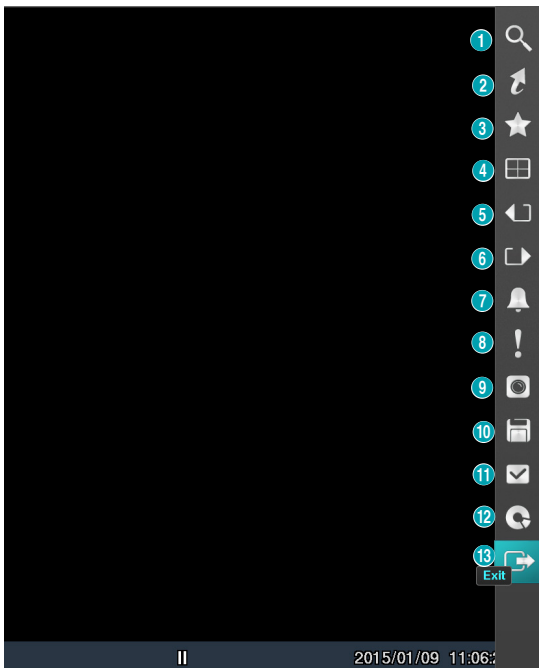

#### ① Search

Search by changing Event Log Search, Record Table Search, Motion Search, Text-In Search and Thumbnail Search.

#### ② Go to

- **Go to the First:** Displays the first recorded image.
- **Go to the Last:** Displays the last recorded image.
- **Go to the Date/Time:** Displays the Go to the Date/Time screen.

#### ③ Bookmarks

Add the current playback point to the bookmark list.



The maximum number of bookmarks that can be saved is 64.

#### ④ Display

Used to change the screen layout to single screen, PIP, 2x2, 1x5, 1x7, 3x3.

- **OSD On/Off:** Enables/disables the OSD feature.

#### ⑤ ⑥ Previous/Next Group

Loads the previous/next screen group.

#### ⑦ Alarm


Pressing this button while the alarm has been activated resets all DVR alarm outputs, including the built-in buzzer.

#### ⑧ Panic Record

Use the Panic Record feature.

### ⑨ Camera Menu

- **Zoom:** Zoom and choosing the camera number zooms the current playback image of the selected camera on the screen. Right-click on the mouse and drag to change the orientation, and use the wheel with the left-click on the mouse to zoom in/out more precisely.
- **Audio:** Audio toggles audio playback On and Off. Recorded audio will be played when the DVR displays a camera with recorded audio in full screen mode.
- **Hide Text-In:** Hide the text-in data on the screen if the video was recorded with text-in data.
- **Edit Group:** Enter to the Edit Group mode in the split screen layout.


 The Camera Menu also can be displayed by clicking the right mouse button on the screen while in the search mode.

### ⑩ Export

- **A-B Clip Copy:** Designate a start point and an end point and copy the data in between.
- **Clip Copy:** Open up the Clip Copy Setup window for designating points A and B.
- **Print:** Print a selected image.

### ⑪ Status

- Allow you to check the status of the DVR's system, event status and storage.

 Selecting Status will only be enabled for a user who has System Check authority.

### ⑫ Data Source

- **Record:** Search recording data contained in the main recording device.
- **Other:** Search data recorded while disks used in other systems were connected.

### ⑬ Exit

Exit the search mode and enter the live monitoring mode.

## Context Menu

Right-click on the Camera screen to access the context menu.

- **Zoom:** Zoom in.
- **Edit Group:** Enter to the Edit Group mode in the split screen layout.
- **Exit Search:** Exit the search mode and enter the live monitoring mode.

## Event Log Search

Select **Event Log Search** from the Search menu to bring up the Event Log Search Setup window.

Event Log Search

Time	Type	Title
2016/09/10 12:02:28	Panic Off	
2016/09/10 12:02:27	Panic On	
2016/09/10 12:01:37	Video Loss 4	CAM4
2016/09/10 12:01:37	Video Loss 3	CAM3
2016/09/10 12:01:37	Video Loss 2	CAM2
2016/09/10 12:01:37	Video Loss 1	CAM1
2016/04/03 00:48:30	Video Loss 4	CAM4
2016/04/03 00:48:30	Video Loss 3	CAM3
2016/04/03 00:48:30	Video Loss 2	CAM2
2016/04/02 11:45:07	Text-In 1	Text-In 1
2016/04/02 11:45:06	Text-In 1	Text-In 1
2016/04/02 11:45:05	Text-In 1	Text-In 1
2016/04/02 11:45:04	Text-In 1	Text-In 1
2016/04/02 11:45:03	Text-In 1	Text-In 1
2016/04/02 11:45:02	Text-In 1	Text-In 1

Option... Close

Select an event to display the recording made on the selected time and date (paused state). Select the Play button in the middle of the screen to start playing back the recording. Use the screen form to load recordings from other cameras.

You can also narrow your event search by selecting the **Option...** button and setting up the new search condition.

Event Log Search Option

From  First 2017/06/23 01:20:52

To  Last 2017/06/23 01:20:52

Check Time Overlap

Alarm-In 1-8

Motion 1-8

Tripzone 1-8

Video Loss 1-8

Video Blind 1-8

Text-In 1-8

Record Channels 1-8

- System Event
- Panic Record
- Check Recording
- Check Alarm-In
- Disk Almost Full
- Disk Bad
- Disk Temperature
- Disk S.M.A.R.T.
- Disk Config Change
- Fan Error

Search Cancel

You can uncheck the **First** and **Last** options at the top of the Event Log Search window and specify the search time frame manually.

Select First for From and Last for To to select the entire recording from start to end.

If designating **From** or **To** settings manually, you will be able to enable/disable the **Check Time Overlap** option.

If the system's clock has been changed and the designated **From** or **To** point exists at more than one location, you will have to choose one. Only the events that took place between the selected **From** and **To** points will be searched. If **Check Time Overlap** has not been selected, events from the entire **From** and **To** range will be searched.

### Camera Filter

- **Alarm-In:** Select which channels to search alarm-in events in.
- **Motion:** Select which channels to search motion detection events in.
- **Tripzone:** Select which channels to search Tripzone detection events in.
- **Video Loss:** Select which channels to search video loss events in.
- **Video Blind:** Select which channels to search video blind events in.
- **Text-In:** Select which channels to search text-in events in.
- **Record Channel:** Select which record channels to search events in.

Selected record channels are searched for events with at least one linked recording. If no camera is selected, only the events with no linked recording camera are searched.

- Use event filters to include/exclude specific system events such as **Panic Record**, **Check Recording**, **Check Alarm-In**, **Disk Almost Full**, **Disk Bad**, **Disk Temperature**, **Disk S.M.A.R.T.**, **Disk Config Change**, and **Fan Error** from the search.



## Record Table Search

Select **Record Table Search** from the Search menu to bring up the Record Table Search Setup window.



### ① Record Table

Display the current channel's recording information.

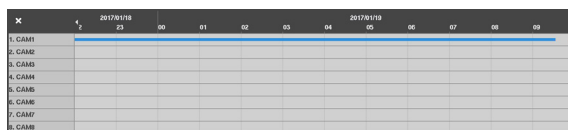

Recording date and time are shown on the top of the search window. The indicator line on Record Table indicates the current playback position. Use the arrow buttons on the remote control to move the current playback position in units of individual sectors. Alternatively, use the mouse to jump to the desired playback position.

- ✓ Farther back the data is on the record table, the more recent it is.
- If the system's clock is changed to a previous date and time, it is possible for multiple recordings with the identical time stamp to exist. Overlapped segments are highlighted in yellow.

Selecting ▲ or ▼ on the left-bottom of the search window changes the size of search window and displays Expanded view(the recording information of each camera channel), Standard view(combined recording information of all camera channels), and Compact view(only the toolbar).

### ✓ Recording Data Bar Colors

Blue	<span style="display:inline-block; width:15px; height:10px; background-color:blue;"></span>	Time Lapse Recording
Purple	<span style="display:inline-block; width:15px; height:10px; background-color:purple;"></span>	Event Recording
Yellow	<span style="display:inline-block; width:15px; height:10px; background-color:yellow;"></span>	Pre-Event Recording
Red	<span style="display:inline-block; width:15px; height:10px; background-color:red;"></span>	Panic Recording

### ② Zoom

Select ⊕ (zoom-in) to compose recording data in 1-minute segments and select ⊖ (zoom-out) to compose recording data in 3-minute segments. Selecting zoom-out displays more time in one screen than zoom-in screen.

If recording from points in time prior or after the time frame displayed on the screen is available, scrolls appear on both ends of the date and time information line. Scroll using the arrow buttons on the remote control or by dragging with the mouse to check recording data.


### ③ Calendar Search

Use the calendar to search for video recordings by specific dates.

Dates containing video recordings are highlighted in black. Selecting a date containing video recording data loads the earliest recording from that date (paused state). Selected date is highlighted in light blue.

### ④ Search Menu

- **Go to:** Search video recordings based on date and time. Specify the date and time and then select Go to jump to the corresponding video recording.

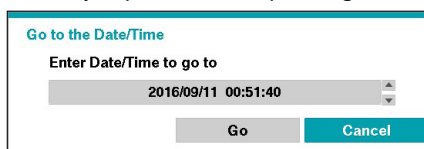

- **Clip-Copy:** Clip a video segment and saves it.
- **Print:** Print the current playback image.
- **Zoom:** Zoom the current playback image.
- **Slow Play:** Search the playback screen at low speeds. Select the desired playback speed (x1/2, x1/3, x1/4, x1/6, x1/8) and then select Play.

⑤ **Bookmark**

Add the current playback point to the bookmark list.

The maximum number of bookmarks that can be saved is 64.


⑥ **Playback Controls**

Play and scan through video recordings. Playback controls have the same functions as their remote control counterparts.

◀	Skips to the previous screen (while in paused state).
▶/	Plays the video in normal speed and displays ▶ on the screen. Pressing the button during playback pauses the video and displays    on the screen.
▶	Skips to the next screen (while in paused state).
◀◀	Scans backward through the video at a fast rate: X16, X32, X64, X128, X256. (Press to cycle through ◀◀, ◀◀◀, and ◀◀◀◀ the speed)
▶▶	Scans forward through the video at a fast rate: X16, X32, X64, X128, X256. (Press to cycle through ▶▶, ▶▶▶, and ▶▶▶▶ the speed)


## Motion Search

Select **Motion Search** from the Search menu to bring up the Motion Search Setup window.

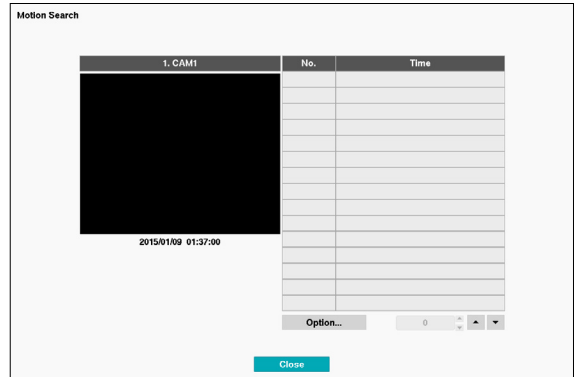

Motion Search cannot be performed while using a split screen layout. Select Single Screen mode.

Select **Option...** to configure Motion Search options.

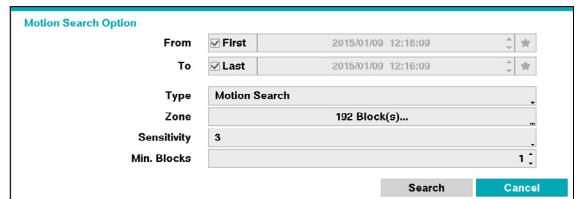

- Select **First** under **From** and **Last** under **To** to search the recording from start to finish. Alternatively, you can uncheck the **First** and **Last** options and specify the search time frame manually.
- **Type: Motion Search** looks for motion in the selected area by comparing individual frames against their preceding frames. This means slow and gradual movements, no matter how long they persist, will not be recognized. In contrast, **Museum Search** looks for changes in the specified area by using the **From** frame as a reference. Museum Search, therefore, recognizes even minute deviations from the original **From** frame.



- The **Zone** setting can be configured in the identical manner as the Zone setting under System Setup - Motion Detection. For more information, refer to the **Motion on page 35**.


**Museum Search** may not function properly if the edge of the object is included in the **Zone**. For more accurate search results, set the inside of the object's edge as the detection zone.

- **Sensitivity:** Set to between 1 (Low) and 5 (High).
- **Min. Blocks:** The **Min. Blocks** option is available with Motion Search only.

Once all the options have been configured, select **Search**. Select search results entry to display the video recording on the left. To play the recording, exit the setup window by selecting **Close**.

## Text-In Search

Select **Text-In Search** from the Search menu to bring up the Text-In Search window.

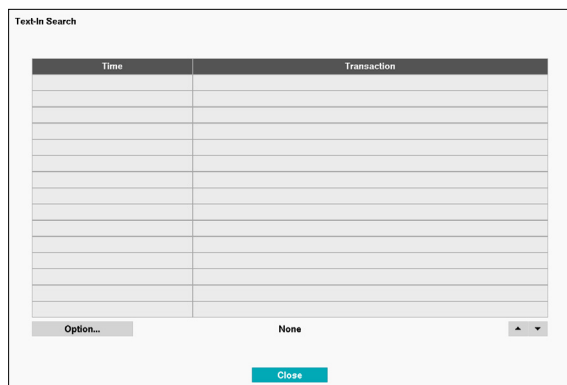

Select a **Transaction** to display the video recording that corresponds to the selected time and date (paused state).

Text-in information is superimposed on the screen at normal playback speed. The information is not shown under any other playback speed.

Select **Option...** to configure Text-In Search options.



- Select **First** under **From** and **Last** under **To** to search the recording from start to finish. Alternatively, you can uncheck the **First** and **Last** options and specify the search time frame manually.


Selecting  button, the bookmark list displays and the bookmark point you selected will be the starting date and time.

- **Channels:** Select a channel.
- Select **Any Text-In Product** to select a device type.
- **+**: Add a search variable.
- **Option...:** Select whether or not the search will find only text strings in which the case matches, find only exact words that match with the word you entered during text-in setup, or delete transactions duplicated within text input strings.
- **Load:** Retrieve stored search option settings.
- **Save:** Save the current search option settings.

Once all the options have been configured, select **Search** to begin the search and return to the **Text-In Search** setup window.

## Thumbnail Search

Select **Thumbnail Search** from the Search menu to bring up the Thumbnail Search window.

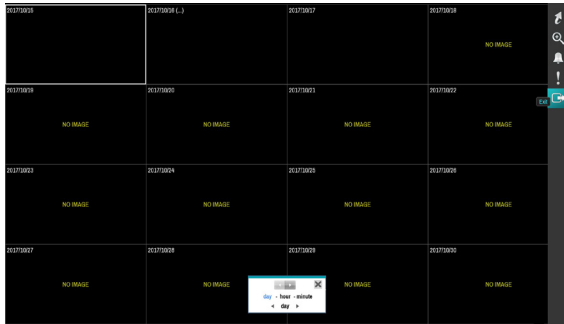


- Select the (Go to) button to search an image of a certain date from the channel which had an interlocked recording.
- Select / at the bottom or the button to change the precision of the images by day/hour/minute.
- Select from the day arrows at the bottom or the button to search backward or forward through the day/hour/minute images.

When there is no matching images on the selected date, the message **NO IMAGE** is displayed. Double-click on the image to change the date unit.

## Bookmarks

Select **Bookmarks** from the Search menu to bring up the Bookmarks Setup window.

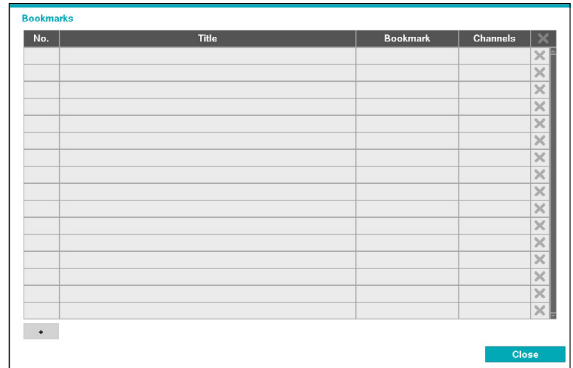

Select the + icon to add a bookmark to the current playback position. Use the virtual keyboard to enter the bookmark name and use the arrow buttons to highlight the bookmark point for which you would like to see video. The icon can be used to delete a Bookmark.


- The maximum number of bookmarks that can be saved is 64.


## Clip Copy

### Clip Copy

Select **Export – Clip Copy** from the Search menu or press the remote control's **BACK UP** button for more 3 seconds while in Live or Playback mode to open up the **Clip Copy** setup window. Specify the **From** and **To** settings.

### A-B Clip Copy

Designate a start point and an end point and copy the data in between. Select **Clip-Copy – A-B Clip Copy** from the Search menu to set point A. The  icon will appear on the status indicator area on the upper right corner of the screen. Select **Clip-Copy – A-B Clip Copy** once again to set point B. The Clip Copy Setup window will appear. Select A and B points are automatically applied as **From** and **To** values.

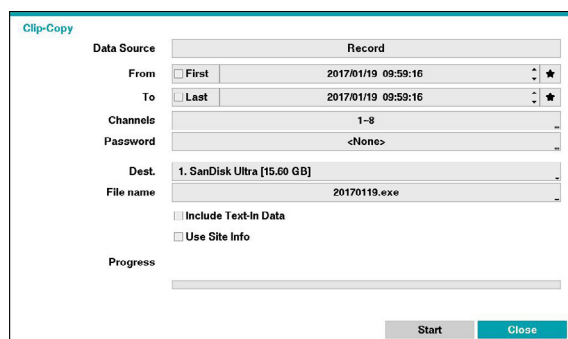

- **Channels:** Specify which channel to save the recording to.

- **Password:** Enable password protection for the saved video clip and assign a password.
- **Dest.:** Select which storage media to use. If NetFS feature is in use, you can upload video clip to the registered FTP site.



- In case of clip-copy to the NetFS site, the capacity of NetFS site and Disk cannot be found.

- The DVR displays the volume as 30GB regardless of the actual disk volume and the maximum size limit on Clip Copy files is 30GB.

- If the video clip is uploaded after being clip-copying, video clips will be deleted.

- If there are same files, the video clips cannot be copied.

- **File name:** Designate a name for the file. The name may be up to 63 characters in length.



- Special characters such as \, /, ;, ;, \*, ?, !, ", <, >, and | are not permitted.

- **Include Text-In Data:** Enabling this option will save the video clip along with any available text-in data.

- **Use Site Info:** Add **Site** info to the Clip Copy file's name.



- Special characters contained in the location info (such as \, /, ;, ;, \*, ?, !, ", <, >, and |) will be replaced with \_ when the information is added to the file name.

Selecting **Start** displays a calculation on the size of the data to be copied. Check the calculation and then select **Continue** to proceed. While Clip Copy is in progress, you can select **Cancel** to cancel the process or select **Close** to allow the window to run in the background. Selecting **Close** does not cancel Clip Copy. Once the process is complete, you will be prompted with a confirmation window.



- Press the remote control's **BACK UP** button for more 3 seconds while in Live or Playback mode to open up the **Clip Copy** setup window with One-Touch mode.
- **One-Touch Clip Copy** configures the storage range automatically based on the storage drive's capacity. If there is insufficient space available on the selected storage device, you will only be able to Clip Copy an amount of data equaling the remaining space available on the storage device.
- Clip Copying a segment that is more than 2GB in size produces multiple files that are up to 2GB in size, each.
- Clip Copy files can be played back on Windows systems. For more information, refer to the IDIS Center operation manual.
- For USB flash memory devices, the DVR supports the FAT32 file format only.




Do not disconnect the USB cable or power off the USB device while USB Clip Copy is in progress. Doing so can cause the DVR to malfunction or critically damage the external USB device's file system. You may be prompted with an error message when trying to back up on the device. If so, you will need to restart the DVR. If the USB hard disk's file system has been damaged, restarting the DVR will not solve the problem and the aforementioned error message will continue to be displayed each time you attempt a backup. If this is the case, you will need to format the HDD or use a recovery program to repair the damage to the drive's file system.

## Print

Print the current image.

While in **Search Mode**, select **Pause** to pause playback. Select **Print** from the **Export** to open up the Print Setup window.

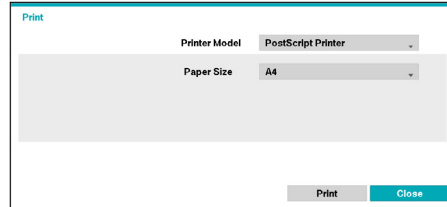

- **Printer Model**

- **File Printer:** Save the current frame to the USB storage device or the NetFS site as a .pdf file that can be printed on the printer connected to a computer.
- **PostScript Printer:** Print images on a PostScript™ printer connected to the DVR.




Images saved as PDF files can be printed on any printer connected to your PC.

- **Paper Size:** Select the desired paper size.
- **File name:** Designate a name for the file if it is a file printer.

## Overlapped Recording Search

If the system's clock is changed to a point in the past, overlapping recordings may be produced. Overlapped recordings have to be searched in segments.

For example, making a recording from 1 o'clock to 5 o'clock, changing the system's clock at 5 o'clock to 3 o'clock, and then continuing to record until 6 o'clock produces two recordings that overlap between 3 o'clock and 5 o'clock. This results in two segments for the period between 3 and 5.

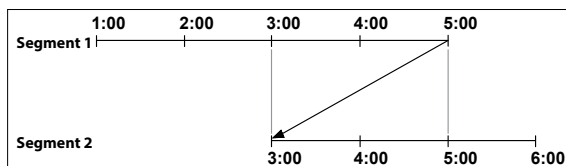

When searching overlapped video recordings, you can choose a specific point in time or a time frame. If you use the **Go to the Date/Time** option and select a point within the overlapped time period (**4 o'clock**, for example), you must specify **4 o'clock** in which of the two existing segments.

Select a Segment

- 1: Segment 20
- 2: Segment 21

If you use the **Event Log Search** or **Motion Detection** option and select a time frame within the overlapped time period (**4 o'clock to 5 o'clock**, for example), you must choose between the two redundant sets of From and To values. Selectable search ranges are as follows:

- 4 o'clock in segment 1 to 5 o'clock in segment 1
- 4 o'clock in segment 1 to 5 o'clock in segment 2
- 4 o'clock in segment 2 to 5 o'clock in segment 2

Select a Range

- 1: Scope 1 ~ 3
- 2: Scope 1 ~ 2
- 3: Scope 2 ~ 2

## Part 4 - IDIS Web

---

IDIS Web is a program that allows you to view and search video from remote locations over the Internet and can be accessed on a regular web browser such as Internet Explorer.

System requirements for running IDIS Web are as follows:

- OS: Microsoft® Windows® XP (Service Pack 3), Microsoft® Windows® Vista (Service Pack 1), Microsoft® Windows® 7 (Home Premium, Professional, Ultimate) or Microsoft® Windows® 8 (Pro, Enterprise)
- CPU: Intel Pentium IV 2.4GHz or above (Core 2 Duo E4600 recommended)
- RAM: 1GB or more
- VGA: 128MB or more (1280x1024, 24bpp or above)
- Internet Explorer: Ver. 7.0 or above (32-Bit)



- IDIS Web only works with Microsoft Internet Explorer and will NOT work with other browsers.
- IDIS Web does not work in Microsoft® Windows® 8 metro UI.

- 1 Launch Internet Explorer and then enter the following information in the address bar.
  - <http://IP Address:Port Number> (DVR system's IP address and IDIS Web port number configured under Network > General (Default Value: 12088))
  - <http://fen.idisglobal.com/FEN Name> (FEN Name: DVR name configured on the FEN server)
  - <http://web.idisglobal.com> (will be prompted to enter DVR's IP address or FEN name registered to the FEN server upon login)



- Contact your network administrator for the IP address of the DVR you wish to connect to and the IDIS Web port number.

- 2 When prompted with the IDIS Web login window, select **LIVE-PORT** or **PLAY-PORT** as the desired mode. Enter the ID and password and click **LOGIN** to sign in using the selected mode.


If connecting by entering <http://web.idisglobal.com>, enter the DVR's IP address in the Device Address field. Selecting the Use FEN Service option on the login window allows you to enter the DVR name registered to the FEN server instead of its IP address. You will be prompted to enter the FEN server's address and port number under Setup.



- Do not close the login window while IDIS Web is running. Switching over to Web Live or Web Search mode can cause a script error, requiring you to restart the IDIS Web program.
- If running IDIS Web, the bottom section of the screen may get cut off if the address bar or the status bar is shown. In this case, change Internet Options so that the address bar or the status bar is hidden. (**Tools** → **Internet Options** → **Security** → **Custom level...** → **Allow websites to open windows without address or status bars (Enable)**)
- To use IDIS Web on Microsoft Windows Vista or above, launch Internet Explorer by right-clicking on the icon and selecting the **Run as administrator** option. Otherwise, certain IDIS Web functions might not be available.
- Launching a new version of IDIS Web for the first time can cause Internet Explorer to load information from the previous version. In this case, navigate to **Tools** → **Internet Options** → **General**, delete temporary Internet files, and then restart IDIS Web.
- On Microsoft Windows Vista or above, lowered image transmission rate can prevent the screen from being displayed or updated. In this case, we recommend that you disable the computer's auto tuning function. Open the command prompt as an administrator. (**Start** → **Accessories** → **Command Prompt** → **Right-Click** and then select **Run as administrator**) Type in "**netsh int tcp set global autotuninglevel=disable**" and then press Enter. Restart the computer to apply the change. To enable auto tuning again, launch the command prompt as an administrator and then type in "**netsh int tcp set global autotuninglevel=normal**". Restart the computer to apply the change.




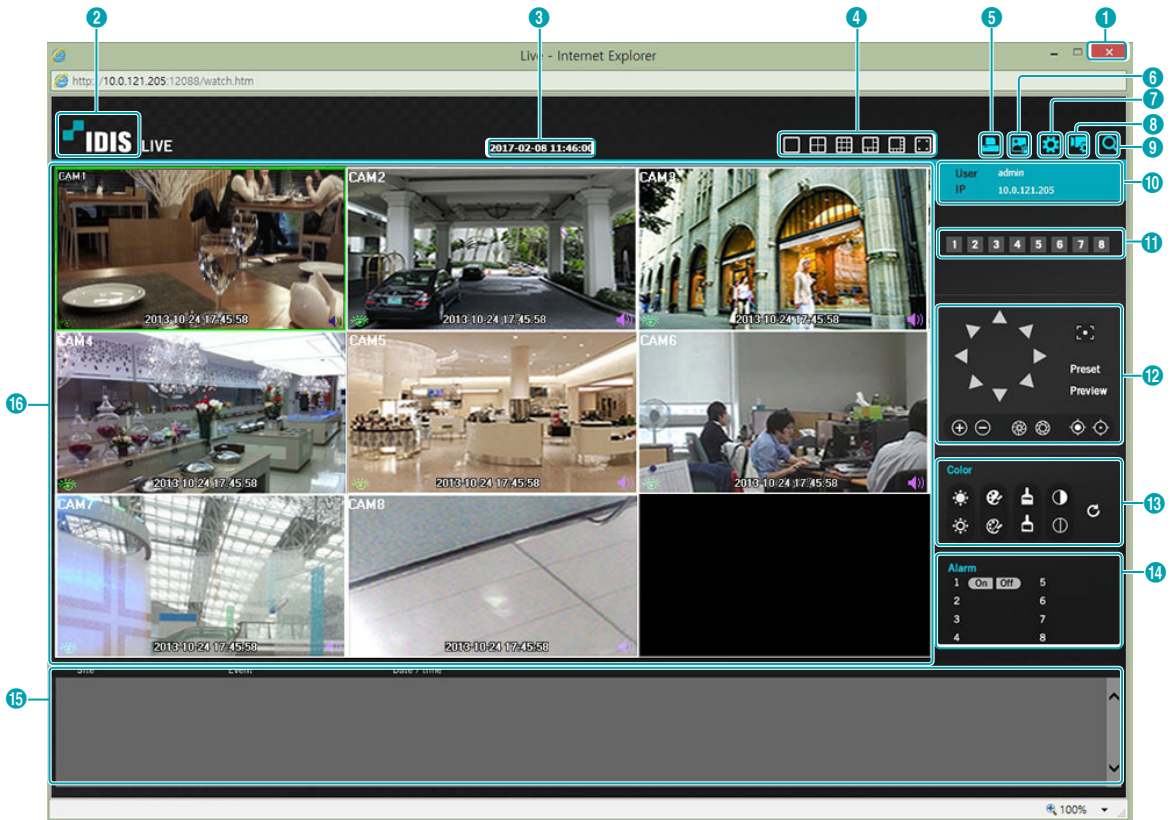










## Web Live Mode

A remote web monitoring program that allows you to monitor images from remote locales in real-time.



1	Press  to terminate WebGuard.
2	Place the mouse pointer on the  to check WebGuard's version.
3	Displays the current time.
4	Select the desired mode. Changing the mode places the selected camera in the first cell of the layout that will be changed.
5	Click  to print the current video screen using a printer connected to the computer.
6	Click  to save the current video screen as an image file.
7	Click  to configure rendering mode and OSD settings. Select rendering mode to adjust the video output rate or select which OSD elements to display on the screen from the OSD list.
8	Click  to switch over to setup menu.
9	Click  to switch over to Web Search mode.
10	Shows login information.




11	Select the camera you wish to monitor. Use the arrow buttons to navigate to the previous/next camera group.								
12	Used to control a PTZ camera at a remote location.								
13	Used to adjust live video quality.								
14	Controls remote alarm out devices.								
15	Event status window at the bottom of the screen displays a list of events detected at remote locales.								
16	<p>Select a camera from the screen and right-click to bring up the pop-up menu.</p> <ul style="list-style-type: none"> <li> <b>Change Camera Title:</b> Used to change the camera's name.           <div data-bbox="1030 484 1245 633" style="float: right; border: 1px solid #ccc; padding: 5px; margin-top: 10px;">             Change Camera Title              Enable Audio              Aspect Ratio ▶              MultiStream ▶              Anti-Aliasing Screen           </div> <div data-bbox="234 556 989 633" style="margin-top: 10px;"> <input checked="" type="checkbox"/> Renaming the camera in Web Live mode does not affect the camera's name on the remote system. If no name is entered for the camera, the name used at the remote locale is shown on the screen.           </div> </li> <li> <b>Enable Audio:</b> Enables audio transmission with remote locales. Select to display  buttons.           <table border="1" data-bbox="234 705 1273 865" style="margin-top: 10px; width: 100%;"> <tr> <td style="text-align: center;"></td> <td>Enables transmission of audio to the remote locale via microphone.</td> </tr> <tr> <td style="text-align: center;"></td> <td>Enables playback of audio from the remote locale on speakers.</td> </tr> <tr> <td style="text-align: center;"></td> <td>Enables two-way audio communication with the remote locale.</td> </tr> <tr> <td style="text-align: center;"></td> <td>Disables audio transmission.</td> </tr> </table> </li> </ul> <div data-bbox="234 898 1263 956" style="margin-top: 10px;"> <input checked="" type="checkbox"/> If the remote locale connected to supports audio transmission,  icon appears on the corresponding camera screen.     </div> <ul style="list-style-type: none"> <li> <b>Aspect Ratio:</b> Changes the aspect ratio of the video displayed on the screen.           <ul style="list-style-type: none"> <li><b>Fit to Screen:</b> Fit the video to the size of the camera screen.</li> <li><b>Fit to Aspect Ratio:</b> Resizes camera screen to original aspect ratio of the video.</li> <li><b>Half Size (x0.5) - 4 Times Bigger (x4):</b> Displays the camera videos in the selected size based on the original size of the video. For example, original size (x1) displays the video in its original size. Half size (x0.5) through 4 times larger (x4) options are only available if there is enough space on the camera screen to accommodate the selected size.</li> </ul> </li> <li> <b>Multi Stream:</b> Select a stream.         </li> <li> <b>Anti-Aliasing Screen:</b> Removes stair step effect (blocks) that is caused when zooming a video to improve overall quality of video output.         </li> </ul>		Enables transmission of audio to the remote locale via microphone.		Enables playback of audio from the remote locale on speakers.		Enables two-way audio communication with the remote locale.		Disables audio transmission.
	Enables transmission of audio to the remote locale via microphone.								
	Enables playback of audio from the remote locale on speakers.								
	Enables two-way audio communication with the remote locale.								
	Disables audio transmission.								

## Web Search Mode







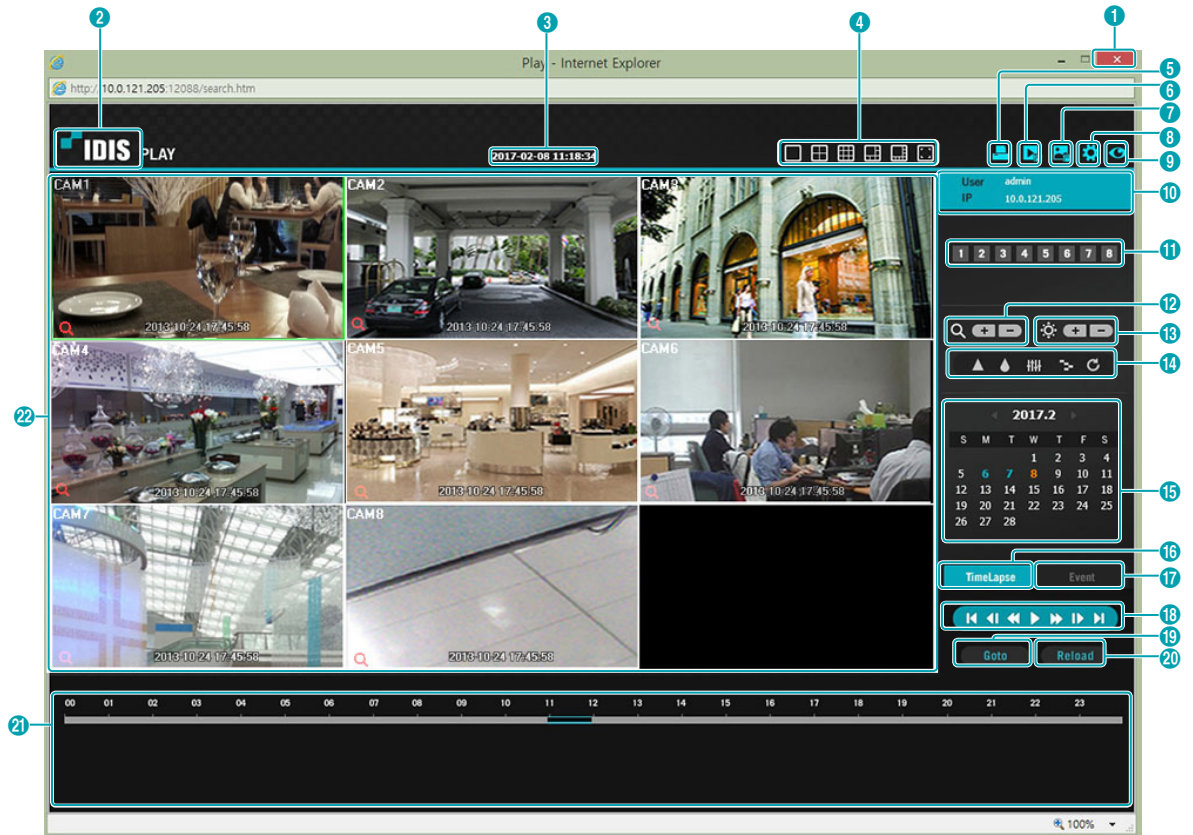



















A remote web search program that allows you to search for recordings from remote locales in real-time.



While in Web Search mode, connection to remote locales will terminate automatically after 30 minutes of inactivity.



1	Press  to terminate IDIS Web.
2	Place the mouse pointer on the  IDIS logo to check IDIS Web's version.
3	Displays time information of the video recording from the remote DVR.
4	Select the desired mode.
5	Click  to print the current video screen using a printer connected to the computer.
6	Click  to save the video recording as an executable file.
7	Click  to save the current video screen as an image file.
8	Click  to configure rendering mode and OSD settings. Select rendering mode to adjust the video output rate or select which OSD elements to display on the screen from the OSD list.

9	Click  to switch over to Web Live mode.																
10	Shows login information.																
11	Select the camera you wish to search. Use the arrow buttons to navigate to the previous/next camera group.																
12	Zoom in or out on the video.																
13	Adjust image brightness.																
14	Apply image filters (Sharpen, Blur, Equalizer, Interpolation, and Revert) to the images. <input checked="" type="checkbox"/> Image calibration is applied only during the paused state.																
15	Use the calendar to search for video recordings by specific dates. Dates containing video recordings are highlighted in light blue. Selecting a date containing video recording data loads the earliest recording from that date(paused state). Selected date is highlighted in orange.																
16	Select  to enable time lapse search mode and search/play back video recordings in chronological order. In Time Lapse Search mode, search is conducted by selecting days on the calendar. The time table at the bottom displays recording data information for the selected date. Select a point in time to display video from that moment. If multiple recordings are available for the selected point in time, you can select the desired segment.																
17	Select  to enable event search mode and search for events matching user-designated parameters.																
18	Use the playback controls to play back video. <table border="1" data-bbox="209 1083 1164 1248"> <tr> <td></td> <td>Go to First</td> <td></td> <td>Play by Frame (forwards)</td> </tr> <tr> <td></td> <td>Rewind</td> <td></td> <td>Fast Forward</td> </tr> <tr> <td></td> <td>Play by Frame (backwards)</td> <td></td> <td>Go to Last</td> </tr> <tr> <td></td> <td>Play/Pause</td> <td></td> <td></td> </tr> </table>		Go to First		Play by Frame (forwards)		Rewind		Fast Forward		Play by Frame (backwards)		Go to Last		Play/Pause		
	Go to First		Play by Frame (forwards)														
	Rewind		Fast Forward														
	Play by Frame (backwards)		Go to Last														
	Play/Pause																
19	Click  to designate recent recordings you wish to search and then jump to a specific point in the recording.																
20	Click  to reload recent video recordings from remote locales.																
21	Indicates the selected camera's recording data on a time bar. If the camera's system clock has been changed to a point in the past and more than one recording exists at the same point in time as a result, you will be able to choose which segment to search from the segment menu on the upper right portion of the time table.																

22

Select a camera from the screen and right-click to bring up the pop-up menu.

- **Change Camera Title:** Used to change the camera's name.



Renaming the camera in Web Search mode does not affect the camera's name on the remote system. If no name is entered for the camera, the name used at the remote locale is shown on the screen.

Change Camera Title
Enable Audio
Aspect Ratio ▶
Anti-Aliasing Screen

- **Enable Audio:** If audio was recorded with the video, enabling this option plays audio upon playback (limited to single-screen playback).
- **Aspect Ratio:** Changes the aspect ratio of the video displayed on the screen.
- **Anti-Aliasing Screen:** Removes stair step effect (blocks) that is caused when zooming a video to improve overall quality of video output.

# Part 5 - Appendix

---

## Index

<b>A</b>		<b>R</b>	
Alarm-In	38	Recording	18
Alarm-Out	42	<b>S</b>	
Audio Recording	19	Search	56
<b>E</b>		Storage	30
Event Monitoring	16	<b>T</b>	
<b>L</b>		Text-In	39
LAN	45	Text-In Search	61
<b>M</b>		<b>V</b>	
Motion Search	58, 59	Video-Analytics	35, 37
Mouse	21		
<b>O</b>			
OSD	54		
<b>P</b>			
Panic Recording	18		
Pre-Event	35		
Print	64		



**IDIS Co., Ltd.**

For more information, please visit at  
[www.idisglobal.com](http://www.idisglobal.com)