



Hybrid Network Video Recorder

Installation Manual

DR-6232H



Powered by ***Direct IP™***

Before reading this manual

This manual contains basic instructions on installing and using Hybrid Network Video Recorder, an IDIS product. Users who are using this product for the first time, as well as users with experience using comparable products, must read this manual carefully before use and heed to the warnings and precautions contained herein while using the product. Safety warnings and precautions contained in this manual are intended to promote proper use of the product and thereby prevent accidents and property damage and must be followed at all times. Once you have read this manual, keep it at an easily accessible location for future reference.

- ✓ • The manufacturer will not be held responsible for any product damage resulting from the use of unauthorized parts and accessories or from the user's failure to comply with the instructions contained in this manual.
- It is recommended that first-time users of Hybrid Network Video Recorder and individuals who are not familiar with its use seek technical assistance from their retailer regarding product installation and use.
- If you need to disassemble the product for functionality expansion or repair purposes, you must contact your retailer and seek professional assistance.
- Both retailers and users should be aware that this product has been certified as being electromagnetically compatible for commercial use. If you have sold or purchased this product unintentionally, please replace with a consumer version.

Safety Precautions


	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Symbol	Publication	Description
	IEC60417, No.5032	Alternating current

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Ventilation

Place this equipment only in an upright position. This equipment has an open-frame Switching Mode Power Supply (SMPS), which can cause a fire or electric shock if anything is inserted through the ventilation holes on the side of the equipment.

7. Accessories

Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

8. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company. You may want to install a UPS (Uninterruptible Power Supply) system for safe operation in order to prevent damage caused by an unexpected power stoppage. Any questions concerning UPS, consult your UPS retailer.

This equipment should be remain readily operable.

9. Power Cords

Operator or installer must remove power and TNT connections before handling the equipment.

10. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

11. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

12. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

13. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

14. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or the plug has been damaged.
- B. If liquid is spilled, or objects have fallen into the equipment.
- C. If the equipment has been exposed to rain or water.
- D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- E. If the equipment has been dropped, or the cabinet damaged.
- F. When the equipment exhibits a distinct change in performance this indicates a need for service.

15. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

16. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

17. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

18. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. This equipment should be remain readily operable. Dispose of used batteries according to the instructions. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

19. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

20. Elevated Operating Ambient Temperature

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).

21. Reduced Air Flow

Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

22. Mechanical Loading

Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.



23. Circuit Overloading

Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

24. Reliable Earthing (Grounding)

Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

In-Text

Symbol	Type	Description
	Caution	Important information concerning a specific function.
	Note	Useful information concerning a specific function.

User's Caution Statement

Caution: Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

FCC Compliance Statement

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

WARNING: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product

(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Copyright

© 2017 IDIS Co., Ltd.

IDIS Co., Ltd. reserves all rights concerning this manual.

Use or duplication of this manual in part or whole without the prior consent of IDIS Co., Ltd. is strictly prohibited.

Contents of this manual are subject to change without prior notice.

Registered Trademarks

IDIS is a registered trademark of IDIS Co., Ltd.

Other company and product names are registered trademarks of their respective owners.

The information in this manual is believed to be accurate as of the date of publication even though explanations of some functions may not be included. We are not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

The software included in this product contains some Open Sources. You may obtain the complete corresponding source code from us. See the Open Source Guide on the software CD (OpenSourceGuide\OpenSourceGuide.pdf) or as a printed document included along with the Manual.

Table of Contents

1

Part 1 – Introduction..... 7

- Product Features7
- Accessories.....8
- Overview9
 - Front Panel.....9
 - Rear Panel13
 - Rear Panel Connections14
 - Remote Control19

2

Part 2 - Appendix.....22

- System Log Types22
- Error Code Types23
- Troubleshooting26
- Specifications27


Part 1 – Introduction

Product Features

This is a video recorder that supports surveillance, recording, and playback of video from network IP and analog cameras.











This NVR (Hybrid Network Video Recorder) unit offers the following features:

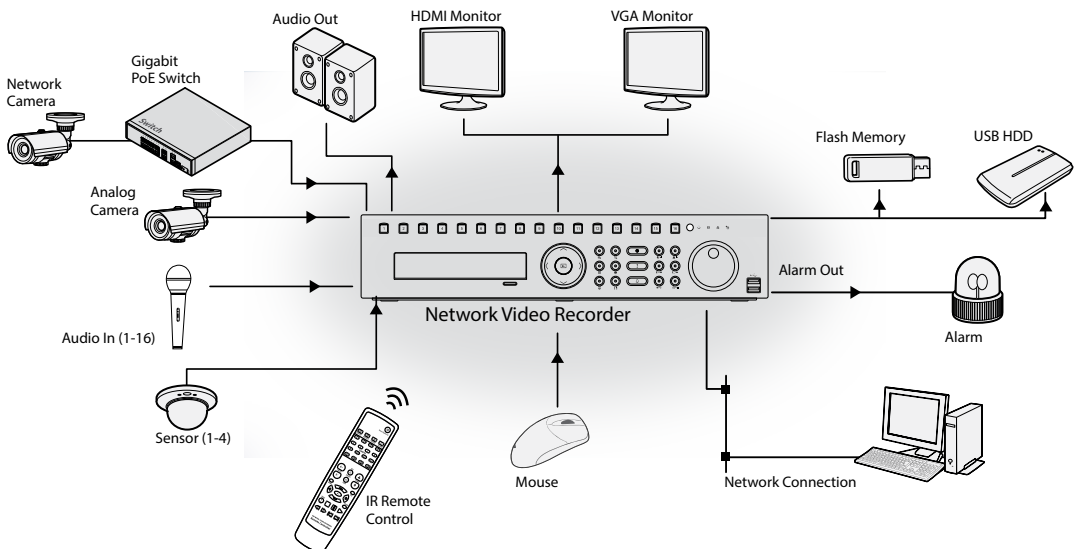- Real-time recording of analog and/or network IP cameras, up to 32 cameras total. User determines exact combination with a maximum of 16 analog inputs.
- Network camera zero configuration
- Configuration-free network camera access
- Supports up to Full HD 960ips video recording
- HDMI out (1) and VGA out (1) ports
- Fast and easy search feature (Time-Lapse, Event log, Thumbnail, Motion, Text-In)
- Simultaneously survey, record, play back, and transmit data in real-time
- Graphic User Interface(GUI) and multilingual
- Multiple recording modes (Schedule, Event, Pre-Event, and Panic)
- 2 x USB 2.0 (for connecting peripherals, upgrading software, and saving recording data)
- 6 internal SATA2 HDD bays and 2 eSATA ports
- Two-way audio communication
- 32-channel camera audio recording and 1-channel audio playback
- 16 alarm in and 4 alarm out
- IR remote control-enabled
- Automated system event alerts (industry standard S.M.A.R.T. protocol for HDD status alerts)




Accessories

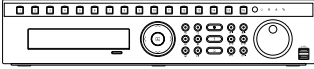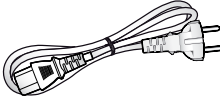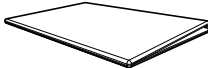Upon unpackaging the product, check the contents inside to ensure that all the following accessories are included.

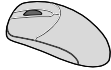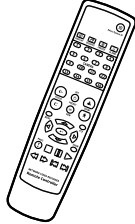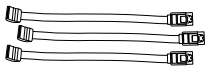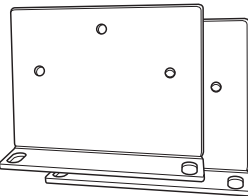			
<p>Network Video Recorder</p>	<p>Power Cable</p>	<p>Quick Guide</p>	<p>Multi Audio Cable</p>
			
<p>Manual and IDIS Center Program CD</p>	<p>Optical USB Mouse</p>	<p>IR Remote Control</p>	<p>SATA2 Cables</p>
			
<p>Rack-mount Kit</p>	<p>Assembly Screws for Adding Hard Disk Drives</p>		

Overview

Front Panel

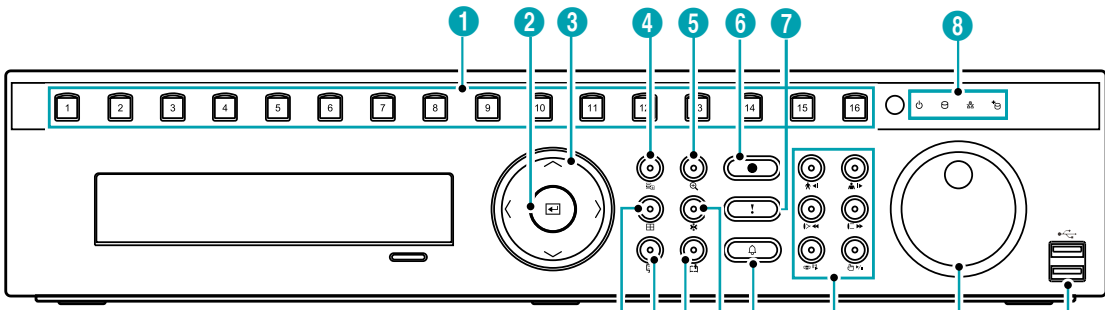

1	Camera Buttons	2	Enter Button	3	Arrow Buttons	4	Menu Button
5	Zoom Button	6	PTZ Button	7	Panic Recording Button	8	LEDs
9	Display Button	10	Status Button	11	Bookmark Button	12	Freeze Button
13	Alarm Button	14	Playback Buttons	15	Jog Dial, Shuttle Ring	16	USB Port



- Some buttons have more than one function.
- Remote control sensor is located on just right of arrow buttons. Ensure that the sensor remains unobstructed at all times. If obstructed, the sensor might not be able to receive remote control signals.
- Placing a Wi-Fi, Bluetooth, or any other wireless communication device near the NVR may interfere with remote control signal transmission.
- Access various windows and menus using a USB mouse as you would on a personal computer.
- For easier system configuration, a USB mouse is recommended.

① **Camera Button**

Pressing the **Camera** button while in Live or Playback mode displays images from the selected camera in full screen. Pressing the button 1 displays the camera number 1 and pressing the button 1 again displays the camera number 17. Buttons are also used to enter passwords.

② **Enter Button**

Pressing the **Enter** button selects options or to register data entries.

③ **Arrow Buttons**

These buttons are used to select menus and options.

Setup Menu	Up/Down/Left/Right Buttons: Moves the focus up, down, left, or right. Up/Down Buttons: Increases or decreases values.
-------------------	---

④ **Menu Button**

Pressing and holding the **MENU** button for 3 seconds while in Live mode displays the Live menu.

Pressing the **MENU** button while in Search mode displays the Search menu.

Press the button once more to close the menu.

Pressing and holding the **MENU** button for 3 seconds while in Playback mode activates One-Touch mode and displays the clip copy window.







⑤ **Zoom Button**

Used to zoom in on a specific part of the screen. Once zoomed in, use the arrow buttons to pan around.


⑥ **PTZ Button**

Pressing the **PTZ** button initiates PTZ mode, allowing you to control PTZ cameras.

In PTZ mode, use the arrow buttons to move the camera up, down, left, and right.

	Zoom-Out
	Zoom-In
	Focus Near
	Focus Far
	Preset View
	Preset SET

⑦ **Panic Recording Button**

Pressing the **PANIC** button displays the  icon and commences recording irrespective of the current schedule.

Press the button again to deactivate Panic Recording mode.

⑧ **LEDs**

- **Power LED:** Lights up while the main unit is in operation.
- **Network LED:** Flashes when the main unit is linked to an ethernet.
- **eSATA LED:** Lights up when the main unit is connected to an eSATA device.
- **HDD LED:** Flashes when data is being written on the HDD or a video search is in progress.

⑨ **Display Button**

Press the **DISPLAY** button to toggle screen formats.

⑩ **Status Button**

Press the **Status** button to display the status screen.

⑪ **Bookmark Button**

Add the current playback point to the bookmark list or move to the registered bookmark point.

⑫ **Freeze Button**



Used to pause Live screen.

⑬ **Alarm Button**

Pressing the **ALARM** button while the alarm has been activated resets all NVR outputs, including the built-in buzzer. Pressing the button while the alarm is off displays the event log on the screen.

14 Playback Buttons

These buttons are used to select menus and options.

Play/Pause (▶/) Buttons	Plays the video in normal speed and displays ▶ on the screen. Press again during playback to pause the video and display on the screen.
Playback Mode	<p>From paused state:</p> <p>◀ Button: To the previous screen ▶ Button: To the next screen ◀◀ Button: Scans backward through the video at a fast rate. (Press to cycle through ◀, ◀◀, and ◀◀◀ the speed) ▶▶ Button: Scans forward through the video at a fast rate. (Press to cycle through ▶, ▶▶, and ▶▶▶ the speed)</p> <p>Pressing the  button initiates Search mode, which will allow you to search for and play back video recordings. Pressing the  button while in Search mode returns the screen to Live mode.</p>

15 Jog Dial, Shuttle Ring

Jog Dial	<p>When in the playback mode, you can play video forward image-by-image by turning the Jog Dial clockwise and backward image-by-image by turning the Jog Dial counterclockwise. When in the PIP mode, you can make the PIP screen smaller by turning the Jog Dial clockwise and larger by turning the Jog Dial counterclockwise. When in the Setup mode, you can change number values by highlighting the item in the menu and turning Jog Dial clockwise or counterclockwise to increase or decrease the number.</p>
-----------------	---

Shuttle Ring

The Shuttle Ring only functions in the Playback mode. The Shuttle Ring is spring loaded and returns to the center position when released. Turning the ring clockwise plays video forward. Turning the ring counterclockwise plays video backward. Playback speed varies with the amount the ring is turned. The playback speeds are ◀, ◀◀, ◀◀◀, ▶, ▶▶, ▶▶▶, and ▶▶▶▶. When you release the ring, it snaps back to the center position and the video pauses.

16 USB Ports**• Storage Device Connection**

Connect an external USB hard drive or a USB flash memory device to one of the USB ports for use with the Clip Copy feature. The external storage device should be placed as close to the NVR as possible. It is recommended that you use a connection cable that is no longer than 180cm in length. Use the connection cable included with your external storage device to connect the device to one of NVR's USB ports. For more information Clip Copy, refer to the **Clip Copy in the operation manual**.


• Peripheral Device Connection

Use the USB ports to connect peripherals such as a USB mouse to the NVR. You can also use a USB-to-serial converter and connect multiple text-in devices to the NVR at the same time.




For USB flash memory devices, the NVR supports the FAT32 file format only.

Connections on the Front Panel

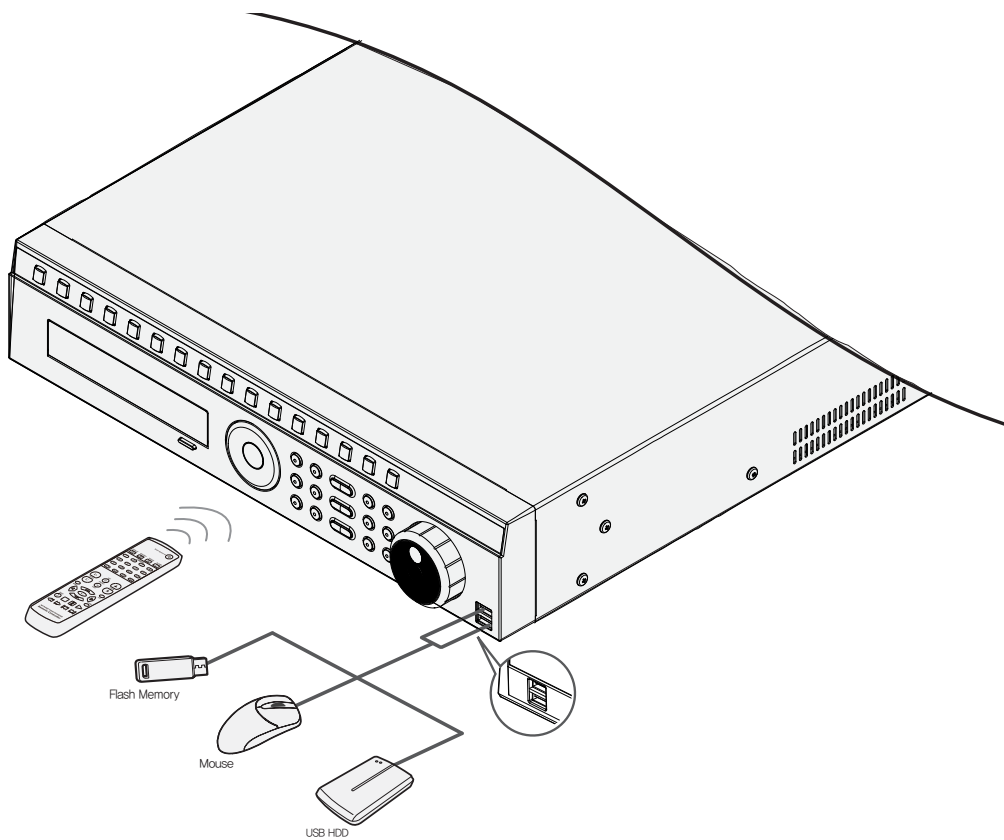

Rear Panel

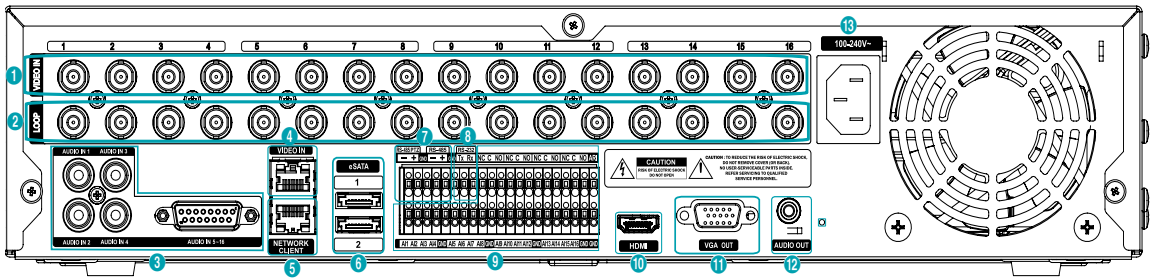

1	Video Input	2	Video Loop Through	3	Audio In
4	Video In Port	5	Network Port	6	eSATA Port
7	RS-485 Port	8	RS-232 Port	9	Alarm Connection Ports
10	HDMI Port	11	VGA Out Port	12	Audio Out
13	Power In Port				

Rear Panel Connections

Video Input

Connect the coaxial cables from the video sources to the BNC Video In connectors.




Video Loop Through

Connect the coaxial cables from the video sources to the BNC Video In connectors.



- The Loop BNC connectors are auto terminated. Do NOT connect a cable to the Loop BNC unless it is connected to a terminated device because it will cause poor quality video.


Audio Connection

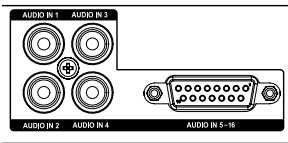

Connect the audio device to **AUDIO IN 1** to **AUDIO IN 16** as needed using RCA jacks. Connect **AUDIO OUT** to speakers with a built-in amplifier. Use the provided audio extension cable to connect the audio sources to **AUDIO IN 5** to **16**.

- This NVR does not feature a built-in audio amplifier unit and therefore requires the user to purchase a speaker system with a built-in amplifier separately. It's possible to connect an amplified audio source to the NVR, but microphones that do not have a built-in amplifier will not function properly if connected to the NVR directly. If this is the case, connect the microphone to the NVR via a pre-amp.
- Check your local laws and regulations on making audio recordings.

Video In Port



This port does not support PoE. It's possible to establish a network with network cameras and external hubs using a Cat6 cable.

- Green LED on the right will turn on if connected to a 1000 BASE-T network. Orange LED on the left will then flash once a link has been established.
- When using a Cat5e cable, the data transfer speed may decrease depending on how to establish a network.
- If more than 16 cameras from video encoders are registered on the NVR, video may not be displayed smoothly in a remote program.

Network Port




The NVR can be networked using the 10Mb/100Mb/1Gb Ethernet connector. Connect a Cat5e cable with an RJ-45 jack to the NVR connector. The NVR can be networked with a computer for remote monitoring, searching, configuration and software upgrades. For more information on ethernet connection setup, refer to the operation manual.

- Connector directions may vary depending on the NVR model.

eSATA Connection


Connect external hard drives to these ports.



 Do not connect or disconnect an eSATA device while the NVR is powered on. To connect an eSATA device, first turn off the NVR and unplug the power cable. Connect the eSATA device and then power the eSATA device first and then NVR back on. To disconnect an eSATA device, first turn off the NVR and unplug the power cable. Turn off the eSATA device and then disconnect the eSATA connection cable.

RS-485 Connection

This NVR supports the RS-485 half-duplex serial communication protocol for connecting to external devices such as POS units. The RS-485 connector can also be used to control PTZ (pan, tilt, zoom) cameras. Connect RX+/TX+ and RX-/TX- of the control system to the + and - (respectively) of the NVR.




• Connector Pin Outs

Master Unit	Slave Unit
RX → To → TXD	
TX → To → RXD	
GND → To → GND	


RS-232 Connection


Connect an external device such as a POS unit to this port.



• Connector Pin Outs

Master Unit	Slave Unit
RX → To → TXD	
TX → To → RXD	
GND → To → GND	


 Refer to the following for pin-out details for the 9-pin connector of the slave unit.

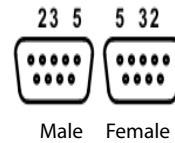


Pin 2	RXD (Receive Data)
Pin 3	TXD (Transmit Data)
Pin 5	GND (Ground)

Alarm Connection

Connect alarm connectors to these ports.

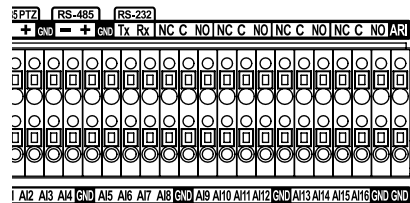


 Press down on the button and insert the cable into the opening. Release the button and then pull on the cable slightly to ensure it is held securely in place. To disconnect the cable, press down on the button again and pull the cable out.

• **Alarm In 1 through 16**

This NVR is capable of responding to event signals from external alarm in devices. Connect mechanical or electrical switches to AI 1 through 16 and the GND (ground) connector. In order to be recognized by the NVR, the signal from an alarm in device must be less than 0.3V and maintained for at least 0.5 seconds. The alarm in voltage range is 0V to 5V. For more information on alarm in setup, refer to the operation manual.

• **GND (Ground)**

Connect alarm in or out's ground cable to the GND connector.

 All connectors marked "GND" are common connectors.

• **NC/NO (Relay Alarm Outputs)**

This NVR is capable of activating/deactivating buzzers, lights, and other external devices. Connect a mechanical or electrical switch to C and NO connectors. NC/NO is a relay output which sinks 2A@125VAC and 1A@30VDC. For more information on alarm out setup, refer to the operation manual.

• **ARI (Alarm Reset In)**


An external signal to the Alarm Reset In can be used to reset both the Alarm Out signal and the DVR's internal buzzer. Mechanical or electrical switches can be wired to the ARI (Alarm Reset In) and GND (Ground) connectors. The threshold voltage is below 0.3V and should be stable at least 0.5 seconds to be detected. Connect the wires to the ARI and GND connectors.

• **Connector Arrangement**


ALARM IN 1 through 16	Alarm In 1 through 16
GND	Ground
NC	Relay Alarm Out (Normally Closed)
C	Relay Common
NO	Normally Open Relay Alarm Out
ARI	Alarm Reset In

Monitor Connection


Connect to the **VGA OUT** or **HDMI** port.



Power Cable Connection



Connect the power cable to this port. This NVR does not feature a separate power on/off button and will turn on the moment power is supplied.

-  • Organize the power cable so that it will not cause people to trip over or become damaged from chairs, cabinets, desks, and other objects in the vicinity. Do not run the power cable underneath a rug or carpet.
- The power cable is grounded. Do not modify the power plug even if your power outlet does not have a ground contact.
 - Do not connect multiple devices to a single power outlet.

Factory Reset



Located next to the Audio Out port on the rear of the NVR is a switch that, once activated, will reset the NVR to all its initial factory settings.




A factory reset will clear all NVR settings configured by the user.




You will need a straightened paper clip to access the factory reset button.

- 1 Turn off the NVR.
- 2 Insert a straightened paper clip into the factory reset switch hole and press the switch. Turn on the NVR while holding the switch.
- 3 Press and hold until you hear 2 beeps from the NVR's internal buzzer.
- 4 All NVR settings will be returned to their factory values once you remove the paper clip.

Connections on the Rear Panel

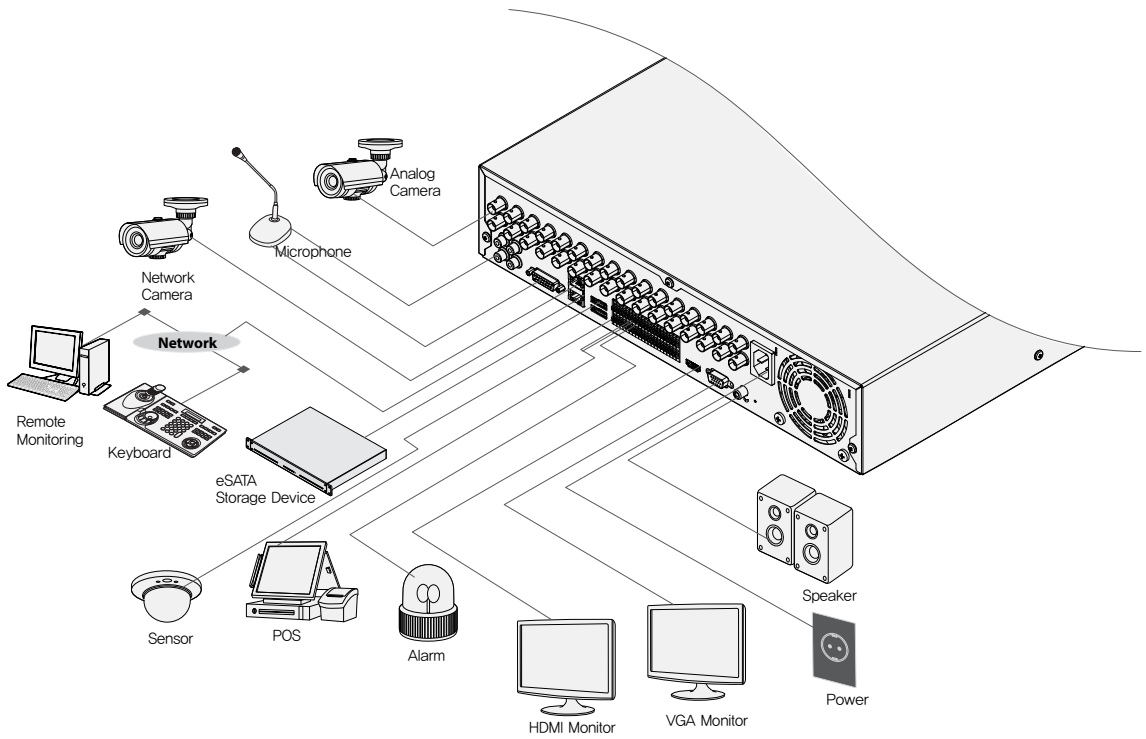


Remote Control

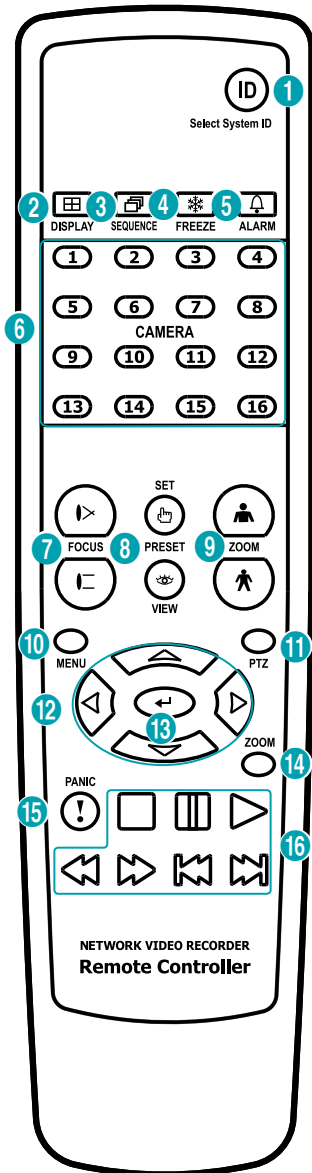

1	ID Button
2	DISPLAY Button
3	SEQUENCE Button
4	FREEZE Button
5	ALARM Button
6	Camera Buttons
7	FOCUS NEAR/FAR Button
8	PRESET SET/VIEW Button
9	ZOOM IN/OUT Button
10	MENU Button
11	PTZ Button
12	Arrow Buttons
13	Enter Button
14	ZOOM Button
15	PANIC Button
16	Playback Buttons

① **ID** Button

Used to assign remote control ID values.

No additional remote control assignment is necessary if the system's ID is 0. If the system's ID is a number between 1 and 9, however, you will need to press the ID button and then press the system ID number (1 through 99) on the remote control. The  (remote control) icon will appear on the upper right corner of the NVR screen (status indication area) to indicate successful system-to-remote control pairing. If using multiple systems, it's possible to control all the units with a single remote control as long as all the system IDs are 0. For more information on system IDs, refer to the operation manual.

② **DISPLAY** Button

2x2 > 1p5 > 1p7 > 3x3 > 4x4 > 5x5 > 6x6

③ **SEQUENCE** Button

Pressing the **SEQUENCE** button while in Live mode initiates Live Sequential mode (displays channels in sequence).

④ **FREEZE** Button

Used to pause Live screen.

⑤ **ALARM** Button

Pressing this button while the alarm has been activated resets all NVR outputs, including the built-in buzzer. Displays the event log on the screen when the alarm is off in Live mode.

⑥ **Camera** Buttons

Pressing the **Camera** button while in Live or Playback mode displays images from the selected camera in full screen. Pressing the button 1 displays the camera number 1 and pressing the button 1 again displays the camera number 17. Buttons are also used to enter passwords.

⑦ **FOCUS NEAR/FAR** Button

Used in PTZ mode to shift focus between a nearby point and a far away point.

⑧ **PRESET SET/VIEW** Button

Press the **SET** button while in PTZ mode to save the current position as a preset. Pressing the **VIEW** button displays the preset list.

⑨ **ZOOM IN/OUT** Button

Used in PTZ mode to zoom in/out on the screen.

⑩ **MENU** Button

Pressing the **MENU** button while in Live mode displays the Live menu. Alternatively, pressing the button while

in Time-lapse Search mode displays the Control Area menu. Using the menu button in the

control area, you can move the screen. **Top** by using this button in the **Control Area** menu displays the Search menu. For more information on the Control Area menu, refer to **Time-Lapse Search in the operation manual.**

Pressing and holding this button for 3 seconds activates One-Touch mode and displays the clip copy window while in Time-lapse Search mode. If the Search menu is displayed on the top of the screen, One-Touch mode is not activated.

⑪ **PTZ** Button

Initiates PTZ mode and allows you to control the selected PTZ camera.

⑫ **Arrow** Buttons

Used to navigate through menus and interact with GUIs. In a Setup menu, use the **Up/Down Arrow** buttons to increase or decrease numerical values. In Live or Playback mode, use the **Left/Right Arrow** buttons to view the previous or next screen.

⑬ **Enter** Button

Used to make menu option selections and register data entries. In addition, pressing this button while a camera screen is selected by pressing the Menu button in Live or Playback mode displays the Camera menu.

⑭ **ZOOM** Button

Used to zoom in on a specific part of the screen. Once zoomed in, use the arrow buttons to pan around.

⑮ **PANIC** Button

Pressing this button commences recording irrespective of the current schedule.

Press the button again to deactivate Panic Recording mode.

16 Playback Buttons

◀◀	Scans backward through the video at a fast rate. (Press to cycle through ◀, ◀◀, and ◀◀◀ the speed)
▶/	Plays the video in normal speed and displays ▶ on the screen. Pressing the ▶/ button during playback pauses the video and displays on the screen.
▶▶	Scans forward through the video at a fast rate. (Press to cycle through ▶▶, ▶▶▶, and ▶▶▶▶ the speed)
■	Stops the video and restores Live mode.
◀	Skips to the previous screen (while in paused state).
▶	Skips to the next screen (while in paused state).

Part 2 - Appendix

System Log Types

Boot Up	Panic On
System Shutdown	Panic Off
Restart	Clear All Data
Upgrade Success	Clear Disk
Upgrade Error	Format Disk
Power Failure	Disk Full
Time Changed	Auto Deletion
Time Zone Change	Search Begin
Time Sync.	Search End
Time Sync. Failed	Clip-Copy Begin
Disk Bad	Clip-Copy End
Login	Clip-Copy Cancel
Logout	Clip-Copy Failure
Setup Begin	Clip Copy User
Setup End	Clip-Copy Begin
Remote Setup Change	Clip-Copy Finished
Remote Setup Failure	Clip Copy Duration of Video
Setup Import	Clip Copy Camera
Setup Import Failure	Callback Failed
Setup Export	Factory Reset
Setup Export Failure	Camera Upgrade Begin
Setup Export Canceled	Camera Upgrade End
SNS Failure	Camera Upgrade Failure
Schedule On	Camera Upgrade User
Schedule Off	Camera Upgrade Camera






Error Code Types

Upgrade Error Codes			
No.	Type	No.	Type
0	Unknown Error	301	Remote Network Error
1	Incorrect File Version	302	No Remote Upgrade Permission
2	Incorrect OS Version	303	Remote Upgrade File Save Failure
3	Incorrect Software Version	304	Remote Upgrade Cancelled by User
4	Incorrect Kernel Version	400	USB Storage Device Mount Failure
100	Storage Device Mount Failure	401	USB Storage Device File Read Failure
101	File Not Found	402	USB Storage Device File Copy Failure
102	File Decompression Failure	403	USB Device Not Connected
103	LILO Execution Failure	404	USB Storage Device in Use
104	Reboot Failure	405	Unsupported File System
105	Improper File	500	Clip Copy in Progress: Upgrade Not Available
300	Remote Connection Failure		

Clip Copy Error Codes			
No.	Type	No.	Type
0	Unknown Error	12	Disk Error
1	Device Error	13	Clip Player Execution File Not Found
2	Device Connection Failure	14	Clip Player Execution File Access Failure
3	CD Media Not Found	15	Clip Player Execution File Save Failure
4	Incorrect Media	16	Image Generation Failure
5	File Name Taken	17	Burn Failure
6	Insufficient Space	18	Burn Time Overrun
7	Temporary File Generation Failure	19	Device Connection Failure
8	Disk Access Failure	20	Device in Use
9	Disk Format Failure	21	Unsupported File System
10	Database Changed	22	Data Validation Failure
11	Save Failure	23	No Saved Data within Range

Network Error Codes			
No.	Type	No.	Type
0	Cause of Failure Unknown	20	Connection Cancelled by User
1	Normal Logout	21	No Response from Network Device Host
2	All Channels in Use - Connection Denied	22	High Network Noise Level
3	Incorrect Product Version Info	23	Transmission Queue Full
4	Incorrect User Name or Password	24	Incorrect OEM Info
5	Forced Disconnection by Admin	25	No Search Permission
6	Timeout	26	Port in Use
7	Network Device Terminated	27	SSL Connection Failure
8	Unable to Connect: No Available Port	28	Network Timeout
9	Server Not in Operation: Unable to Connect	29	Network Device Host Timeout
11	Network Unavailable	30	RTP via TCP Not Supported by Network Device Host
12	Different Network Zone: Unable to Access	31	Socket Error
13	Connection Timeout	100	Unknown CODEC
14	Forced Disconnection by Network Device	101	.jpeg CODEC (not supported)
15	Network Device Host Terminated	103	.mpeg4 CODEC (not supported)
16	Unable to Route to Network Device Host	400	Unsupported Resolution
17	Connection Severed	-1	Normal Access

Troubleshooting

Problem	Solution
The main unit won't turn on.	<ul style="list-style-type: none"> • Check the power cable connection status. • Check the power outlet.
Unable to display Live video.	<ul style="list-style-type: none"> • Check the camera's video cable connection status. • Check the monitor's video cable connection status. • Check the camera's power setting. • Check the camera lens settings.
PoE-enabled camera will not turn on.	<ul style="list-style-type: none"> • Verify that the camera is actually PoE-enabled. • Check the network cable, replace it, and try again.
NVR stopped working in the middle of a recording.	<ul style="list-style-type: none"> • Hard disk may be full. Delete video recordings to free up space. • Set the NVR to Recycle mode. For more information, refer to the General in the operation manual.
 icon is shown, but video is not being recorded.	<p>If the Pre-Event is enabled, the  and  icons appears when recording is not in progress, or the  and  icons appear when an event occurs and recording is in progress. For more information, refer to the Schedule in the operation manual.</p>
The NVR keeps on rebooting during a system upgrade without completing the upgrade.	<p>Check the upgrade file's version. To downgrade to a previous version, you must first press the factory reset button and reset all NVR settings to their factory defaults. A factory reset will clear all NVR settings configured by the user. For more information on factory reset, refer to the Factory Reset on page 17.</p>

Specifications

These product specifications may change without prior notice.

General	
Exterior Dimensions (W x H x D)	430mm x 88mm x 414.8mm
Weight (Main Unit)	5.9kg (with 1HDD)
Working Temperature	0°C – 40°C
Operating Humidity	0% – 90%
Power	100V-240V~
Power Consumption	75W (with 6HDDs)
Certifications	FCC, UL, CE, CB, PSE

Video	
Video In	32 cameras (Up to 16 BNC, Up to 32 IP cameras)
Monitor Out	HDMI: 1 HDMI VGA: 1 DB15
Video Resolution	1920 x 1200, 1920 x 1080, 1680 x 1050, 1600 x 1200
Recording Speed (IPS)	960ips @ Full HD
Playback Speed (IPS)	120ips @ Full HD

I/O	
Alarm In	16TTL, NC/NO programmable, 2.4V (NC) or 0.3V (NO) threshold, 5V DC
Alarm Out	4 relay output, NC/NO, 2A@125V AC, 1A@30V DC
Alarm Reset In	1 TTL, terminal block
Internal Buzzer	78dB at 10cm
Network Connection	10Mbps/100Mbps/1Gbps Ethernet
Audio In	16 lines, RCA
Audio Out	1 line, RCA
Text In	POS Interface, ATM Interface

* If more than 16 cameras from video encoders are registered on the NVR, video may not be displayed smoothly in a remote program.

Connectors	
Video In	Ethernet: 1 port, Composite: 16 BNC
Video Loop	Composite: 16 BNC
Monitor Out	HDMI: 1 HDMI VGA: 1 DB15
Audio In	16 RCA connectors
Audio Out	1 RCA connector
Alarm	Terminal block
Ethernet Port	1 RJ-45
eSATA Ports	2 eSATA ports
RS-232 Serial Port	Terminal block, text insertion (POS/ATM)
RS-485 Serial Port	Terminal block, telemetry control, remote control keyboard (programmable)
IR Remote Control Port	Remote Control
USB Ports	2 x USB 2.0 (5V, less than 0.5A)

Storage	
Internal Storage	6 SATA2 bays
External Storage	2 eSATA Ports
Clip Copy Device	USB Storage Device (USB HDD, USB Memory, etc.)



Some hard disks may not function properly when mounted on to this product. Refer to the compatibility chart below before mounting any additional hard disk on to the product. Hard disk compatibility chart is subject to change without notice. Contact your retailer for the latest compatibility chart.

Storage	Manufacturer	Model	Note
1TB	Seagate	ST1000VX001	
	TOSHIBA	DT01ACA100	
2TB	Western Digital	WD20PURX-64P6ZY0	
	TOSHIBA	DT01ACA200	
	Seagate	ST2000VX003	
3TB	Western Digital	WD30PURX-64P6ZY0	
	TOSHIBA	DT01ACA300	
	Seagate	ST3000VX006	
4TB	Western Digital	WD40PURX-64GVNY0	
	Seagate	ST4000VX000	
6TB	Western Digital	WD60PURX-64T0ZY0	



IDIS Co., Ltd.

For more information, please visit at
www.idisglobal.com